Uconnect 6.5 NAV

Owner's Manual Supplement

TABLE OF CONTENTS

SECTION		PAGE
1	SAFETY GUIDELINES	3
2	INTRODUCTION	9
3	ALL ABOUT UCONNECT ACCESS	13
4	RADIO MODE	81
5	MEDIA MODE	97
6	UCONNECT PHONE	105
7	UCONNECT 6.5A/6.5AN VOICE RECOGNITION QUICK TIPS	133
8	NAVIGATION	143

SAFETY GUIDELINES

1

CONTENTS

- SAFETY GUIDELINES 4
- CYBERSECURITY 7

SAFETY GUIDELINES

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Ensure that all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is necessary, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

Safe Usage Of The Uconnect System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.

- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

NOTE: Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

Touchscreen

- **Do NOT attach any object to the touchscreen, doing so can result in damage to the touchscreen.**
- Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Increase the separation between the equipment and receiver. - Consult an authorized dealer or an experienced radio technician for help.

Safety Information

Exposure To Radio Frequency Radiation

The radiated output power of this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 8 inches (20 cm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If

you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

CYBERSECURITY

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

WARNING!

- **It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.**
- **ONLY insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.**
- **As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.**

NOTE:

- FCA or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
  - Routinely check www.driveuconnect.com/software-update to learn about available Uconnect software updates.
  - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to "Onboard Diagnostic System (OBD II) Cybersecurity" in "Getting To Know Your Instrument Panel" in your Owner's Manual on the DVD.

INTRODUCTION

CONTENTS

■ Uconnect 6.5AN SYSTEM 10

Uconnect 6.5AN SYSTEM



1 — DISPLAY ON/OFF

Push the DISPLAY ON/OFF button located on the faceplate to turn the display ON or OFF.

2 — SETTINGS

Push the SETTINGS button located on the faceplate to display the list of available settings.

3 — BACK

Push the BACK button to return to a previous menu or screen.

4 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

5 — MORE

Push the MORE button located on the faceplate to access additional options such as:

- Trip
- Settings
- Clock
- APPS

6 — PHONE

Push the PHONE button to access the Uconnect Phone feature.

7 — NAV

Push the NAV button located on the faceplate to activate the Navigation feature.

8 — MEDIA

Pushing the MEDIA button will allow you to switch to Media Mode (USB/iPOD, AUX, Bluetooth).

9 — RADIO

Push the RADIO button located on the faceplate to enter Radio Mode. The different tuner modes; AM, FM and SXM (If Equipped) can be selected by pushing the corresponding buttons in the Radio Mode.

10 — ON/VOLUME

Rotate the rotary knob to adjust the Volume. Push the ON/VOLUME button to turn on the system. Push the ON/VOLUME button a second time to turn off the system.

11 — MUTE

Push the MUTE button for activation/deactivation of the volume.

ALL ABOUT UCONNECT ACCESS

CONTENTS

- ■ INTRODUCTION TO UCONNECT ACCESS . . .15
  - □ What Is Uconnect Access? 15
  - □ Included Trial Period For New Vehicles 19
  - □ Features And Packages 20
- ■ GETTING STARTED WITH UCONNECT ACCESS 20
  - □ Registration 20
  - □ Download The Uconnect Access App 21
  - □ Purchasing Apps And WiFi Hotspot For Your Vehicle 22
  - □ Using Mopar Owner Connect 22
- ■ USING UCONNECT ACCESS 24
  - □ Getting Started With Apps 24
  - □ 9-1-1 Call 26
  - □ Roadside Assistance Call 32
  - □ Yelp 34
  - □ Security Alarm Notification 38
  - □ Stolen Vehicle Assistance 41
  - □ WiFi Hotspot 44
  - □ Voice Texting 50

- Remote Door Lock/Unlock 57
- Remote Vehicle Start 61
- Remote Horn And Lights 65

■ MAINTAIN MY UCONNECT ACCESS ACCOUNT 68

- How To Remove My Uconnect Access Account 68
- Adding Vehicles To My Uconnect Access Account 69

■ UCONNECT CARE AND FAQs 69

- Uconnect Care Business Hours: 69
- Safety Guidelines 75
- Safe Usage Of The Uconnect Access System . . .75

■ DEVICE CONNECTION AND AUDIO TIPS WITH UCONNECT 78

INTRODUCTION TO UCONNECT ACCESS

To unlock the full potential of Uconnect Access in your vehicle, you first need to register with Uconnect Access.

WARNING!

- **ALWAYS obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1 and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.**
- **ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

NOTE: Your vehicle may be transmitting data as authorized by the subscriber.

What Is Uconnect Access?

Uconnect Access enhances your ownership and driving experience by connecting your vehicle with a 3G cellular connection. Uconnect Access is available only on equipped vehicles purchased within the continental United States, Alaska and Hawaii. Services can only be used where coverage is available, see coverage map for details.

For a complete list of Uconnect Access services, please visit DriveUconnect.com.

Uconnect Access provides:

- The ability to remotely lock/unlock your doors and start your vehicle (if equipped) from virtually anywhere, with the Uconnect Access App, the Mopar Owner Connect website (moparownerconnect.com) and Uconnect Care.
- The functionality to turn your vehicle into a WiFi Hotspot on demand.
- Theft Alarm Notification via text or email.
- Yelp to help find great places, businesses and other locations when you need them.
- Voice Texting so you can compose, send and receive text messages with your voice while keeping your hands on the wheel.
- Stolen Vehicle Location Assistance so Uconnect Care can help locate your vehicle if it is ever stolen.

Before you drive, familiarize yourself with the easy-to-use Uconnect System.

1. **The ASSIST And 9-1-1 Buttons On The Overhead Console**

   The ASSIST Button is used for contacting Roadside Assistance, Vehicle Care and Uconnect Care. The 9-1-1 button connects you directly to emergency services.

2. **The Uconnect "Apps" Button**

   This is where you can begin registration for Uconnect Access, find the apps and purchase WiFi Hotspot on demand.

3. **The Uconnect Voice Command And Uconnect Phone Buttons On Your Steering Wheel**

   The buttons let you use your voice to give commands, make phone calls, send and receive text messages hands-free, enter navigation destinations and control your radio and media devices.

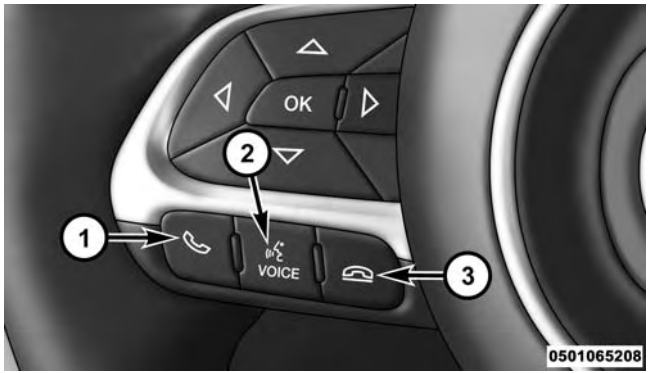

1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
2 — Push To Begin Radio, Media, Navigation And Apps (Voice Recognition)
3 — Push To End Call

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

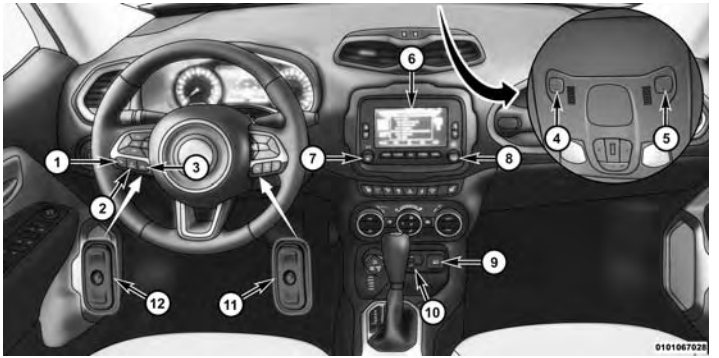

1 — Uconnect Phone Button
2 — Uconnect Voice Command Button
3 — Uconnect Phone Hang Up Button
4 — 9-1-1 Button
5 — ASSIST Button
6 — Uconnect Access 6.5AN Radio
7 — On/Off Button — Volume Knob
8 — Tune or Scroll Knob/Browse or Enter Button
9 — Front Power Outlet
10 — Media Hub-may include USB port, SD Card and Audio Jack
11 — Steering Wheel Audio Controls (Right Rear Surface of Steering Wheel)
12 — Steering Wheel Audio Controls (Left Rear Surface of Steering Wheel)

Included Trial Period For New Vehicles

Your new vehicle may come with an included trial period for use of the Uconnect Access Services starting at the date of vehicle purchase. To activate the trial, you must first register with Uconnect Access. Once registered, Uconnect Access customers can purchase additional services and Apps over the lifetime of their vehicle ownership.

Included Trial on New Vehicles ONLY	
Radio	**Uconnect 6.5AN**
Radio Sales Code	RA4
Trial Period	12 months of the Advantage Package

There are a few quick ways for you to identify your radio. For a more complete description, please refer to the User Guide in your glove box or visit DriveUconnect.com.

- The Uconnect 6.5AN features a large 6.5 inch full color touchscreen.
- The Uconnect 6.5AN will have the HD Radio icon when listening to FM or AM stations. The icon will be lit when it is receiving an HD Radio signal (not all stations currently broadcast an HD Radio signal).



Features And Packages

After the trial period, you can subscribe to continue your service by visiting the Uconnect Store located within the Mopar Owner Connect website (moparownerconnect.com). If you need assistance, you can also call Uconnect Care at:

1-855-792-4241

For the latest information on packages and pricing information, visit DriveUconnect.com.

GETTING STARTED WITH UCONNECT ACCESS

Registration

To unlock the full potential of Uconnect Access in your vehicle, you first need to register with Uconnect Access.

1. Push the ASSIST button located in the overhead console.

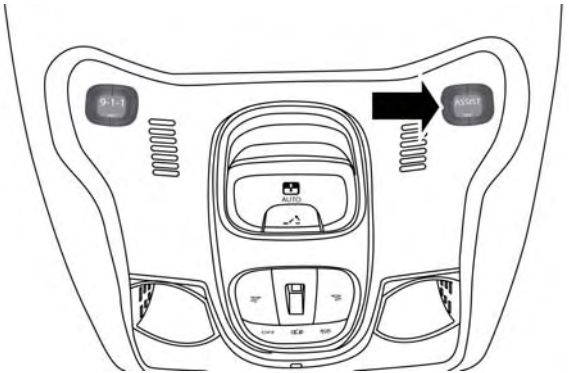

2. Press the "Uconnect Care" button on the touchscreen.
3. A helpful Uconnect Care Agent will register your vehicle and handle all of the details.

Signing up is easy! Simply follow the steps above. Or, press the "Apps" button on the touchscreen to "Register By Web" to complete the process using your wireless device or computer.

For further information please visit DriveUconnect.com.

Download The Uconnect Access App

You're only a few steps away from using remote commands and playing your favorite music in your vehicle.



Mobile App

To link your internet radio accounts:

1. Download the Uconnect Access App from the App Store or Google Play.
2. Open the app and tap Create Account.
3. Enter your email address and click Next.
4. Once your email address is verified, enter a password and full name to create an account.

NOTE: Once you download the App to your compatible mobile device, you will also be able to start your vehicle and lock/unlock its doors from virtually anywhere. For further information please visit DriveUconnect.com.

Purchasing Apps And WiFi Hotspot For Your Vehicle

Apps and WiFi Hotspot can be purchased from the Uconnect Store from within your vehicle, and online at the Mopar Owner Connect website moparownerconnect.com. You must first register and set up a Uconnect Payment account.

Using Mopar Owner Connect

The Mopar Owner Connect website moparownerconnect.com provides you with all the information you need, all in one place. You can track your service history, find recommended accessories for your vehicle, watch videos about your vehicle's features, and easily access your user guides and manuals. It is also where you can manage your Uconnect Access account. This section will familiarize you with the key elements of the website that will help you get the most of your Uconnect Access system.

- **Your Vehicle(s):**

  Images are placed here to represent the FCA US LLC vehicles (Chrysler, Jeep, Dodge, Ram and FIAT) you own. If a vehicle you own is not shown here, click on the "Add New Vehicle" button. Likewise, if a vehicle is shown that you no longer own click on the "Edit Profile" to manage your account.

- **Edit Profile:**

  To manage the details of your Uconnect Access account, such as your contact information, password and PIN, click on the "Edit Profile" button to access the details of your account.

- **Shop:**

  To purchase a WiFi hotspot and renew your subscription to a package, click on the "Shop" tab, then go to the Uconnect Store to make your purchase.

- **Connected Vehicle:**

  This statement will indicate which vehicle's you own that are equipped with the Uconnect Access system. Other vehicles you own may not have Uconnect Access and will indicate that it is a non-Uconnect Access Vehicle.

- **Remote Services:**

  For vehicles with an active Uconnect Access subscription, press one of these icons and enter your four-digit Uconnect Security PIN to command your vehicle to remotely start, lock/unlock doors or sound the horn and lights.

- **Subscription Status:**

  Refer to this section to quickly see if you are currently subscribed to remote services.

- **Uconnect Access App:**

  This is where you can enter the mobile phone number for your compatible device to download the Uconnect Access App. Device compatibility can be verified at UconnectPhone.com. For more details, see the section labeled Download the Uconnect Access App.

- **Learn & Use:**

  Click on the "Learn & Use" tab to find user guides and other information about your vehicle. More specifically, there is a dedicated Uconnect Access tab in this section to learn all about your connected vehicle capabilities.

Editing Your Notifications

Notifications are an important element of your Uconnect Access Account. For example, any time you use your remote services (such as Remote Door Unlock), or if your security alarm is set off, you can elect to receive a text

message and/or E-mail to notify you of the event. To set up the notifications, please follow these instructions.

1. Log on to moparownerconnect.com
2. Click the "Edit Profile" button in the upper-right corner of the page.
3. Click the Uconnect Notifications tab on the left side of the page.
4. If you have more than one vehicle with Uconnect Access, please select which vehicle you want to manage notifications for using the drop down menu.
5. You can enter up to five mobile phone and/or email addresses to your notifications, and you can customize which ones receive the types of messages.
6. If you add a mobile phone number, you will receive a confirmation text message asking to confirm and receive vehicle notifications. If you are OK with this, reply to the text message saying "yes" (message and data rates may apply, please see your mobile phone provider for details). If you have questions, text "HELP" in your reply.

USING UCONNECT ACCESS

Getting Started With Apps

Applications (Apps for short) in your Uconnect Access system are designed to deliver the features and services that you want. There are two basic categories:

- **Built-In Apps** — uses the built-in Cellular Network on your Uconnect 6.5AN radio.

Get started with your Uconnect Access Apps by pressing the Uconnect "Apps" button on the touchscreen. Available Apps and features are organized by the tabs on the left of the screen.

- **Favorite Apps** — this is the default screen when you first press the "Apps" button on the touchscreen, and is a good place to put the Apps you use most frequently. To make an App a "favorite," press the "Settings" button on the touchscreen to the right of the App and select "Make a favorite."
- **All Apps** — all of your available Apps will reside in the "All Apps" folder.
- **Quit Apps** — press this tab to see which Apps are currently running.

NOTE: Most Uconnect Access features do not require that you have a compatible device. The Uconnect Access features must have an operable 1X (voice/data) or 3G (data) network connection and you must be registered with Uconnect Access with an active subscription. Only Voice Texting using the Uconnect Access App requires a compatible device to work with your Uconnect Access system.

9-1-1 Call

Access To Emergency Services At The Push Of A Button

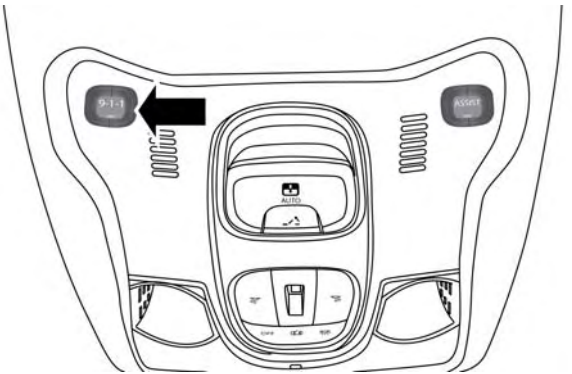

Uconnect Access In-Vehicle Assistance Features

With Uconnect Access, your vehicle has on-board assistance features located in the overhead console designed to enhance your driving experience if you should ever need assistance or support.

Description

9-1-1 Call is a feature that, at the push of a button, can contact emergency services. It's a convenient way to get in contact with a 9-1-1 operator in the event of an emergency. When the connection between the vehicle and a 9-1-1 operator is made, your vehicle will automatically transmit location information to the 9-1-1 operator.

How It Works

1. Push the "9-1-1" Call button; the indicator light will turn green indicating a call has been placed.

NOTE: In case the "9-1-1" Call button is accidentally pushed, there is a 6 second delay before the 9-1-1 call is placed. The system will verbally alert you that a call is about to be made. To cancel the 9-1-1 Call connection, push the "9-1-1" Call button or press the "Cancellation" button on the Phone touchscreen.

2. Once a connection between the vehicle and a 9-1-1 operator is made, the 9-1-1 Call system will transmit the following important vehicle information to a 9-1-1 operator:
   - Indication that the occupant placed a 9-1-1 Call.
   - The vehicle brand.
   - The last known GPS coordinates of the vehicle.
3. You should be able to speak with the 9-1-1 operator through the vehicle audio system to determine if additional help is needed.

If a connection is made between a 9-1-1 operator and your vehicle, you understand and agree that 9-1-1 operators may, like any other 9-1-1 call, record conversations and sounds in and near your vehicle upon connection.

9-1-1 Call System Limitations

Vehicles sold in Canada and Mexico **DO NOT** have 9-1-1 Call system capabilities. 9-1-1 or other emergency line operators in Canada and Mexico may not answer or respond to 9-1-1 system calls. If the 9-1-1 Call system detects a malfunction, any of the following may occur at the time the malfunction is detected.

- The 9-1-1 light will continuously be illuminated red.
- The screen will display the following message "Vehicle phone requires service. Please contact your dealer."

- An In-Vehicle Audio message will state "Vehicle phone requires service. Please contact your dealer."

Even if the 9-1-1 Call system is fully functional, factors beyond FCA US LLC control may prevent or stop 9-1-1 Call system operation. These include, but are not limited to, the following factors:

- The ignition key has been removed from the ignition and the delayed accessories mode is active.
- The ignition key is in OFF position.
- The vehicle's electrical systems are not intact.
- The 9-1-1 Call system software and/or hardware is damaged during a crash.
- The vehicle battery loses power or becomes disconnected during a vehicle crash.
- 1X (voice/data) or 3G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed.
- Equipment malfunction at the 9-1-1 operator facility.
- Operator error by the 9-1-1 operator.
- Wireless network congestion.
- Weather.
- Buildings, structures, geographic terrain, or tunnels.

If your vehicle loses battery power for any reason (including during or after an accident) the 9-1-1 Call System, among other vehicle systems, will not operate.

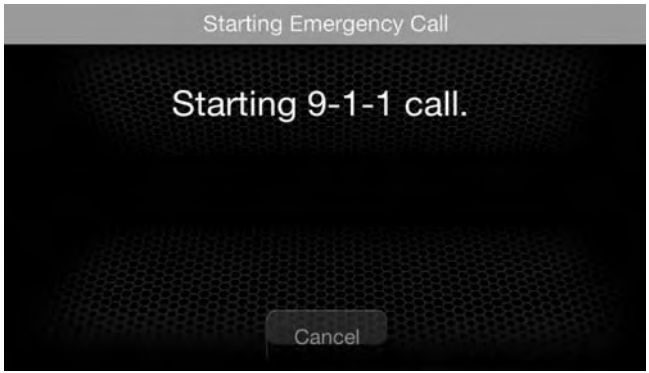

Requirements

- This feature is available only on vehicles sold in the U.S.
- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must be in range of a usable and authorized cellular signal.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.

WARNING!

- **Never place anything on or near the vehicle's wireless and GPS antennas. You could prevent wireless and GPS signal reception, which can prevent your vehicle from placing an emergency call. Wireless and GPS signal reception is required for the 9-1-1 Call system to function properly.**

(Continued)

WARNING! ***(Continued)***

- **Ignoring the Overhead Console light could mean you will not have 9-1-1 Call services. If the Rear-view Mirror light is illuminated, have an authorized dealer service the 9-1-1 Call system immediately.**
- **The Occupant Restraint Controller (ORC) turns on the Air Bag Warning Light on the instrument panel if a malfunction in any part of the air bag system is detected. If the Air Bag Warning Light is illuminated, the air bag system may not be working properly and the 9-1-1 system may not be able to send a signal to a 9-1-1 operator. If the Air Bag Warning Light is illuminated, have an authorized dealer service your vehicle immediately.**

(Continued)

WARNING! ***(Continued)***

- **If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from a 9-1-1 operator. All occupants should exit the vehicle immediately and move to a safe location.**
- **The 9-1-1 Call system is embedded into the vehicle's electrical system. Do not add any aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the 9-1-1 Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. IF YOUR VEHICLE LOSES**

(Continued)

WARNING! *(Continued)*

POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT) THE UCONNECT FEATURES, APPS AND SERVICES AMONG OTHERS WILL NOT OPERATE.

FAQs

1. **What Happens If I Accidentally Push The 9-1-1 Button?** You have 6 seconds after pushing the 9-1-1 button to cancel the call. To cancel the call, either push the "9-1-1" button again, or press the "cancel" button on the in-vehicle touchscreen.
2. **What Type Of Information Is Sent When I Call 9-1-1 From My Vehicle?** Certain vehicle information, such as make and model, is transmitted along with last known GPS location. Also note that 9-1-1 operators may record conversations and sounds within your vehicle once a connection is made, and that by using the service you consent to having this information shared.
3. **When Could I Use The 9-1-1 Button?** You can use the 9-1-1 button to make a call if you or someone else needs emergency assistance.

Roadside Assistance Call

Easy Call To Roadside Assistance 24/7 Using Assist Button

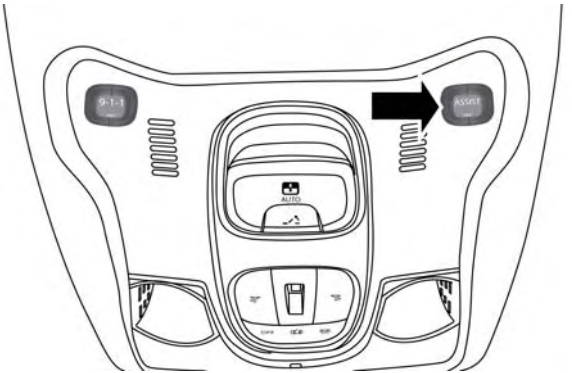

Uconnect Access In-Vehicle Assistance Features

With Uconnect Access, your vehicle has on-board assistance features designed to enhance your driving experience if you should ever need assistance or support.

Description

Vehicles equipped with the Uconnect Access system feature will contain an ASSIST button. Once the vehicle has been registered and is subscribed to the Advantage Package, the ASSIST button can connect you directly to one of three important care centers for support.

- **Roadside Assistance** — If you get a flat tire, or need a tow, you'll be connected to someone who can help anytime. Additional fees may apply. (see the Disclaimers section below for more detail).
- **Uconnect Care** — In vehicle support for Uconnect Access System, Apps, and Features.

- **Vehicle Care** — Total support for your FCA US LLC vehicle.

How It Works

You or someone in the vehicle simply presses the ASSIST button located in the overhead console and you will be presented with your ASSIST options. Make your selection by pressing the screen.

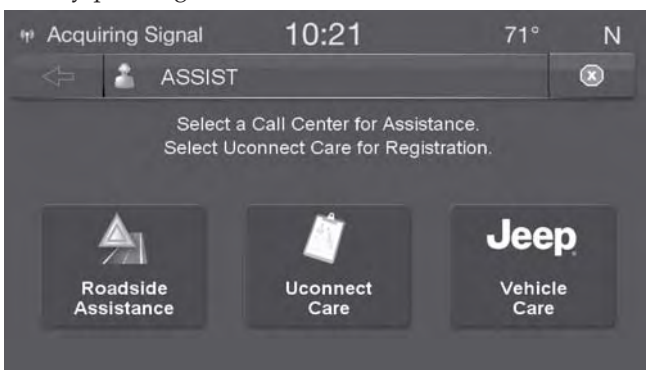

Requirements

- This feature is available only on vehicles sold in the US.
- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must be in range of a usable and authorized cellular signal.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.

Disclaimers

If Roadside Assistance is provided to your vehicle, you agree to be responsible for any additional roadside

assistance service costs that you may incur. In order to provide Uconnect Services to you, we may record and monitor your conversations with Roadside Assistance, Uconnect Care or Vehicle Care, whether such conversations are initiated through the Uconnect Services in your vehicle, or via a landline or mobile telephone, and may share information obtained through such recording and monitoring in accordance with regulatory requirements. You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.

FAQs

1. **What Is The Phone Number For Roadside Assistance?** The phone number is 800-521-2779.

NOTE: Some Apps are suspended while an Assist call is active

2. **If I Am Subscribed To Uconnect Access, Does It Cover Towing Or Other Expenses Incurred By Using FCA US LLC Roadside Assistance?** No, however your new vehicle may include Roadside Assistance services.

Yelp

Looking for a burrito joint that is open? A boutique to buy a new pair of jeans? Yelp is here to help. Use Yelp to search for places to eat, shop, relax and play.

Description

Yelp is a familiar, widely used website and mobile app that connects people to great local businesses. Now with Uconnect Access, Yelp has been adapted for your vehicle, and on the go capability. Yelp gives you the ability to search for a Point of Interest (POI) or desired destination using either pre-defined search categories, or custom

searches, using keywords like "tacos." Searching can be done by voice recognition or by using the touchscreen keypad.

Here is what Yelp can do for you while you are on the road:

- Deliver a list of up to 20 results, prioritizing by best match, by distance or rating.
- Provide up-to-date search listings (pulling the latest information from the cloud).
- The live and local search engine will scan 12 categories and millions of POIs to provide drivers with a local guide for real word-of-mouth recommendations.
- With one press, select from the list to find location address, phone number, user ratings, hours of operation (if available) and price ratings (if available).
- The ability to call the selected POI directly (a phone must be paired via Bluetooth), or have the address immediately sent to the navigation system for routing (if equipped).

How It Works

1. **Using the touchscreen**, launch Yelp by pressing All Apps > Yelp.



OR

Using voice recognition, push the Voice Recognition button and say "Launch Yelp."



0501065227

Give It A Try!

1. Push the Voice Recognition button on the steering wheel and say "Launch Yelp."
2. Push the Voice Recognition button on the steering wheel and say "Yelp Search."
3. Uconnect will prompt you to say something like, "car wash." After the beep, say "restaurants."
4. The Uconnect system will link out to the cloud to do your Yelp search, and depending on your search request, this may take up to 30 seconds.
5. Using the touchscreen, select a restaurant from the list of search results.
6. Navigate to the location by pressing "Go Now" (if equipped with navigation).

NOTE: Save your destination to Favorites. To find it again go to Nav > Where to > Favorites.

How To Add And Delete Search Categories

Yelp provides the ability to save custom search categories by first initiating the search, then pressing the star. To

delete a search category, select it, and press the star. A confirmation prompt will appear to confirm. Create up to 36 custom search categories!

Requirements

- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must be in range of a usable and authorized cellular signal (indicated by the signal strength bars on the "Apps" button on the bottom right hand side of the touchscreen).
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Vehicle must be powered in the ON/RUN or ACC (Accessory) position with a properly functioning electrical system.
- Vehicle must have onboard navigation to use **Go Now**.
- Mobile device must be paired with Bluetooth and connected to call a POI directly.

Safety Information

WARNING!

- **ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

Tips And Shortcuts

- To improve your search results, use single search terms like "coffee" rather than multiple words, which may deliver mixed results, for example, "home improvement and gardening stores."
- Press the "microphone" on the touchscreen to use voice commands.
- If you wish to cancel a search request, press "Cancel."
- To learn more about a listing, press the line that appears on the display details such as the address, phone number and hours of operation (if applicable).
- Sort results by Best Match, Rating or Distance (default is Best Match).
- The Rating tab will re-sort your search based on ratings submitted by everyday users to Yelp's online database.
- Distance will sort by the closest POI near you.
- To bypass the voice prompts push the Voice Recognition button a second time to barge in and state your desired command.
- To exit Yelp, press the "X" (close) button in the upper right corner of the touchscreen.

Security Alarm Notification

Notifies you via email or text message (SMS) when the vehicle's factory-installed theft alarm system has been set-off.

Description

The Theft Alarm Notification feature notifies you via email or text message (SMS) when the vehicle's factory-installed theft alarm system has been set-off. You've probably seen this before, a vehicle's alarm goes off in a

parking lot or out on the street, and the owner is nowhere to be found. With Theft Alarm Notification your vehicle will alert you of the situation.

Should you receive a notification that your theft alarm has been set-off, please react with caution. There are a number of reasons why your alarm may have been triggered, one of which could be that your vehicle was stolen. If so, please see the details of the Stolen Vehicle Assistance service below.

How It Works

Theft Alarm Notification can send you an email or text message (SMS) should the alarm go off. The following instructions will help you manage your notifications.

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.
   - If you forgot your username or password, links are provided on the website to help you retrieve them.
2. Once logged in you will find yourself on the Dashboard. Click on the "Edit Profile" button in the upper-right corner of the page.
3. Click on the "Notifications" tab on the left side of the page.
4. If you have more than one vehicle with Uconnect Access, please select which vehicle you want to manage notifications for using the drop down menu.
5. You can enter up to five mobile phone and/or email addresses to your notifications, and you can customize which ones receive the types of messages.

6. You will receive a confirmation text message, asking to confirm and receive vehicle notifications. If you are ok with this, reply to the text message saying "yes" (message and data rates may apply, please see your mobile device provider for details). If you have questions, text "HELP" in your reply.
7. You're all set. Should your theft alarm go off, a notification(s) will be sent to the number(s) and/or email(s) you provided.

Requirements

- Vehicle must be properly equipped with the Uconnect Access System and a factory installed Theft Alarm system.
- Your vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- Owner must properly set-up notification to have the Theft Alarm Notification sent to an appropriate mobile device or email account.

CAUTION!

In the event your theft alarm is activated, use caution and evaluate the situation from a safe distance. If any unauthorized or suspicious person is near or inside of your vehicle, immediately contact the police. Do not do anything that could jeopardize your safety or the safety of those around you.

FAQs

1. **What do I do if my Theft Alarm goes off?** In the event your theft alarm is activated, use caution and evaluate the situation from a safe distance. If any unauthorized or suspicious person is near or inside of your vehicle, immediately contact the police. Do not do anything that could jeopardize your safety or the safety of those around you.
2. **How can I change where I receive notifications?** You can manage your notifications by going to the Mopar Owner Connect website (moparownerconnect.com) and log in with your username and password. Once there, you can click on "Edit Profile", then the "Notifications" tab.
3. **Can I receive a text message (SMS) when my Theft Alarm goes off?** Yes. Text messages are a convenient and quick way to receive notifications. You can manage your notifications by going to the Mopar Owner Connect website (moparownerconnect.com) and log in with your username and password. Once there, you can click on "Edit Profile", then the "Notifications" tab to add, remove and edit your notification options.

Stolen Vehicle Assistance

If your vehicle is ever stolen, this App (with your permission) can provide its location to the law enforcement to help them track it down.

Description

If your vehicle is stolen, contact local law enforcement immediately to file a stolen vehicle report. Once this report has been filed with law enforcement and you have also notified Uconnect Care that you have filed the report, Uconnect Care can help locate your vehicle. The Uconnect Care Agent will ask for the stolen vehicle report number issued by local law enforcement. As long as your vehicle has an operable 1X (voice/data) or 3G (data) network connection, the Uconnect Care Agent may be

able to locate the stolen vehicle and work with law enforcement to help recover it. The Vehicle must have an operable 1X (voice/data) or 3G (data) network connection and must be registered with Uconnect Access with an active subscription that includes the applicable feature (Vehicle must be within the United States, have network coverage and must be registered with Uconnect Access with an active subscription that includes the applicable feature).

Stolen Vehicle Assistance is a secure process that can only be done with your permission. Law enforcement gets involved only after you file a stolen vehicle report with them.

How It Works

1. If your vehicle is stolen, contact local law enforcement as soon as possible. They will work with you to file a stolen vehicle report.
2. Next, inform Uconnect Care that your vehicle has been stolen. Uconnect Care can be reached by calling:

   1-855-792-4241

   The Uconnect Care Agent will ask for the stolen vehicle report number (as issued by your local law enforcement). If you have downloaded the Uconnect Access App, you can push the "Operator" button on your device and select "Uconnect Care" to make the call.
3. Uconnect Care will authenticate that you are the owner of the vehicle and contact the law enforcement with whom you filed the stolen vehicle report.
4. Uconnect Care will work with your local law enforcement to track and attempt to recover the vehicle. You will be contacted by law enforcement if your vehicle is recovered. While the investigation is ongoing, you should also contact your insurance company to inform it of the situation.

Requirements

- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.

Disclaimers

- No security system is invincible, and vehicle thieves may develop ways to prevent your vehicle from being located.

FAQs

1. **What to do if my vehicle is stolen?** First, call local law enforcement as soon as possible. They will work with you to file a stolen vehicle report. Then call Uconnect Care at:

   1-855-792-4241

   and inform Uconnect Care that your vehicle has been stolen and that you have filed a stolen vehicle report with law enforcement. Uconnect Care will help you through the process.

2. **Can someone track my vehicle?** To ensure your privacy, and the privacy of others using your vehicle, you must involve local law enforcement to have Uconnect locate your vehicle. This helps to ensure that someone is not tracking your vehicle for purposes other than at your request to locate it in the event it is stolen.

3. **How will I know if my vehicle is recovered?** After you provide the Uconnect Care Agent with the stolen vehicle report, the agent will work together with law enforcement to try to locate your vehicle. If your vehicle is recovered, you will be contacted by law enforcement.
4. **Can Uconnect Access lower my insurance rates?** Some insurance providers offer lower rates on vehicles equipped with systems that can deter auto theft. When shopping for insurance, be sure to inform your insurance provider of your Uconnect Access system (Stolen Vehicle Assistance requires a subscription), to find out if your insurance provider offers a lower rate if your vehicle is equipped with Uconnect access and you have an active subscription.

WiFi Hotspot



Create A 3G WiFi Hotspot For Use In Your Vehicle

Description

WiFi Hotspot is on-demand WiFi + 3G connectivity that's built-in and ready to go whenever you are. Once your vehicle is registered for Uconnect Access, you can purchase a WiFi Hotspot subscription at the Uconnect Store. After you've made your purchase, turn on your signal and connect your devices.

WARNING!

NEVER use the WiFi Hotspot if you are driving the vehicle. Failure to do so may result in an accident involving serious injury or death.

- Enables all your passengers to be simultaneously connected to the web.
- Connect several devices at one time.
- Any WiFi-enabled device — such as a laptop or any other portable enabled media can connect over your private in-vehicle network.
- A high-speed, secured connection lets anyone on your private network access the Web — great for working and relaxing.

How It Works

The WiFi Hotspot feature provides the vehicle passengers with an internet access hot spot in the vehicle, using the radio as an access point. The hot spot will allow WiFi enabled in-vehicle devices (such as a laptop or any other portable enabled media device) to wirelessly connect to the internet.

Give it a Try!

1. Purchase a subscription to the WiFi Hotspot feature for a day, a week, or a month. You can buy WiFi Hotspot in one of two ways:
   - From your in-vehicle touchscreen (Apps > All Apps > Uconnect Store)
   - From the Mopar Owner Connect website (moparownerconnect.com) > Shop > Uconnect Store.

NOTE: You must set up your Uconnect Payment Account on the Mopar Owner Connect website and establish a Uconnect Payment PIN to purchase WiFi Hotspot.

2. After purchasing WiFi Hotspot, it will be enabled/ turned on in your vehicle. The WiFi Hotspot App can be found on your in-vehicle touchscreen by selecting Apps > All Apps > WiFi Hotspot.



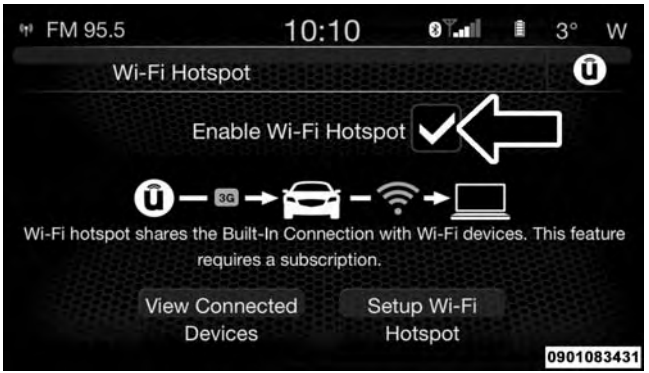

3. **WiFi Hotspot** should be turned on after purchasing a subscription. To disable WiFi Hotspot, simply press to uncheck the box to the right of the App (this feature is available while the vehicle is in motion).

   Optional: Give your hot spot a unique name by pressing Hotspot Name (key pad is not available while vehicle is in motion).



4. From your in-vehicle touchscreen, select the appropriate in-vehicle network and the desired security level setting. Each security level has different pass phrase constraints. Change the security level setting by selecting the checkbox for any of the following security settings.
   - WPA2/WPA — "WiFi Protected Access" – This is the default security and can be changed by pressing WiFi Hotspot > View/Edit Pass phrase.
   - WEP — "Wired Equivalent Privacy" – Pass phrase must be 13 characters long.
   - None — No security, will not prompt you for a pass phrase, when you attempt to connect to WiFi Hotspot.
5. From your Wi-Fi enabled device (laptop, tablet, etc.).
   - Search for and select the Uconnect hotspot in the settings of your device.
   - Type the network security key (this is called "pass phrase" and is found in Apps > All Apps > WiFi Hotspot > View/Edit Pass phrase.)
   - Click OK.

You are now connected!

NOTE: Refer to your device's owner's manual for specific information related to your device.



0401034616



0401020364

Requirements

- Vehicle must be properly equipped with the Uconnect 6.5AN.
- Vehicle must be in active and usable range of authorized 3G wireless signal (802.11G, 54 Mbps).

- Vehicle must be registered with Uconnect Access and have an active WiFi Hotspot subscription (WiFi Outpost will be turned off if there is no active subscription).
- Vehicle must be in the ON/RUN or ACC (Accessory) position and have a properly operating electrical system for any of the in-vehicle Uconnect features to function.

Disclaimers

- Factors affecting the performance of WiFi Hotspot include: cellular network signal strength and quality, time of day, number of channels used by the service provider, type of connection, number of clients using WiFi Hotspot and client device.
- WiFi Hotspot does not enable direct communication between multiple in-vehicle devices.
- While the vehicle is in motion it is possible to enable or disable the WiFi Hotspot. Simply press to check or uncheck the box to the right of the App.
- For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion. The key pad is not available while the vehicle is in motion.

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Voice Texting

Add Free-Form Voice Texts To Your Voice Text Reply Feature

Description

This Voice Texting enhances the Voice Text Reply feature built into your Uconnect Access 6.5AN radio. While Voice Text Reply provides 18 pre-defined messages you can send, Voice Texting lets you create and send nearly any message you want. Just speak your message as if you were talking to the recipient, and the Uconnect Access voice-texting technology will convert your voice into a text message.

Voice Texting and Voice Text Reply features are compatible with many newer Android and Blackberry phones. Before using, determine if your phone has been tested to support Bluetooth "Message Access Profile (MAP)" at UconnectPhone.com. iPhone and some other smartphones do not currently support Bluetooth MAP. Ensure MAP is ON and incoming message notification is enabled.

How It Works

Set Up Your Phone To Work With Voice Texting

After pairing your phone to the vehicle using Bluetooth (see UconnectPhone.com), push the "phone" button on the menu bar of the radio to see the main Phone screen. A minute or so after a compatible MAP enabled phone has been Bluetooth connected to the vehicle; the "messaging" button on the touchscreen will change from gray to white. This is an indicator that Voice Texting will work with your phone. Outgoing voice texts may not be possible. The phone may allow incoming texts only.



Determine if your phone has been tested to support Bluetooth "Message Access Profile" (MAP) at UconnectPhone.com. (Your phone may support Voice Texting even if not found on this website. Check with your phone manufacturer to see if it supports MAP protocol.)

NOTE: If your device supports MAP, then ensure MAP is on and incoming message notification is enabled, (see UconnectPhone.com for device specific instructions).

If a Bluetooth authorization window appears showing your phone requesting permissions, check the box for Always and press Accept.

3

Sending A New Text Message From Radio

1. Push on the steering wheel.
2. Say **"Send text message."**
3. The system will respond "Say the phone number or the full name and the phone type of the contact that you want to send a message to."
4. Dictate message ("I will be home at eight.")
5. When finished dictating, wait for prompt and say **"Send."**

Viewing Or Listening To Incoming Messages

To Listen to a Message from Radio

1. Push the ″Phone″ button on the steering wheel. Say **″Listen to message″**

   OR

   Press the ″Listen″ button on the touchscreen.

Viewing Your Messages

1. Push the “Phone” button on the steering wheel.



2. Say **“View message.”**

   OR

   Press “View” on the in-vehicle touchscreen.

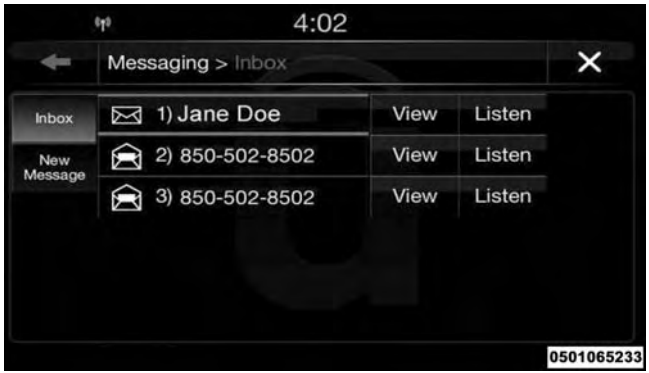

Contact names or phone numbers of the message sender appears in a list along with **View** and **Listen** buttons on the touchscreen.

Viewing A Specific Message

1. Press "View" next to the contact name/phone number of the message you want to be displayed.

   OR

   Say **"Show message n"**

   n = the number of the message

Listening To A Message

1. Press "Listen" on the touchscreen or push the "Phone" button on the steering wheel and say "Listen," the Uconnect system will read the received text message over the vehicle audio system.

Barge-In

Barge-in is a feature that enables a user to say a valid command without waiting for the system to finish speaking. When the system is "speaking" you can push the button on the steering wheel and say a valid command.

For example, if the system is explaining all of the options available after dictating a text message, at any time the user can press ″Listen″ on touchscreen or push the ″Phone″ button on the steering wheel and say ″Listen.″

Requirements

- (MAP may not be compatible with Apple iPhones (pre iOS 6). Apple iOS 6 supports receiving text messages, but does not support sending text messages).
- Available on vehicles sold in the United States with a Uconnect 6.5AN (sales code RA4) radio equipped with Uconnect Access.
- Vehicle must be registered with an active Uconnect Access Advantage trial or paid subscription for free form text response to work.
- Vehicle and phone must be in range of the cellular network.
- Customer must have a properly paired and connected cellular device with Bluetooth Message Access Profile (MAP) enabled. Voice Texting is compatible with many newer BlackBerry and Android mobile devices. Apple iOS 5 and earlier does not support MAP so iPhones will not send free form text messages. Apple iOS 6 supports receiving, not sending text messages. To check if your device has been tested to be compatible please visit UconnectPhone.com.

Disclaimers

- Not all Voice Texting features may be available on your phone.

- Your MAP supported phone must be paired and connected to a compatible Uconnect radio.
- You must have an active cellular connection and be within cellular range to voice text.
- FCA US LLC Uconnect and its affiliates are not responsible for errant text messages.
- Vehicle must be registered with an active Uconnect Access trial or paid subscription.

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

FAQs

1. **Can I still voice text if my phone is not listed?** We are constantly testing phones and updating our compatibility database. If your phone is not listed, you may still be able to pair and connect your MAP supported phone to a compatible Uconnect radio to see if all or most voice texting functions work. Check your phone manufacturer if MAP is supported on your phone.
2. **Can I use voice texting while in my other FCA US LLC vehicle?** The Voice Texting free text response feature is available only on Uconnect 6.5AN (sales code RA4) radios. Other FCA US LLC vehicles do support hands free texting, but only with fixed responses.

3. **My "Messaging" button on the touchscreen is White, but I can only use pre-formatted responses.** The Voice Texting free-form voice response requires a subscription to the Uconnect Access Advantage package. (Some phones will support pre-formatted responses, but not free-form. Refer to UconnectPhone.com for further details.)
4. **Do I have to "train" my Uconnect radio to my voice?** FCA US LLC uses the latest voice recognition engine that provides good recognition without required training. This makes it easier for a passenger to also use the system.
5. **Can a passenger voice text?** Yes, however, voice recognition microphones are optimized for the driver, so the system may have difficulty hearing the passenger; also, the system will use the currently connected phone, so be sure your passenger isn't sending texts to the wrong recipient.
6. **Does Voice Texting work with accents?** Speech isn't perfect. Technology isn't perfect. While FCA US LLC strives to use the latest voice recognition engine, the technology may have difficulty with strong accents.
7. **Can I voice text my vehicle?** The Voice Texting feature allows you to listen to, and reply to text messages (SMS) sent to your portable cellular mobile phone by voice while in your vehicle.
8. **How many pre-formatted replies are there?** You can respond with a set of up to 18 preset outgoing messages such as "I'll call you later." Refer to "Voice Texting" section of this supplement.
9. **Can I use abbreviations and emoticons?** Of course! Just say the name of the most popular emoticon or abbreviation, e.g. smiley, frown, wink, & LOL.

10. **Can I use Text Messaging if the "messaging" button doesn't turn white?** Only MAP compatible phones will work with Text Messaging. If your phone is compatible, the "messaging" light will turn white, after the phone is Bluetooth connected, and you will then be able to do hands free Text Messaging. The system will respond with "Sorry, I didn't understand you" if you push the steering wheel "Phone" button and say a voice command for Text Messaging, when the button isn't active ("white").

Remote Door Lock/Unlock

Lock Or Unlock Your Vehicle From Virtually Anywhere Using Your Computer Or Device App

Description

The Remote Door Lock/Unlock feature provides you the ability to lock or unlock the door on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of three ways:

- Using the Uconnect Access App from a compatible device
- From the Mopar Owner Connect website (moparownerconnect.com)
- Contacting Uconnect Care

If you want, you can set up notifications for your account to receive an email or text (SMS) message every time a command is sent to lock or unlock your doors.

How It Works

Uconnect Access App:

1. Download the Uconnect Access App to a compatible device and login using your username and password.
2. To lock the doors, push the button with the closed lock icon; to unlock the driver's door push the button with the open lock icon.

3. A pop-up screen will appear asking for your Uconnect Security PIN (this is the same 4-digit code established when your registered your Uconnect Access system). Enter the Uconnect Security PIN on the keypad and press "OK."
4. The Uconnect Access App will confirm if your command was sent (or not). Press "OK" to close the pop-up screen.
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will appear on the screen to let you know if the command was received by your vehicle.

Mopar Owner Connect website:

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.

NOTE: If you forgot your username or password, links are provided on the website to help you retrieve them.

2. If you have more than one vehicle registered into the Mopar Owner Connect website (moparownerconnect.com), select the vehicle you want to send the command by clicking on its image along the top.
3. Beneath the image of a vehicle like yours, you will see a row of icons. To lock the doors, click on the closed lock icon; to unlock the driver's door click on the "open lock icon."

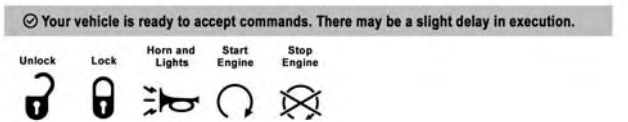

4. You will then be asked to enter your Uconnect Security PIN (this is the same 4-digit code established when your registered your Uconnect Access system). Please enter your Uconnect Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

Uconnect Care:

1. If you need to unlock the doors of your vehicle, contact Uconnect Care by calling:

   855-792-4241

NOTE: The Uconnect Care agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via the Mopar Owner Connect website (moparownerconnect.com) or through the Uconnect Access App on your compatible device.

2. For security purposes, the Uconnect Care agent will verify your identity by asking for your 4-digit Uconnect Security PIN.
3. After providing your Uconnect Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

Requirements

- Vehicle must be properly equipped with the Uconnect Access System.
- Vehicle must have an operable 1X (voice/data) or 3G (data) network connection.
- Vehicle must be registered with Uconnect Access and have an active subscription that includes the applicable feature or App.
- If using the Uconnect Access App to command your vehicle, your device must be compatible and be connected to an operable 1X (voice/data) or 3G (data) network connection.
- An ignition cycle is required for some remote commands such as Remote Vehicle Start and Remote Door Lock/Unlock if following a Remote Horn and Lights activation.

FAQs

1. **How long does it take to unlock or lock the door?** Depending on various conditions, it can take 1–2 minutes or more for the request to get through to your vehicle, although Uconnect is always striving to improve performance.
2. **Which is faster, my Key Fob or the Uconnect Access App?** Your Key Fob will lock/unlock the door quicker, however its range is limited and it can sometimes get misplaced or locked in the vehicle. Your Uconnect Access App comes in handy for these and other situations.
3. **Will my vehicle be safe if I lose my device?** People sometimes lose their devices, which is why security measures have been engineered into the Uconnect Access App. Asking for your username, password and Uconnect Security PIN help to ensure that nobody can get into your vehicle if they happen to find your device.

4. **Why can't all devices use the Uconnect Access App?** The Uconnect Access App has been designed to work on most devices with the Apple and Android operating systems. The capabilities of these devices allows us to remotely command your vehicle. Other operating systems may be supported in the future.
5. **Why is the Uconnect Access App running slow?** The Uconnect Access App relies on a mobile network connection from your device to send commands to your vehicle which must have an operable 1X (voice/data) or 3G (data) network connection. If either your device or your vehicle are in an area with below average coverage, it may take longer to log in and send commands.

Remote Vehicle Start

Use Your Computer Or Wireless Device App To Start The Engine And Warm-Up Or Cool-Down The Vehicle From Almost Anywhere

Description

The Remote Vehicle Start feature provides you with the ability to start the engine on your vehicle, without the keys and from virtually any distance. Once started, the pre-set climate controls in your vehicle can warm-up or cool-down the interior before you have to get in. You can send a request to your vehicle in one of two ways:

- Using the Uconnect Access App from a compatible device.
- From the Mopar Owner Connect website (moparownerconnect.com).

You can also send a command to turn-off an engine that has been remote started. After 15 minutes if you have not entered your vehicle with the key, the engine will shut off automatically.

This remote function requires your vehicle to be equipped with a factory-installed Remote Start system.

If you want, you can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent to remote start or cancel a remote start.

How It Works

Uconnect Access App:

1. Download the Uconnect Access App to a compatible device and login using your username and password.
2. To start the engine, press the "circular arrow", to turn-off an engine that has been remote started press the "cancel" button.
3. A pop-up screen will appear asking for your Uconnect Security PIN (this is the same 4-digit code established when your registered your Uconnect Access system). Enter the Uconnect Security PIN on the keypad and press "OK."
4. The Uconnect Access App will confirm if your command was sent (or not). Press "OK" to close the pop-up screen.
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will appear on the screen to let you know if the command was received by your vehicle.

Mopar Owner Connect website:

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.

NOTE: If you forgot your username or password, links are provided on the website to help you retrieve them.

2. If you have more than one vehicle registered into the Mopar Owner Connect website (moparownerconnect.com), select the vehicle you want to send the command by clicking on its image along the top.
3. Beneath the image of a vehicle like yours, you will see a row of icons. To start the engine, press the "circular arrow", to turn-off an engine that has been remote started press the "cancel" button.
4. You will then be asked to enter your Uconnect Security PIN (this is the same 4-digit code established when your registered your Uconnect Access system). Please enter your Uconnect Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

Uconnect Care:

1. If you need to unlock the doors of your vehicle, contact Uconnect Care by calling:

   855-792-4241

NOTE: The Uconnect Care Agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via the Mopar Owner Connect website (moparownerconnect.com) or through the Uconnect Access App on your compatible device.

2. For security purposes, the Uconnect Care Agent will verify your identity by asking for your 4-digit Uconnect Security PIN.
3. After providing your Uconnect Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

FAQs

1. **How long does it take to remote start my vehicle?** Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle, although Uconnect is always striving to improve performance.
2. **Which is faster, my Key Fob or the Uconnect Access App?** Your Key Fob will remote start your vehicle quicker, however its range is limited. For example, when you are leaving the stadium after the game, you can remote start your vehicle to have the inside comfortable before you even get there.
3. **Will my vehicle be safe if I lose my wireless device?** People sometimes lose their wireless devices, which is why security measures have been engineered into the Uconnect Access App. Asking for your username, password and Uconnect Security PIN help to ensure that nobody can start your vehicle if they happen to find your device.
4. **Can someone drive off with my vehicle using the App?** No. Driving your vehicle still requires the keys to be in the vehicle. The Remote Start feature simply starts the engine to warm-up or cool down the interior before you arrive, you cannot drive away without the keys.
5. **Can I stop a vehicle that is being driven by canceling the engine start command?** No. If a vehicle is driving down the road the cancel Remote Start button will not stop it. It simply cancels or ends a Remote Start of the engine.

6. **Why can't all devices use the Uconnect Access App?** The Uconnect Access App has been designed to work on most devices with the Apple and Android operating systems. The capabilities of these device allows us to remotely command your vehicle. Other operating systems may be supported in the future.

Remote Horn And Lights

Can't Find Your Vehicle In The Parking Lot? Sound The Horn And Flash The Lights On Your Vehicle To Locate It

Description

It is easy to locate a vehicle in a dark, crowded or noisy parking area by activating the horn and lights. It may also help if you need to draw attention to your vehicle for any reason. You can send a request to your vehicle in one of three ways:

- Using the Uconnect Access App from a compatible device.
- From the Mopar Owner Connect website (moparownerconnect.com).
- Contacting Uconnect Care.

If you want, you can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent to turn on the horn and lights.

How It Works

1. Download the Uconnect Access App to a compatible device and login using your username and password.
2. To turn on the horn and lights, press the "trumpet icon." To turn-off the horn and lights, press the "trumpet icon" again.

3. A pop-up screen will appear asking for your Uconnect Security PIN (this is the same 4- digit code established when your registered your Uconnect Access system). Enter the Uconnect Security PIN on the keypad and press "OK."
4. The Uconnect Access App will confirm if your command was sent (or not). Press "OK" to close the pop-up screen.
5. It will take a little while for the command to go through to your vehicle. The time it takes depends on a number of technical conditions.
6. A message will appear on the screen to let you know if the command was received by your vehicle.

Mopar Owner Connect website:

1. Log on to the Mopar Owner Connect website (moparownerconnect.com) using the username and password you used when registering your Uconnect Access system.
   - If you forgot your username or password, links are provided on the website to help you retrieve them.
2. If you have more than one vehicle registered into the Mopar Owner Connect website (moparownerconnect.com), select the vehicle you want to send the command by clicking on its image along the top.
3. Beneath the image of a vehicle like yours, you will see a row of icons. To turn on the horn and lights, press the "trumpet icon." To turn off the horn and lights, press the "trumpet icon" again.

NOTE: A quicker way to turn off your Remote Horn and Lights would be to push the "Panic" button on your Key Fob if you are near the vehicle.

4. You will then be asked to enter your Uconnect Security PIN (this is the same 4-digit code established when your registered your Uconnect Access system). Please enter your Uconnect Security PIN.
5. A message will appear on the screen to let you know if the command was received by your vehicle.

Uconnect Care:

1. If you need to unlock the doors of your vehicle, contact Uconnect Care by calling:

   855-792-4241

NOTE: The Uconnect Care agents are trained to help you with unlocking of your door (for example, in an accidental lock-out). All other Remote Services should be performed via the Mopar Owner Connect website (moparownerconnect.com) or through the Uconnect Access App on your compatible device.

2. For security purposes, the Uconnect Care agent will verify your identity by asking for your 4-digit Uconnect Security PIN.
3. After providing your Uconnect Security PIN, you can ask them to lock or unlock your vehicle. The agent will send a command to your vehicle to get the task done.

NOTE: The Remote Horn and Lights feature is designed to be loud and get noticed. Please keep in mind the surroundings when using this feature.

FAQs

1. **How long does it take to sound my horn and flash the lights?** Depending on various conditions, it can take three minutes or more for the request to get through to your vehicle, although Uconnect is always striving to improve performance.

2. **Which is faster, my Key Fob or the Uconnect Access App?** Your Key Fob will sound the horn and flash the lights quicker; however its range is limited.
3. **Will my vehicle be safe if I lose my wireless device?** People sometimes lose their device, which is why security measures have been engineered into the Uconnect Access App. Asking for your username, password and Uconnect Security PIN help to ensure that nobody can access your vehicle if they happen to find your device.
4. **How do I turn off the horn and lights after I turn them on?** By pressing the "horn icon" a second time on your Uconnect Access App, a second command will be sent to shutoff the horn and lights. Alternatively, if you are close enough to the vehicle you can use the Key Fob to turn off the horn and lights by pressing the red "Panic" button.
5. **Why can't all devices use the Uconnect Access App?** The Uconnect Access App has been designed to work on most devices with the Apple and Android operating systems. The capabilities of these device allows us to remotely command your vehicle. Other operating systems may be supported in the future.

MAINTAIN MY UCONNECT ACCESS ACCOUNT

How To Remove My Uconnect Access Account

To remove your Uconnect Access account or cancel your Uconnect Access subscription go to the Mopar Owner Connect website moparownerconnect.com. On Mopar Owner Connect, go to Uconnect Store, and click on "Remove My Vehicle."

For further assistance call Uconnect Care at 855-792-4241.

Adding Vehicles To My Uconnect Access Account

You can easily add vehicles to your Uconnect Access account online by going to the Mopar Owner Connect website (moparownerconnect.com) > Dashboard > Add a Vehicle. Connected vehicles must follow the secure registration process to be added to an account.

UCONNECT CARE AND FAQs

For additional information about Uconnect Access, push the ASSIST button on the rear view mirror and then select Uconnect Care on your in-vehicle touchscreen to contact Uconnect Care. Your call will be directed to a Uconnect Care agent or held in a queue until an agent is available or go to the Mopar Owner Connect website (moparownerconnect.com).

You can also phone Uconnect Care directly at:

1-855-792-4241

Uconnect Care Business Hours:

Central Time

- Monday through Friday – 7:00 am to 7:00 pm
- Saturday and Sunday – 8:00 am to 4:00 pm

1. **How Do I Register For My Uconnect Access Account?** Press the "Apps" button on the in-vehicle touchscreen, then select Uconnect Registration.
2. **Why Do I Need An Email Address?** Without an email address, customers cannot register for Uconnect Access. Customers need to register so they can subscribe to receive additional services and create a Uconnect Security PIN for remote command requests.

3. **How Do I Create A Uconnect Security PIN?** Set up your Uconnect Security PIN during the registration process. The Uconnect Security PIN will be required to authenticate you when accessing your account via Uconnect Care or performing any remote services such as Remote Door Lock/Unlock, Remote Horn & Lights, or Remote Vehicle Start.
4. **What If I Forgot My Uconnect Security PIN?** If you've already registered and forgot your Uconnect Security PIN, you can reset the pin by selecting Edit Profile on the Mopar Owner Connect website moparownerconnect.com.

   you can also call Uconnect Care at:

   1-855-792-4241
5. **How Do I Create A Uconnect Payment PIN?** Log into the Mopar Owner Connect website moparownerconnect.comwith your username and password. Select Edit Profile > Uconnect Payment Account to create an account (and PIN) (if you have a Uconnect Access equipped vehicle).
6. **What Is A Uconnect Payment PIN?** A Uconnect Payment PIN is a unique 4-digit code that you create to gain access to your payment information – your credit cards, billing address, payment history and more. It is required in order to purchase Uconnect Access packages and Apps.
7. **What If I Forgot My Uconnect Payment PIN?** The next time you are asked for your Uconnect Payment PIN, select "Forgot PIN?" and follow the steps to reset it.

8. **How Do I Update My Uconnect Payment Account Address?** Your Uconnect Payment Account address must be updated online only: Login to the Mopar Owner Connect website moparownerconnect.com, and select Edit Profile > Uconnect Payment Account.
9. **How Do I Update My Uconnect Profile?** Your name, home address, phone number, email address and Uconnect Security PIN can be updated online on the Mopar Owner Connect website moparownerconnect.com.
   a. Log in to the Mopar Owner Connect website moparownerconnect.com then select Edit Profile to edit your personal information.
   b. Make your edits and click "Save."
10. **Can I Try Apps, Features Or Packages Before I Buy Them?** Your new vehicle purchase may have come with an included trial period for certain Apps and services.

    For more information please contact Uconnect Care at:

    1-855-792-4241
11. **Can I Access Every App And Service While Driving?** No, some applications and services are not available while driving. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion (e.g. key pad).
12. **Can I Access The Uconnect Store While I Am Driving?** No, some applications and services are not available while driving. Only use Uconnect applications and services when the vehicle is parked in a safe location.

13. **How Do I Know When A New App, Feature Or Package Is Offered?** Go to Uconnect Store to check for updated features, packages and Apps.
14. **Will I Be Notified When My Subscription Is Expired Or Will It Automatically Renew?** There is no auto-renewal feature currently offered. You can find the expiration dates for all of your App and package subscriptions from your in-vehicle touchscreen, select Apps > Uconnect Store > My Apps.
15. **How Do I Manage My Notification Preferences?** Go to Edit Profile > Uconnect Notifications on the Mopar Owner Connect website moparownerconnect.com.
16. **Do I Receive A Purchase Confirmation?** Yes. You will receive a purchase confirmation email any time you renew your Uconnect Access subscription or purchase WiFi Hotspot service.
17. **How Do I Purchase A Subscription Or WiFi Hotspot?** From your in-vehicle touchscreen:
    a. Select Apps > Uconnect Store.
    b. Choose a package or service.
    c. Follow the steps to enter your Uconnect Payment PIN and complete the process.

    You can also go to the Uconnect Store online at Mopar Owner Connect moparownerconnect.com, select the Shop tab, then Uconnect Store.

    For additional support please contact Uconnect Care at:

    1-855-792-4241
18. **How Do I Update My Credit Card Information?** Login to the Mopar Owner Connect website moparownerconnect.com, and select Edit Profile, then select Uconnect Payment Account.

19. **How Do I Find Out How Much Longer I Have On My Subscription?** From your vehicle touchscreen > select Apps > Uconnect Store > My Apps and choose a subscription to view its expiration date. When your subscription is about to expire you will receive an email notification.
20. **Which Apps Are Included With My Vehicle?** Go to Uconnect Store > My Apps to see Apps currently available on your vehicle.
21. **If I Delete/Remove A Package From My Screen, Does It Cancel My Subscription?** Yes, this removes the subscription of the selected package.
22. **Can I Get A Refund If I Have Not Used The Entire Subscription?** No.
23. **Can I Cancel A Subscription Before It Expires?** Yes, but your subscription will still be active until the expiration date. If you subscribe to another package, the new subscription will start immediately.
24. **Do I Have To Keep My Vehicle On During The App Download Process?** Yes.
25. **How Do I Re-Initiate A Download App If There Was An Error?** If you're having issues with an App you can reinstall it. This returns the App to its original state which usually fixes the problem. This does not affect your Uconnect subscriptions or account information. To reinstall an App from the in-vehicle touchscreen, press Apps > Uconnect Store > My Apps > Settings > Reinstall Apps > Continue.

26. **What Should I Do If I Want To Sell My Vehicle?** Before your vehicle is sold to a new owner, you'll want to remove your account information. This process removes all personal information and returns the Uconnect system to its original factory settings.

    To remove your account information from the Uconnect system contact Uconnect Care at:

    1-855-792-4241

27. **What If I Forgot To Remove My Account Information Before I Returned My Lease Vehicle Or Sold It?** Don't worry – your information is secure.

    Contact Uconnect Care at:

    1-855-792-4241

28. **I Am Trading My Vehicle In. Can I Transfer Apps To My New Vehicle If I Have An Active Subscription?** No.

29. **What will happen if there is not an operable 1X (voice/data) or 3G (data) network connection?** The 9-1-1 and ASSIST buttons will NOT function if you are not connected to an operable 1X (voice/data) or 3G (data) network. Other Uconnect services will only be operable if your Uconnect Access service is active and you are connected to an operable 1X (voice/data) or 3G (data) network.

30. **How will I know if my vehicle is not connected to an operable 1X (voice/data) or 3G (data) network?** The signal strength bars on the "Apps " button on the touchscreen will show a single bar and a prohibition symbol to indicate your vehicle is not connected to an operable 1X (voice/data) or 3G (data) network.

Privacy Practices

For more information on how FCA US LLC and Sprint may use your information, please see the Uconnect privacy policy at driveuconnect.com/privacy/ and the FCA US LLC privacy statement at chrysler.com/universal/privacy.html.

Safety Guidelines

WARNING!

ALWAYS obey traffic laws and pay attention to the road. Some Uconnect Access services, including 9-1-1 and Assist, will NOT work without an operable 1X (voice/data) or 3G (data) network connection.

NOTE: Your vehicle may be transmitting data as authorized by the subscriber.

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use of the system immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

Safe Usage Of The Uconnect Access System

- Read all instructions in this manual carefully before using your system to ensure proper usage!

- Your system is a sophisticated electronic device. Do not let young children use your system.
- Permanent hearing loss or damage may occur if you play your music or otherwise operate the system at loud volumes. Exercise caution when setting the volume on your system.

NOTE: Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

Touchscreen

- Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

Disc Drive

- Do not insert any damaged, warped, scratched or dirty discs into the disc player.
- Discs that have been modified with an adhesive label should not be used in the CD/DVD player.
- Do not insert more than one disc at a time into the drive slot.

FCC Declaration

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Modifications not expressly approved by the radio manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in an installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Increase the separation between the equipment and receiver.

Consult the dealer or an experienced radio technician for help.

Safety Information

Exposure to Radio Frequency Radiation

The radiated output power of the internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 8 inches (20 cm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile devices.

DEVICE CONNECTION AND AUDIO TIPS WITH UCONNECT

- More than one device can be paired to your vehicle. The connected device with the highest priority will be used. To transition between devices, Select Phone > Settings, then press the desired device.
- Multiple devices may be connected at one time. For example, a device can be paired and connected for hands-free calling and texting, while a USB media source is connected for audio. However, only one Bluetooth connection can be used at a time.
- Device calls will always have the highest priority regardless of which connection is active (only the 9-1-1 Call and Assist will have a higher priority than the device). For example, if an App is launched and the user receives a call, the user will be exited out of the App and returned to the App when the call ends.

- After all devices are connected/paired, when switching to a different audio source, audio will auto-play from the new source.
- Current audio (AM/FM/SXM/AUX) will continue to play when switching to a non-media type App.
- Current audio (AM/FM/SXM/AUX) is muted during Assist and 9-1-1 Call.
- Device calls will mute all audio except for NAV prompts if guidance is currently active (audio will resume after device call is ended).
- All secondary incoming device calls will be treated similar to “call waiting” (except 9-1-1 Call).
- When connecting a second device via USB, that device will have priority and auto play accordingly. A device that is already paired/connected will still be available for hands-free calling and texting.
- Incoming calls received while entering a nav destination (before pressing “Go”) will cancel the nav entry. The user is required to start over when the device call has ended.

RADIO MODE

CONTENTS

■ OPERATING RADIO MODE 82
- □ Volume/Mute Control 82
- □ Tune/Scroll Control 82
- □ Screen Close 83
- □ Seek And Direct Tune Functions 83
- □ Direct Tune 84
- □ Setting Presets 85
- □ SiriusXM Satellite Radio Mode — If Equipped . .86
- □ Replay 88
- □ Favorites 89
- □ Browse In SXM 90
- □ Audio 92

OPERATING RADIO MODE



The radio is equipped with the following modes:

- AM
- FM
- SiriusXM Satellite Radio (If Equipped)

Push the RADIO button to enter Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pressing the corresponding buttons in the Radio mode.

Volume/Mute Control

Push the VOLUME/MUTE control knob to mute the radio. Push the VOLUME/MUTE control knob a second time to unmute the radio.

The electronic volume control turns continuously (360 degrees) in either direction, without stopping. Turning the VOLUME/MUTE control knob clockwise increases the volume and counterclockwise decreases it.

Tune/Scroll Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

Screen Close

The “X” button at the top right, provides a means to close the Direct Tune Screen. The Direct Tune Screen also auto closes if no activity occurs within 10 seconds.

Seek And Direct Tune Functions

The Seek Up ⏭ and Seek Down ⏮ functions are activated by pressing the “Double Arrow” buttons to the right and left of the radio station display, or by pushing the left “Steering Wheel Audio Control” (if equipped) up or down.

Seek Up

Press and release the “Seek Up” ⏭ button to tune the radio to the next listenable station or channel. During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Up

Press and hold the “Seek Up” ⏭ button to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button is released.

Seek Down

Press and release the “Seek Down” ⏮ button to tune the radio to the next listenable station or channel. During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Down

Press and hold the “Seek Down” ⏮ button to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button is released.

Direct Tune

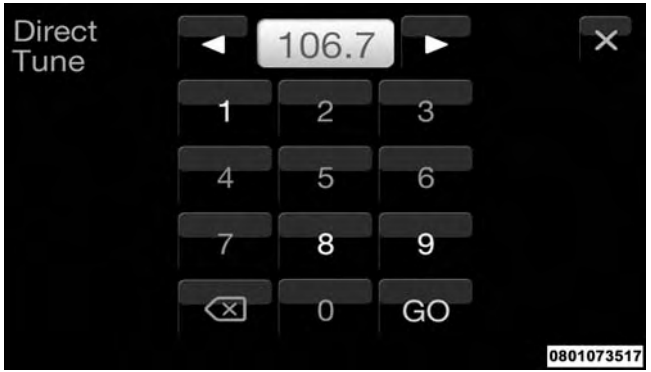

Press the "Tune" button located at the bottom of the radio screen. The Direct Tune button screen is available in AM, FM, and SXM radio modes and can be used to direct tune the radio to a desired station or channel.

Press the available number button to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

Undo

You can backspace an entry by pressing the bottom left "Undo" button.

GO

When pressed, the green "GO" button allows you to commit an entry, at which time the radio will tune to the entered station or channel and close the Direct Tune Screen.

The selected Station or Channel number is displayed in the Direct Tune text box.

Setting Presets

The Presets are available for all Radio Modes, and are activated by pressing any of the six "Preset" buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of 6 presets are visible at the top of the radio screen.

You can switch between the two radio presets by pressing the "arrow button" located in the upper right of the radio touchscreen.

Browse In AM/FM

When in either AM or FM, the Browse Screen provides a means to edit the Presets List and is entered by pushing the ENTER/BROWSE button.

Scrolling Preset List

Once in the Browse Presets screen, you can scroll the preset list by rotation of the TUNE/SCROLL knob, or by pressing the "Up and Down" arrow keys, located on the right of the screen.

Preset Selection From List

A Preset can be selected by pressing any of the listed Presets, or by pushing the ENTER/BROWSE button on the TUNE/SCROLL knob to select the currently highlighted Preset.

When selected, the radio tunes to the station stored in the Preset and returns to the main radio screen.

Deleting Presets

A Preset can be deleted in the Presets Browse screen by pressing the "Trash Can" icon for the corresponding Preset.

Return To Main Radio Screen

You can return to the Main Radio Screen, by pressing the "X" button on the touchscreen when in the Browse Presets screen.

SiriusXM Satellite Radio Mode — If Equipped

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

SiriusXM Premier

Get over 160 channels on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio, every MLB and NHL game, every NASCAR race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.

Go to siriusxm.com/getallaccess for more information. SiriusXM services require subscriptions, sold separately after the 12-month trial included with your new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.** See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our SiriusXM satellite service is also available in PR

(with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2015 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. Service available in Canada; see www.siriusxm.ca.

This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

No Subscription

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Traffic/Weather channel only.

Acquiring SiriusXM Subscription

To activate the SiriusXM Satellite Radio subscription, call 1-800-643-2112 for U.S. residents and 1-877-438-9677 for Canadian residents. You will need to provide the Sirius ID (RID) located at the bottom of the Channel 0 screen.

The Satellite Mode is activated by a press of the "SXM" button on the touchscreen.

When in Satellite mode:

- The SXM button on the touchscreen is highlighted.
- The SiriusXM Presets are displayed at the top of the screen.
- The Genre is displayed below the Presets Bar.
- The SiriusXM Channel Number is displayed in the center.

- The Program Information is displayed at the bottom of the Channel Number.
- The SiriusXM function buttons on the touchscreens are displayed below the Program Information.

Tuning is done by operating the TUNE/SCROLL knob or by Direct Tune, similar to other Radio Bands, see Presets, Browse, TUNE/SCROLL knob and Direct Tune.

In addition to the tuning Operation functions common to all Radio modes, the replay, Traffic/Weather Jump, and fav button functions are available in SiriusXM Mode.

Replay

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio. Once the channel is switched, content in replay memory is lost.

Press the "Replay" button on the touchscreen. The play/pause, rewind/forward and live buttons will display at the top of the screen, along with the replay time.

You can exit by pressing the "Replay" button on the touchscreen, any time during the Replay mode.

Play/Pause

Press the "Pause/Play" button on the touchscreen to pause the playing of live or rewound content at any time. Play can be resumed again by pressing of the "Pause/Play" button on the touchscreen.

Rewind

Press the "RW" button on the touchscreen to rewind the content in steps of five seconds. Pressing the "RW" button on the touchscreen for more than two seconds rewinds the content. The Radio begins playing the content at the point at which the press is released.

Forward

Each press of the "FW" button on the touchscreen forwards the content in steps of five seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous press of the "FW" button on the touchscreen also forwards the content. The Radio begins playing the content at the point at which the press is release.

Live

Press the "Live" button on the touchscreen to resume playing of Live content.

Favorites

Press the "fav." button on the touchscreen to activate the favorites menu, which will time out in five seconds in absence of user interaction.

You can exit the Favorites Menu by a press of the "X" in the top right corner.

The favorites feature enables you to set a favorite artist, or song that is currently playing. The Radio then uses this information to alert you when either the favorite song, or favorite artist are being played at any time by any of the SiriusXM Channels.

The maximum number of favorites that can be stored in the Radio is 50.

Fav. Artist: While the song is playing to set a Favorite Artist, press the "fav." button on the touchscreen and then the Fav. Artist button on the touchscreen.

Fav. Song: While the song is playing to set a Favorite Song, press the "fav." button on the touchscreen and then the Fav Song button on the touchscreen.

Browse In SXM

Press the “Browse” button on the touchscreen to edit Presets, Favorites, Game Zone, and Jump settings, along with providing the SiriusXM Channel List.

This Screen contains many sub menus. You can exit a sub menu to return to a parent menu by pressing the “Back Arrow.”

All

Press the “All” button at the left of the Browse Screen.

Channel List

Press the Channel List, or Genre, to display all the SiriusXM Channel Numbers. You can scroll the Channel list by pressing the “Up and Down arrows”, located on the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob.

Genre

Press the “Genre” button on the touchscreen to display a list of Genres. You can select any desired Genre by pressing the “Genre” list, the Radio tunes to a channel with the content in the selected Genre.

Presets

Press the “Presets” button located at the left of the Browse screen.

You can scroll the Presets list pressing the up and down arrows located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob as well.

Preset Selection

A Preset can be selected by pressing any of the listed “Presets”, or by pushing the ENTER/BROWSE button on

the TUNE/SCROLL knob to select the currently highlighted Preset. When selected, the Radio tunes to the station stored in the Preset, and returns to the main Radio screen.

Deleting A Preset

A Preset can be deleted in the Presets Browse screen by pressing the "Trash Can" Icon for the corresponding Preset.

Favorites

Press the "Favorites" button located at the left of the Browse screen.

The Favorites menu provides a means to Edit the Favorites list and to configure the Alert Settings, along with providing a list of Channels currently airing any of the items in the Favorites list.

You can scroll the Favorites list by pressing the "Up and Down" arrows located at the right side of the screen. Scrolling can also be done by operating the TUNE/SCROLL knob as well.

Remove Favorites

Press the "Remove Favorites" tab at the top of the screen. Press the "Delete All" button on the touchscreen to delete all of the Favorites or press the "Trash Can" icon next to the Favorite to be deleted.

Alert Settings

Press the "Alert Setting" tab at the top of the screen. The Alert Settings menu allows you to choose from a Visual alert or Audible and Visual alert when one of your favorites is airing on any of the SiriusXM channels.

Game Zone

Press the “Game Zone” button, located at the left of the Browse screen. This feature provides you with the ability to select teams, edit the selection, and set alerts.

On Air

Press the “On-Air” tab at the top of the screen. The On-Air list provides a list of Channels currently airing any of the items in the Selections list, and pressing any of the items in the list tunes the radio to that channel.

Select Teams

Press the “Select Teams” button on the touchscreen to activate the League Scroll list. Press the chosen league and a scroll list of all teams within the league will appear, then you can select a team by pressing the corresponding box. A check mark appears for all teams that are chosen.

Remove Selection

Press the “Remove Selection” tab at the top of the screen. Press the “Delete All” button on the touchscreen to delete all of the Selections or press the “Trash Can Icon” next to the Selection to be deleted.

Alert Settings

Press the “Alert Setting” tab at the top of the screen. The Alert Settings menu allows you to choose from “Alert me to on-air games upon start” or “Alert upon score update” or both when one or more of your selections is airing on any of the SiriusXM channels.

Audio

Press the “Audio” button to activate the Audio settings screen to adjust Balance\Fade, Equalizer and Speed Adjusted Volume.

You can return to the Radio screen by pressing the “X” located at the top right.

Balance/Fade

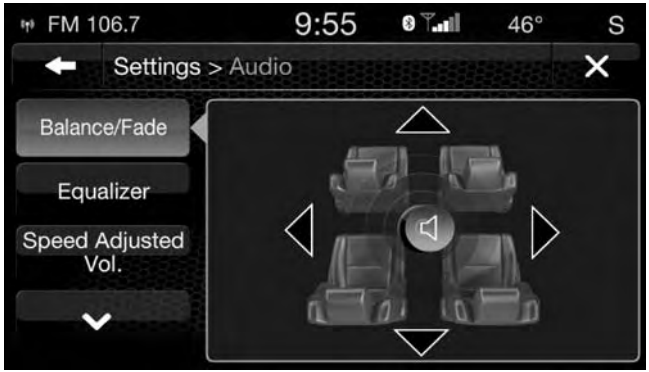

Press the "Balance/Fade" button to Balance audio between the front speakers or fade the audio between the rear and front speakers.

Pressing the "Front, Rear, Left or Right" buttons or press and drag the blue "Speaker" icon to adjust the Balance/Fade.

Equalizer

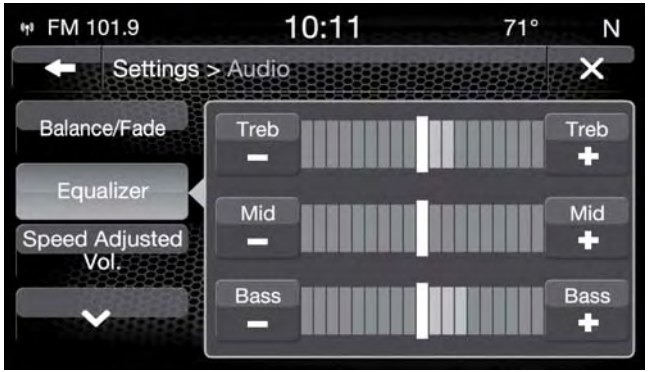

Press the "Equalizer" button to activate the Equalizer screen.

Press the "+ or –" buttons, or by pressing and dragging over the "level bar" for each of the equalizer bands. The level value, which spans between ±9, is displayed at the bottom of each of the Bands.

Speed Adjusted Volume — If Equipped

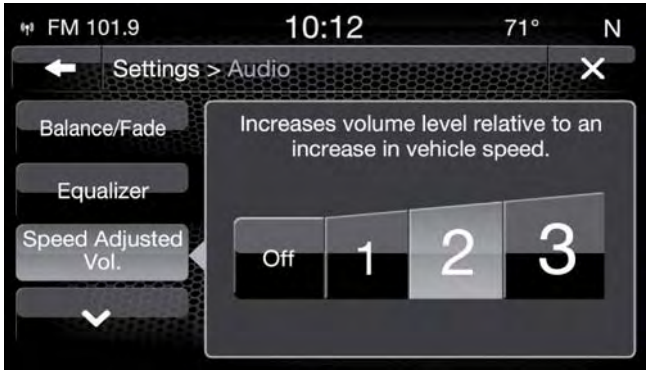

Press the "Speed Adjusted Volume" button to activate the Speed Adjusted Volume screen.

The Speed Adjusted Volume is adjusted by pressing the "Off, 1, 2 or 3." This alters the automatic adjustment of the audio volume with variation to vehicle speed. Volume increases automatically as speed increase to compensate for normal road noise.

Surround Sound — If Equipped



Press the "On" button to activate Surround Sound. Press "Off" to deactivate this feature.

When Surround Sound is On, you can hear audio coming from every direction as in a movie theatre or home theatre system.

Loudness



Press the "On" button to activate Loudness. Press "Off" to deactivate this feature.

When Loudness is On, the loudness setting increases dynamic range of audio at higher volumes.

AUX Volume Offset

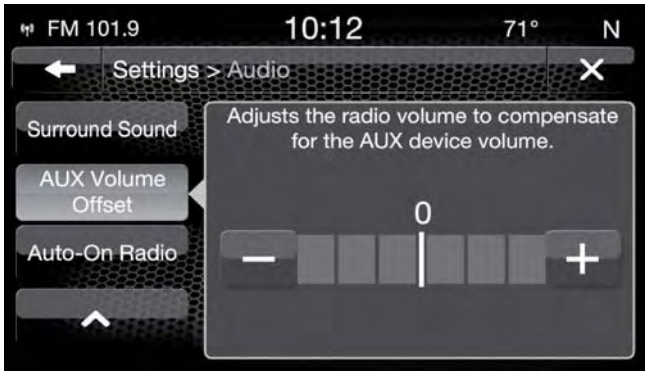

Press the "Aux Volume Offset" button to access the offset screen.

To adjust the amount of radio volume compensation. Press the "+ or –" buttons, or press and drag over the "level bar".

Auto-On Radio



Press the "On" button to activate the Auto-On Radio feature. Press "Off" button to deactivate this feature. Press the "Recall Last" button to recall the last radio setting, whether the radio was on or off at the last ignition OFF.

MEDIA MODE

CONTENTS

■ OPERATING MEDIA MODE. 98
- □ USB/iPod Mode 98
- □ AUX Mode 100
- □ Bluetooth Mode. 101

OPERATING MEDIA MODE

USB/iPod Mode

Overview

USB/iPod Mode is entered by either inserting a USB device or iPod and cable into the USB Port or push the MEDIA button and then press the "iPod" button on the display.



Seek Up/Down

Press and release the "Seek Up" ⏭ button for the next selection on the USB device/iPod. Press and release the "Seek Down" ⏮ button to return to the beginning of the current selection, or return to the beginning of the previous selection if the USB device/iPod is within the first second of the current selection.

Browse

Press the "Browse" button to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the USB device/ iPod. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Press the desired button on the left side of the screen. The center of the browse window shows items and it's sub-functions, which can be scrolled by pressing the "Up and Down" buttons to the right. The TUNE/SCROLL knob can also be used to scroll.

Source

Press the "Select Source" button to select the desired audio source, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Repeat

Press the "Repeat" button to toggle the repeat functionality. The Repeat button is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

Shuffle

Press the "Shuffle" button to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Press the button a second time to turn this feature off.

Info

Press the "Info" button to display the current track information. Press the "Info" button a second time to cancel this feature.

Tracks

Press the "trks" button to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then press the ENTER/ BROWSE knob to start playing that track.

Pressing the "trks" button while the pop up is displayed will close the pop up.

Audio

Refer to Radio Mode for adjusting the audio settings.

AUX Mode

Overview

AUX Mode is entered by inserting an AUX device using a cable with a 3.5 mm audio jack into the AUX port or push the MEDIA button and then press the AUX button on the display.



Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert an Auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME/MUTE rotary knob, or with the volume of the attached device.

NOTE: The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

Source

Press the "Select Source" button to select the desired audio source, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Audio

Refer to Radio Mode for adjusting the audio settings.

Bluetooth Mode

Overview

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device, containing music, to the Uconnect System.

Before proceeding, the Bluetooth device must be paired to the Uconnect Phone to communicate with the Uconnect System.

NOTE: See the pairing procedure in the Uconnect Phone section for more details.

To access Bluetooth mode, press the Bluetooth button on the left side of the display.



Seek Up/Down

Press and release the "Seek Up" ⏭ button on the touchscreen for the next selection on the Bluetooth device. Press and release the "Seek Down" ⏮ button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth device is within the first second of the current selection.

Source

Press the "Select Source" button on the touchscreen to select the desired audio source, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Tracks

If the Bluetooth device supports this feature, press the "trks" button on the touchscreen to display a pop up with the Song List. The currently playing song is indicated by a blue arrow and lines above and below the song title.

Pressing the trks button on the touchscreen while the pop up is displayed will close the pop up.

Audio

Refer to Radio Mode for adjusting the audio settings.

UCONNECT PHONE

CONTENTS

■ OPERATING UCONNECT PHONE 106

- □ Overview 106
- □ Operation 109
- □ Phone Call Features 118
- □ Uconnect Phone Features 122
- □ Advanced Phone Connectivity 126
- □ Things You Should Know About Your Uconnect Phone 126
- □ General Information 131

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

OPERATING UCONNECT PHONE

Overview

Uconnect Phone is a voice-activated, hands-free, in-vehicle communications system. Uconnect Phone allows you to dial a phone number with your mobile phone.

Uconnect Phone supports the following features:

Voice Activated Features:

- Hands-Free dialing via Voice (“Call John Smith Mobile” or, “Dial 248-555-1212”).
- Hands-Free text to speech listening of your incoming SMS messages.
- Hands-Free Text Message Reply. (Forward one of 18 pre-defined SMS messages to incoming calls/text messages).
- Redialing last dialed numbers (“Redial”).
- Calling Back the last incoming call number (“Call Back”).
- View Call logs on screen (“Show incoming calls,” “Show Outgoing calls,” “Show missed Calls,” “Show Recent Calls”).

- Searching Contacts phone number ("Search for John Smith Mobile").

NOTE: Examples of Voice Commands and Voice Text Reply are provided throughout this manual. For quick use, go to the Voice Command Quick Tips Section.

Screen Activated Features

- Dialing via Keypad using touchscreen.
- Viewing and Calling contacts from Phonebooks displayed on the touchscreen.
- Setting Favorite Contact Phone numbers so the are easily accessible on the Main Phone screen.
- Viewing and Calling contacts from Recent Call logs.
- Reviewing your recent Incoming SMS.
- Listen to Music on your Bluetooth Device via the touchscreen.
- Pairing up to 10 phones/audio devices for easy access to connect to them quickly.

NOTE: Your phone must be capable of SMS messaging via Bluetooth for messaging features to work properly.

Your mobile phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the Uconnect Phone.

For Uconnect customer support:

- U.S. residents - visit UconnectPhone.com or call 1-877-855-8400
- Canadian residents - UconnectPhone.com or call 1-800-465-2001 (English) or 1-800-387-9983 (French)

Uconnect Phone allows you to transfer calls between the system and your mobile phone as you enter or exit your vehicle and enables you to mute the system's microphone for private conversation.

The Uconnect Phone is driven through your Bluetooth "Hands-Free Profile" mobile phone. Uconnect features Bluetooth technology - the global standard that enables different electronic devices to connect to each other without wires or a docking station, so Uconnect Phone works no matter where you stow your mobile phone (be it your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's Uconnect Phone. The Uconnect Phone allows up to ten mobile phones or audio devices to be linked to the system. Only one linked (or paired) mobile phone and one audio device can be used with the system at a time.

Uconnect Phone Button



The Uconnect Phone button on your steering wheel is used to get into the phone mode and make calls, show recent, incoming, outgoing calls, view phonebook etc., When you push the button you will hear a BEEP. The beep is your signal to give a command.

Uconnect Voice Command Button



The Uconnect Voice Command button on your steering wheel is only used for "barge in" and when you are already in a call and you want to send Tones or make another call.

The button on your steering wheel is also used to access the Voice Commands for the Uconnect Voice Command features if your vehicle is equipped. Please see the Uconnect Voice Command section for direction on how to use the button.

The Uconnect Phone is fully integrated with the vehicle's audio system. The volume of the Uconnect Phone can be adjusted either from the radio volume control knob or from the steering wheel radio control (right switch), if so equipped.

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Operation

Voice commands can be used to operate the Uconnect Phone and to navigate through the Uconnect Phone menu structure. Voice commands are required after most Uconnect Phone prompts. There are two general methods for how Voice Command works:

1. Say compound commands like "Call John Smith mobile."
2. Say the individual commands and allow the system to guide you to complete the task.

You will be prompted for a specific command and then guided through the available options.

- Prior to giving a voice command, one must wait for the beep, which follows the "Listen" prompt or another prompt.
- For certain operations, compound commands can be used. For example, instead of saying "Call" and then "John Smith" and then "mobile," the following compound command can be said: "Call John Smith mobile."
- For each feature explanation in this section, only the compound command form of the voice command is given. You can also break the commands into parts and say each part of the command when you are asked for it. For example, you can use the compound command

form voice command “Search for John Smith,” or you can break the compound command form into two voice commands: “Search Contact” and when asked “John Smith.” Please remember, the Uconnect Phone works best when you talk in a normal conversational tone, as if speaking to someone sitting a few feet/meters away from you.

The system handles multiple inputs in the same phrase or sentence such as “make a phone call” and “to Kelly Smith.” For multiple inputs in the same phrase or sentence, the system identifies the topic or context and provides the associated follow-up prompt such as “Who do you want to call?” in the case where a phone call was requested but the specific name was not recognized.

The system utilizes continuous dialog; when the system requires more information from the user it will ask a question to which the user can respond without pushing the “Voice Command” button on your steering wheel.

Help Command

If you need assistance at any prompt, or if you want to know your options at any prompt, say “Help” following the beep.

To activate the Uconnect Phone from idle, simply push the Phone button on your steering wheel and say a command or say “help.” All Uconnect Phone sessions begin with a push of the Phone button on the radio control head.

Cancel Command

At any prompt, after the beep, you can say “Cancel” and you will be returned to the main menu.

You can also push the Phone or Voice Command button on your steering wheel when the system is listening for a command and be returned to the main or previous menu.

Pair (Link) Uconnect Phone To A Mobile Phone

To begin using your Uconnect Phone, you must pair your compatible Bluetooth enabled mobile phone.

To complete the pairing process, you will need to reference your mobile phone Owner's Manual. The Uconnect website may also provide detailed instructions for pairing.



NOTE:

- You must have Bluetooth enabled on your phone to complete this procedure.
- The vehicle must be in PARK.

1. Press the "Phone" button on the touchscreen to begin.
2. If there is no phone currently connected with the system, a pop-up will appear.
3. Select Yes to begin the pairing process. Then search for available devices on your Bluetooth enabled mobile phone. When prompted on the phone, enter the name and PIN shown on the Uconnect screen.
   - If No is selected, press the "Settings" button from the Uconnect Phone main screen,
   - Press the "Add Device" button.

- Search for available devices on your Bluetooth enabled mobile phone. When prompted on the phone, enter the name and PIN shown on the Uconnect screen,
- See Step 4 to complete the process.

4. Uconnect Phone will display an in progress screen while the system is connecting.
5. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting Yes will make this phone the highest priority. This phone will take precedence over other paired phones within range.



Pair Additional Mobile Phones

- Press the "Settings" button on the touchscreen from the Phone main screen.
- Next press the "Phone/Bluetooth" button on the touchscreen.
- Press the "Add Device" button on the touchscreen.

- Search for available devices on your Bluetooth enabled mobile phone. When prompted on the phone, enter the name and PIN shown on the Uconnect screen.
- Uconnect Phone will display an in process screen while the system is connecting.
- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting Yes will make this phone the highest priority. This phone will take precedence over other paired phones within range.

NOTE: For phones which are not made a favorite, the phone priority is determined by the order in which it was paired. The latest phone paired will have the higher priority.

You can also use the following VR commands to bring up the Paired Phone screen from any screen on the radio:

- "Show Paired Phones" or
- "Connect My Phone"

Pair A Bluetooth Streaming Audio Device

1. Press the "Media" button on the touchscreen to begin.
2. Change the Source to Bluetooth.
3. Press the "Bluetooth" button on the touchscreen to display the Paired Audio Devices screen.
4. Press the "Add Device" button on the touchscreen.

NOTE: If there is no device currently connected with the system, a pop-up will appear.

5. Search for available devices on your Bluetooth enabled audio device. When prompted on the device, enter the PIN shown on the Uconnect screen.

6. Uconnect Phone will display an in process screen while the system is connecting.
7. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite device. Selecting Yes will make this device the highest priority. This device will take precedence over other paired devices within range.

NOTE: For devices which are not made a favorite, the device priority is determined by the order in which it was paired. The latest device paired will have the higher priority.

You can also use the following VR command to bring up a list of paired audio devices.

- "Show Paired Phones" or
- "Connect My Phone"

Connecting To A Particular Mobile Phone Or Audio Device After Pairing

Uconnect Phone will automatically connect to the highest priority paired phone and/or Audio Device within range. If you need to choose a particular phone or Audio Device follow these steps:

1. Press the "Settings" button on the touchscreen.
2. Press the "Paired Phones" or "Paired Audio Sources" button on the touchscreen.
3. Press to select the particular Phone or the particular Audio Device.
4. Press the "X" to exit out of the Settings screen.

Disconnecting A Phone Or Audio Device

1. Press the "Settings" button on the touchscreen.

2. Press the “Paired Phones” or “Paired Audio Devices” button on the touchscreen.
3. Press the settings icon button located to the right of the device name.
4. The options pop-up will be displayed.
5. Press the “Disconnect Device” button on the touchscreen.
6. Press the “X” to exit out of the Settings screen.

Deleting A Phone Or Audio Device

1. Press the “Settings” button on the touchscreen.
2. Press the “Pair Phones” or “Paired Audio Devices” button on the touchscreen.
3. Press the settings icon button located to the right of the device name for a different Phone or Audio Device than the currently connected device.
4. The options pop-up will be displayed.
5. Press the “Delete Device” button on the touchscreen.
6. Press the “X” to exit out of the Settings screen.

Making A Phone Or Audio Device A Favorite

1. Press the “Settings” button on the touchscreen.
2. Press the “Paired Phones” or “Paired Audio Devices” button on the touchscreen.
3. Press the settings icon button located to the right of the device name.
4. The options pop-up will be displayed.
5. Press the “Make Favorite” button on the touchscreen; you will see the chosen device move to the top of the list.
6. Press the “X” to exit out of the Settings screen.

Phonebook Download (Automatic Phonebook Transfer From Mobile Phone) — If Equipped

If equipped and specifically supported by your phone, Uconnect Phone automatically downloads names (text names) and number entries from the mobile phone's phonebook. Specific Bluetooth Phones with Phone Book Access Profile may support this feature. See Uconnect website, UconnectPhone.com, for supported phones.

- To call a name from a downloaded mobile phone book, follow the procedure in the Voice Recognition Quick Reference section.
- Automatic download and update of a phone book, if supported, begins as soon as the Bluetooth wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.
- A maximum of 1,000 entries per phone will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.
- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

Managing Your Favorites

There are three ways you can add an entry to your Favorites.

1. During an active call of a number to make a favorite, press and hold the preset button on the touchscreen on the top of the phone main screen.
2. After loading the mobile phonebook, select phonebook from the Phone main screen, then select the appropriate number. Press the settings icon next to the selected number to display the options pop-up. In the pop-up select "Add to Favorites."

NOTE: If the Favorites list is full, you will be asked to remove an existing favorite.

3. From the Phone main screen, select phonebook. From the phonebook screen, select the "Favorites" button on the touchscreen and then select the settings icon button on the touchscreen located to the right of the phonebook record. Select an empty entry and press the settings icon on that selected entry. When the Options pop-up appears, press "Add from Mobile." You will then be asked which contact and number to choose from your mobile phonebook. When complete the new favorite will be shown.

To Remove A Favorite

1. To remove a Favorite, select "phonebook" from the Phone main screen.
2. Next select "Favorites" on the left side of the screen and then press the settings icon button on the touchscreen.

3. Press the settings icon next to the Favorite you would like to remove.
4. The Options pop-up will display, press "Remove from Favs."

Phone Call Features

The following features can be accessed through the Uconnect Phone if the feature(s) are available and supported by Bluetooth on your mobile service plan. For example, if your mobile service plan provides three-way calling, this feature can be accessed through the Uconnect Phone. Check with your mobile service provider for the features that you have.

Ways To Initiate A Phone Call

Listed below are all the ways you can initiate a phone call with Uconnect Phone.

- Redial
- Dial by pressing in the number
- Voice Commands (Dial by Saying a Name, Call by Saying a Phonebook Name, Redial or Call Back)
- Favorites
- Mobile Phonebook
- Recent Call Log
- SMS Message Viewer

Dial By Saying A Number

1. Push the "Phone" button on your steering wheel to begin.
2. After the "Listening" prompt and the following beep, say "Dial 151-123-4444."
3. The Uconnect Phone will dial the number 151-123-4444.

Call By Saying A Phonebook Name

1. Push the Phone button on your steering wheel to begin.
2. After the "Listening" prompt and the following beep, say "Call John Doe Mobile."
3. The Uconnect Phone will dial the number associated with John Doe, or if there are multiple numbers it will ask which number you want to call for John Doe.

Call Controls

The touchscreen allows you to control the following call features:

- Answer
- End
- Ignore
- Hold/unhold
- Mute/unmute
- Transfer the call to/from the phone
- Swap two active calls
- Join two active calls together

Touch-Tone Number Entry

1. Press the "Phone" button on the touchscreen.
2. Press the "Dial" button on the touchscreen.
3. The Touch-Tone screen will be displayed.
4. Use the numbered buttons on the touchscreens to enter the number and press "Call."

To send a touch-tone using Voice Recognition (VR), push the Voice Command button on your steering wheel while in a call and say "Send 1234#" or you can say "Send Voicemail Password" if Voicemail password is stored in your mobile phonebook.

Recent Calls

You may browse up to 31 of the most recent of each of the following call types:

- All Calls
- Incoming Calls
- Outgoing Calls
- Missed Calls

These can be accessed by pressing the "recent calls" button on the Phone main screen.

You can also push the button on your steering wheel and say "Show my incoming calls" from any screen and the Incoming calls will be displayed.

NOTE: Incoming can also be replaced with "Outgoing," "Recent" or "Missed."

Answer Or Ignore An Incoming Call — No Call Currently In Progress

When you receive a call on your mobile phone, the Uconnect Phone will interrupt the vehicle audio system. Push the Phone button on the steering wheel to accept the call. You can also press the "answer" button on the touchscreen or press the caller ID box.

Answer Or Ignore An Incoming Call — Call Currently In Progress

If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your mobile phone. Push the Phone button on the steering wheel, or press the "answer" button on the touchscreen, or caller ID box, to place the current call on hold and answer the incoming call.

NOTE: The Uconnect Phone compatible phones in the market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only answer an incoming call or ignore it.

Making A Second Call While Current Call Is In Progress

You can place a call on hold by pressing the "Hold" button on the Phone main screen, then dial a number from the dialpad, recent calls, SMS Inbox or from the phonebooks. To go back to the first call, refer to "Toggling Between Calls" in this section. To combine two calls, refer to "Join Calls" in this section.

Place/Retrieve A Call From Hold

During an active call, press the "Hold" button on the Phone main screen.

Toggling Between Calls

If two calls are in progress (one active and one on hold), press the "Swap" button on the Phone main screen. Only one call can be placed on hold at a time.

You can also push the Phone button to toggle between the active and held phone call.

Join Calls

When two calls are in progress (one active and one on hold), press the "Join Calls" button on the Phone main screen to combine all calls into a Conference Call.

Call Termination

To end a call in progress, momentarily push the Phone button or press the "end" button on the touchscreen. Only the active call(s) will be terminated and if there is a call on hold, it will become the new active call.

Redial

Press the "Redial" button on the touchscreen, or push the Phone button and after the "Listening" prompt and the following beep, say "Redial."

The Uconnect Phone will call the last number that was dialed from your mobile phone.

Call Continuation

Call continuation is the progression of a phone call on the Uconnect Phone after the vehicle ignition key has been switched to OFF.

NOTE: The call will remain within the vehicle audio system until the phone becomes out of range for the Bluetooth connection. It is recommended to press the "transfer" button on the touchscreen when leaving the vehicle.

Uconnect Phone Features

Roadside Assistance/Towing Assistance

If you need roadside/towing assistance:

1. Push the Phone button to begin.
2. After the "Listening" prompt and the following beep, say "Roadside Assistance" or say "Towing Assistance."

NOTE: The roadside/towing assistance number dialed is based on the country where the vehicle is purchased (1-800-521-2779 for the U.S./Canada, 55-14-3454 for Mexico City and 1-800-712-3040 for outside Mexico City in Mexico). Please refer to the FCA US LLC 24-Hour "Roadside Assistance" coverage details in the Warranty Information Booklet and in the Owner's Information Manual on the DVD under "Other References."

Voice Mail Calling

To learn how to access your voice mail, refer to "Working with Automated Systems."

Working With Automated Systems

This method is used in instances where one generally has to push numbers on the mobile phone keypad while navigating through an automated telephone system.

You can use your Uconnect Phone to access a voice mail system or an automated service, such as a paging service or automated customer service line. Some services require immediate response selection. In some instances, that may be too quick for use of the Uconnect Phone.

When calling a number with your Uconnect Phone that normally requires you to enter in a touch-tone sequence on your mobile phone keypad, you can utilize the touchscreen or push the Voice Command button and say the word "Send" then the sequence you wish to enter. For example, if required to enter your PIN followed with a pound, (3 7 4 6 #), you can push the Voice Command button and say, "Send 3 7 4 6 #." Saying "Send" followed by a number, or sequence of numbers, is also to be used for navigating through an automated customer service center menu structure, and to leave a number on a pager.

You can also send stored mobile phonebook entries as tones for fast and easy access to voice mail and pager entries. For example, if you previously created a Phonebook entry with First and/or Last Name as "Voicemail Password", then if you push the Voice Command button and say "Send Voicemail Password" the Uconnect Phone will then send the corresponding phone number associated with the phonebook entry, as tones over the phone.

NOTE:

- The first number encountered for that contact will be sent. All other numbers entered for that contact will be ignored.
- You may not hear all of the tones due to mobile phone network configurations. This is normal.
- Some paging and voice mail systems have system time out settings that are too short and may not allow the use of this feature.
- Pauses, wait or other characters that are supported by some phones are not supported over Bluetooth. These additional symbols will be ignored in the dialing a numbered sequence.

Barge In — Overriding Prompts

The Voice Command button can be used when you wish to skip part of a prompt and issue your voice command immediately. For example, if a prompt is asking "There are two numbers with the name John. Say the full name" you could push the Voice Command button and say, "John Smith" to select that option without having to listen to the rest of the voice prompt.

Voice Response Length

To choose between "Brief" and "Detailed" Voice Response Length.

1. Push the Settings button on the faceplate.
2. Press the "Voice" button on the touchscreen.
3. Select either "Brief" or "Detailed" by pressing the button, highlighting your selection.

Phone And Network Status Indicators

Uconnect Phone will provide notification to inform you of your phone and network status when you are attempting to make a phone call using Uconnect Phone. The status is given for network signal strength and phone battery strength.

Dialing Using The Mobile Phone Keypad

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

You can dial a phone number with your mobile phone keypad and still use the Uconnect Phone (while dialing via the mobile phone keypad, the user must exercise caution and take precautionary safety measures). By dialing a number with your connected Bluetooth mobile phone, the audio will be played through your vehicle's audio system. The Uconnect Phone will work the same as if you dial the number using voice a command.

NOTE: Certain brands of mobile phones do not send the dial ring to the Uconnect Phone to play it on the vehicle audio system, so you will not hear it. Under this situation, after successfully dialing a number the user may feel that the call did not go through even though the call is in progress. Once your call is answered, you will hear the audio.

Mute/Un-Mute (Mute ON/OFF)

When you mute the Uconnect Phone, you will still be able to hear the conversation coming from the other party, but the other party will not be able to hear you. To mute the Uconnect Phone simply press the "Mute" button on the Phone main screen.

Advanced Phone Connectivity

Transfer Call To And From Mobile Phone

The Uconnect Phone allows ongoing calls to be transferred from your mobile phone to the Uconnect Phone without terminating the call. To transfer an ongoing call from your connected mobile phone to the Uconnect Phone or vice versa, press the "Transfer" button on the Phone main screen.

Connect Or Disconnect Link Between The Uconnect Phone And Mobile Phone

If you would like to connect or disconnect the Bluetooth connection between a Uconnect Phone paired mobile phone and the Uconnect Phone, follow the instructions described in your mobile phone User's Manual.

Things You Should Know About Your Uconnect Phone

Voice Command

For the best performance:

- Adjust the rearview mirror to provide at least ½ inch (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.

- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Ensure that no one other than you is speaking during a voice command period.

Performance is maximized under:

- Low-To-Medium Blower Setting
- Low-To-Medium Vehicle Speed
- Low Road Noise
- Smooth Road Surface
- Fully Closed Windows
- Dry Weather Condition

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Even though the system is designed for many languages and accents, the system may not always work for some.

NOTE: It is recommended that you do not store names in your favorites phonebook while the vehicle is in motion.

Phonebook (Mobile and Favorites) name recognition rate is optimized when the entries are not similar. You can say "O" (letter "O") for "0" (zero).

Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.

Far End Audio Performance

Audio quality is maximized under:

- Low-To-Medium Blower Setting
- Low-To-Medium Vehicle Speed
- Low Road Noise
- Smooth Road Surface
- Fully Closed Windows
- Dry Weather Conditions
- Operation From The Driver's Seat

Performance such as audio clarity, echo, and loudness to a large degree rely on the phone and network, and not the Uconnect Phone.

Echo at the far end can sometimes be reduced by lowering the in-vehicle audio volume.

In a convertible vehicle, system performance may be compromised with the convertible top down.

Voice Texting

Uconnect Phone can read or send new messages on your phone.

Your phone must support Voice Texting over Bluetooth in order to use this feature. If the Uconnect Phone determines your phone is not compatible with Voice Texting messaging over Bluetooth the "Messaging" button will be greyed out and the feature will not be available for use.

NOTE: Uconnect Phone Voice Texting is only available when the vehicle is not in moving.

Read Messages:

If you receive a new text message while your phone is connected to Uconnect Phone, an announcement will be made to notify you that you have a new text message.

Once a message is received and viewed or listened to, you will have the following options:

- Send a Reply
- Forward
- Call

Send Messages Using Buttons On The Touchscreen:

You can send messages using Uconnect Phone. To send a new message:

- Press the "Phone" Button on the touchscreen,
- Press the "messaging" button on the touchscreen then "New Message",
- Press one of the 18 preset messages and the person you wish to send the message to,
- If multiple numbers are available for the contact select which number you would like to have the message sent,
- Press "Send" or "Cancel".

Send Messages Using Voice Commands:

- Press the button,
- After the "Listening" prompt and the following beep, say "Send message to John Smith mobile",
- After the system prompts you for what message you want to send, say the message you wish to send or say "List". There are 18 preset messages.

While the list of defined messages are being read, you can interrupt the system by pressing the Voice Recognition button and saying the message you want to send.

After the system confirms that you want to send your message to John Smith, your message will be sent.

List of Preset Messages:

1. Yes.
2. No.
3. Okay.
4. I can't talk right now.
5. Call me.
6. I'll call you later.
7. I'm on my way.
8. Thanks.
9. I'll be late.
10. I will be <number> minutes late.
11. See you in <number> minutes.
12. Stuck in traffic.
13. Start without me.
14. Where are you?
15. Are you there yet?
16. I need directions.
17. I'm lost.
18. See you later.

Bluetooth Communication Link

Mobile phones have been found to lose connection to the Uconnect Phone. When this happens, the connection can generally be re-established by switching the mobile phone OFF/ON. Your mobile phone is recommended to remain in Bluetooth ON mode.

Power-Up

After switching the ignition key from OFF to either the ON or ACC position, or after a language change, you must wait at least 15 seconds prior to using the system.

General Information

This device complies with Part 15 of the FCC rules and RSS 210 of Industry Canada. Operation is subject to the following conditions:

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

UCONNECT 6.5A/6.5AN VOICE RECOGNITION QUICK TIPS

CONTENTS

■ UCONNECT VOICE RECOGNITION 134
- □ Introducing Uconnect 134
- □ Get Started 134
- □ Basic Voice Commands 136
- □ Radio 137
- □ Media 138
- □ Navigation 139
- □ Phone 140
- □ Voice Text Reply 141
- □ Additional Information 142

UCONNECT VOICE RECOGNITION

Introducing Uconnect

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect 6.5A or 6.5AN systems.



Get Started

All you need to control your Uconnect system with your voice are the buttons on your steering wheel.

1. Visit **UconnectPhone.com** to check mobile device and feature compatibility and to find phone pairing instructions.
2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.

4. Each time you give a Voice Command, you must first push either the VR or Phone button, wait until **after** the beep, then say your Voice Command.
5. You can interrupt the help message or system prompts by pushing the VR or Phone button and saying a Voice Command from current category.

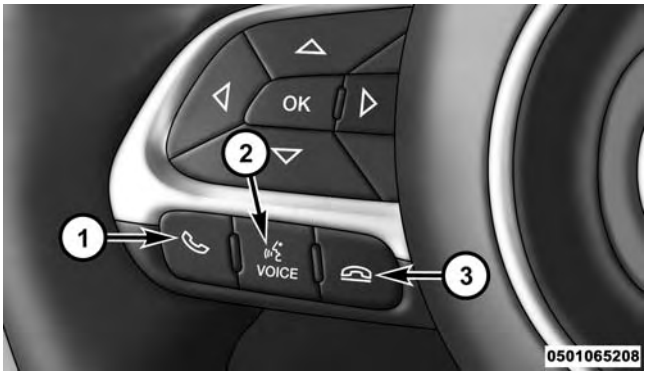

Uconnect Voice Command Buttons

1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
2 — Push To Begin Radio, Navigation, or Media functions
3 — Push To End Call

Basic Voice Commands

The basic Voice Commands below can be given at any point while using your Uconnect system.

Push the VR button . After the beep, say...

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status.



Radio

Use your voice to quickly get to the AM, FM or SiriusXM Satellite Radio stations you would like to hear. (Subscription or included SiriusXM Satellite Radio trial required.)

Push the VR button . After the beep, say...

- **Tune to** ninety-five-point-five FM
- **Tune to** Satellite Channel Hits 1

TIP: At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button and say **"Help."** The system will provide you with a list of commands.



Media

Uconnect offers connections via USB, Bluetooth and auxiliary ports. Voice operation is only available for connected USB and iPod devices. (Remote CD player optional and not available on all vehicles.)

Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change sourc**e to Bluetooth
- **Change source** to iPod
- **Change source** to USB
- **Play artist** Beethoven; **Play album** Greatest Hits; **Play song** Moonlight Sonata; **Play genre** Classical

TIP: Press the Browse button on the touchscreen to see all of the music on your iPod or USB device. Your Voice Command must match **exactly** how the artist, album, song and genre information is displayed.



Navigation

The Uconnect navigation feature helps you save time and become more productive when you know exactly how to get to where you want to go.

1. To enter a destination, push the VR button . After the beep, say...
   - For the 6.5AN Uconnect System, say... **"Navigate to** 800 Chrysler Drive Auburn Hills, Michigan"
2. Then follow the system prompts.

TIP: To start a POI search, push the VR button . After the beep, say " **Find nearest** coffee shop."



Phone

Making and answering hands-free phone calls is easy with Uconnect. When the Phonebook button is illuminated on your touchscreen, your system is ready. Check **UconnectPhone.com** for mobile phone compatibility and pairing instructions.

Push the Phone button . After the beep, say one of the following commands...

- **Call** John Smith
- **Dial** 123-456-7890 and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

TIP: When providing a Voice Command, push the Phone button and say **"Call,"** then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say **"Call** John Smith **work."**

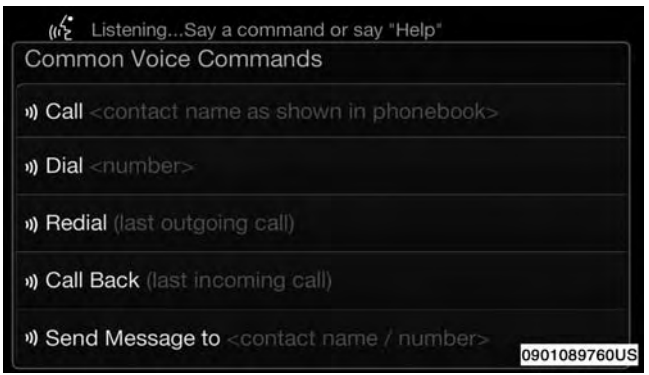

Voice Text Reply

Uconnect will announce **incoming** text messages. Push the Phone button and say **Listen.** (Must have compatible mobile phone paired to Uconnect system.)

1. Once an incoming text message is read to you, push the Phone button . After the beep, say... **"Reply"**
2. Listen to the Uconnect prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES

Yes.	Stuck in Traffic.	See you later.
Can't talk right now.	Start without me.	I'll be Late.
Okay.	See you in <number> of minutes.	I will be <number> minutes late.
Call me.		
I'll call you later.	I need directions.	Where are you?
I'm on my way.	Are you there yet?	No.
I'm lost.		Thanks.

TIP: Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit **UconnectPhone.com**. Apple iPhone iOS6 or later supports reading **incoming** text messages only.

Additional Information

© 2015 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android is a trademark of Google Inc. SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc. Yelp, Yelp logo, Yelp burst and related marks are registered trademarks of Yelp.

For Uconnect system support, call 1-877-855-8400 (24 hours a day 7 days a week) or visit DriveUconnect.com.

Uconnect Access Services Support 1-855-792-4241. Please have your Uconnect Security PIN ready when you call.

NAVIGATION

CONTENTS

- ■ GETTING STARTED 145
- ■ MAIN MENU 145
- ■ WHERE TO? 146
  - □ Where To? — Address 148
  - □ Where To? — Recent 149
  - □ Where To? — Point Of Interest 149
  - □ Where To? — Favorite Destinations 150
  - □ Where To? — Intersection 151
  - □ Where To? — Go Home 152
  - □ Where To? — Trips 153
  - □ Where To? — GEO Coordinate 155
  - □ Where To? — Point On Map 155
  - □ Where To? — City Center 156
  - □ Where To? — Closest City 157
  - □ Where To? — Trails 157
  - □ Where To? — Phone 157
  - □ Before Route Guidance 158
- ■ VIEW MAP 159
- ■ VIEW MAP — SETTINGS 161
  - □ Settings — Map Setup 162

- □ Settings — Guidance 165
- ■ INFORMATION 167
  - □ Information — Where Am I?. 167
  - □ Information — Trip Computer 168
- ■ EMERGENCY 168
  - □ Emergency — Hospital. 169
  - □ Emergency — Police 170
  - □ Emergency — Fire Department 171

GETTING STARTED

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

To access the Navigation system, push the "Nav" button below the screen.



MAIN MENU

- Press "Where To?" to find or route to a destination.
- Press "View Map" to view the map.
- Press "Information" to view Traffic, Where Am I? and Trip Computer information.

- Press “Emergency” to search for Hospitals, Police and Fire Stations near your current location. You can also display your current location and save any Emergency facility location to your Favorites.
- Press “Stop” to stop a route.
- Press “Detour” to detour a route.

WHERE TO?

From the Nav Main Menu, press the Where To? button and select one of the following methods to program a route guidance.

NOTE: Refer to the individual section of the chosen option for further information.

Address

Press this button to search by a street address or a street name with house number.

Recent

Press this button to access previously routed addresses or locations.

Point Of Interest

Press this button when you want to route to a point of interest. The Point of Interest database allows you to select a destination from a list of locations and public places, or points of interest (POI).

Favorites

Press this button to access previously saved addresses or locations.

Intersection

Press this button to enter in two street names as a destination.

Go Home

Press this button to program or confirm a route to the saved home address.

Trips

Press this button to program a new trip or recall a saved trip.

GEO Coordinates

Press this button to route to a GEO Coordinate. A geo coordinate is a coordinate used in geography. You can determine a geo coordinate with the help of a handheld GPS receiver, a map or the navigation system.

Point On Map

Press this button to select a destination directly from the Map screen. By selecting a street segment or icon, you can quickly enter a destination without the need to input the city name or street.

City Center

Press this button to route to a particular city. The navigation system will calculate a route with the destination at the center of the city.

Trails

Press the "Trails" button and select the option to start trail recording to track the route you are driving. Select the option to "stop trail recording" to end tracking. This gives you a point of reference to for a particular route if needed.

Closest City

Press this button to route to a nearby city. The screen will display an alphabetical listing of nearby cities. The navigation system will calculate a route with the destination at the center of the nearby city.

Phone Number

Press this button to route to a location or point of interest by the phone number.

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Address

To enter a destination by Address, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button and then press the "Address" button.

NOTE: To change the state and/or country, press the state, country button and follow the prompts to change the state and/or country.

2. Press "Spell City" or "Spell Street" to begin entering the address of your destination.

   If you press Spell City, you will have to enter and select/press the desired city name, followed by the desired street name and lastly the house number.

   If you press Spell Street, you will have to enter and select/press the desired street name in the correct city and then you will have to enter the house number.

3. Once the correct City, Street and Number has been entered, you will be asked to confirm your destination by pressing "OK."

4. Press the "Yes" button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select "Recent", the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Recent

To route to a recent destination, press the "Recent" button in the NAV Main Menu.

Press the button with the name of the desired destination. Confirm the route with "Yes" to start the route guidance.

To delete a destination from the list, press the "Trash Can" icon button.

To display the options for a destination press the "Options" button that looks like a gear.

The following Options are available for each destination:

- Edit Name
- Add Phone Number
- Move Up in the list
- Move Down in the list
- Place Pin on the location (saves the spot on the list)

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Point Of Interest

To enter a destination by Point of Interest (POI) press the "Point of Interest" button in the Nav Main Menu.

The Point of Interest database allows you to select a destination from a list of locations and public places or points of interest (POI).

You have the following POIs to choose from:

- Gas Stations
- Restaurants
- Hotels/Motels
- ATM/Banking
- All POIs
- Spell POI Name

You can also change your POI search area by pressing the "Change Search Area" button. You will have the following options to change your search area:

- Around Me
- In a City
- Near Destination (only available during route guidance)
- Along Route (only available during route guidance)

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Favorite Destinations

To route to a favorite destination, press the "Favorites" button in the NAV Main Menu.

Press the button with the name of the desired favorite destination and confirm the route with "Yes" to start the route guidance.

To delete a destination from the list, press the "Trash Can" icon button.

To save a favorite destination, press the "Add Favorite" button and follow the steps to route a destination.

To display the options for a favorite destination press the "Options" button that looks like a gear.

The following Options are available for each favorite destination:

- Edit Name
- Add Phone Number

NOTE: If you are currently on a route guidance and you select a Favorite, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Intersection

To enter a destination by Intersection, follow these steps:

1. While in the Nav Main Menu, press the "Where To?" button and then press the "Intersection" button.

   This menu shows the default country and state setting.

NOTE: To change the state and/or country, press the "state", "country" button and follow the prompts to change the state and/or country.

2. This menu shows the default country and state settings.

   If you press "Spell City", you will have to enter and select/press the desired city name, followed by the desired street name and lastly you will have to enter the intersection street.

   If you press "Spell Street", you will have to enter and select/press the desired street name in the correct city and then you will have to enter the intersecting street.

3. Once the correct City and Intersection has been entered, you will be asked to confirm your destination.
4. Press the "Yes" button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select a Intersection, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Go Home

To enter your Home Address, follow these steps:

1. While in the Nav Main Menu, press the Where To? button and then press the Go Home button. If there is no Home Address entered, press "Yes" to enter it now.
2. To set your set your Home Address choose one of the following options:

NOTE: Refer to the individual section of the chosen option for further information.

- Address
- Recent
- Point of Interest
- Favorites
- Intersection
- GEO Coordinates
- Point on Map

- City Center
- Closest Cities
- Phone Number

3. Once you have generated your Home Address, you will be asked to Save it.
4. Press the “Save” button to confirm your destination and begin the route to your Home Address.
5. This address will be saved as your Home Address and it can be accessed by pressing the “Go Home” button in the Where To? Menu.

Change/Delete Your Home Address

To change or delete your current Home Address perform the following:

1. Press the “Go Home” button in the Where To? Menu.
2. Press the “Options” button at the bottom of the displayed map.
3. Press “Clear Home” and then “Yes” to clear/delete your Home Address.
4. To enter in a new Home Address, follow the Where To? – Go Home procedure.

NOTE: You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Where To? — Trips

To route to a saved Trip, press the “Recent” button in the NAV Main Menu.

Press the button with the name of the desired Trip and press the first destination in the list. Confirm the route by pressing “Yes” to start the route guidance.

To add a Trip, follow these steps:

1. Press the “Create new Trip” button.
2. Type in the new Trip Name.

3. Press “Add Destination” to add destinations to your trip.
4. Choose from the following options to add a destination.

NOTE: Refer to the individual section of the chosen option for further information.

- Address
- Recent
- Point of Interest
- Favorites
- Intersection
- GEO Coordinates
- Point on Map
- City Center
- Closest Cities
- Phone Number

5. Add more needed destinations to your trip.

NOTE: Each destination will be listed in order, with the last destination being the final destination.

6. Your new Trip will appear on the Trips list.

To delete a Trip from the list, press the “Trash Can” icon button.

To display the options for a trip press the “Options” button that looks like a gear.

The following Options are available for each trip:

- Edit Name
- Move Up in the list
- Move Down in the list

NOTE: You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Where To? — GEO Coordinate

To enter a destination by GEO Coordinate, press "Where To?" in the Nav Main Menu and then press the "GEO Coordinate" button.

1. Enter the Latitude by typing in the numbers. Use the "Left and Right" arrows to select specific numbers in the location shown.
2. Press the "OK" button.
3. Enter the Longitude by typing in the numbers. Use the "Left and Right" arrows to select specific numbers in the location shown.

NOTE: Press the "Format" button to change the format of the Latitude/Longitude entry.

4. Press "OK" to confirm the destination.
5. Press the "Yes" button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select a GEO Coordinate, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Where To? — Point On Map

To enter a destination by Point on Map, press "Where To?" in the Nav Main Menu and then press the "Point on Map" button.

1. Use the touchscreen to drag the center of the cross over the desired destination.

2. Either press the “address bar” at the top center of the screen to confirm your location or press the “Details” button in the upper right corner to display the available locations near that point on the map.
3. Press the “Yes” button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select a Point on Map, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Where To? — City Center

To enter a destination by City Center, press “Where To?” in the Nav Main Menu and then press the “City Center” button.

1. Enter the name of the City you would like to route to.
2. Press the desired city from the list.
3. Press the “Yes” button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select a City Center, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Where To? — Closest City

To enter a destination by Closest City, press “Where To?” in the Nav Main Menu and then press the “Closest City” button.

1. Press the desired city from the list.
2. Press the “Yes” button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select a Closest City, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Where To? — Trails

When starting to drive a trail you want to record, press “Trails”, and then press “Start Trail Recording.”

When you want to end the recording of a route, press “Stop Trail Recording.”

The trip you recorded will be added to the Recent Trails list.

Where To? — Phone

To enter a destination by Phone number, press “Where To?” in the Nav Main Menu and then press the “Phone Number” button.

1. Enter the Phone Number of the destination you would like to route to.
2. Press the desired destination from the list.
3. Press the “Yes” button to confirm your destination and begin your route.

NOTE: If you are currently on a route guidance and you select a Phone number destination, the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Before Route Guidance

Before confirming the route with the "Yes" button, it is possible to select options different from the default route settings.

- Options – Press the "Options" button to display a list of options to alter your route. To make a selection press and release the desired setting until a check-mark appears.
- Avoid – Press the "Avoid" button to choose road types to avoid during your route. To make a selection press and release the desired setting until a check-mark appears.

NOTE: Since toll roads, tunnels and ferries are built for the purpose of shortening travel distances, avoiding these road types may increase distance and travel time.

- Save – Press the "Save" button to save the destination as a Favorite.

Press the "Yes" button to confirm your destination and to start your route guidance.

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

VIEW MAP

Press the "View Map" button from the Nav Main Menu to display a map of your current position.

With the map displayed you have the following features available.

Menu

Press this button to return to the Nav Main Menu.

Zoom In +/ Zoom Out –

Press the Zoom In (+) or Zoom Out (–) buttons to change the zoom level. Roads with lower functional classification are not shown in higher zoom levels. (e.g. residential streets, lightly-traveled county roads.)

Time Of Arrival/Time To Destination/Distance (Only During Route Guidance)

Press the button in the upper right area of the screen to the display items available. Press the desired option button.

- Time of Arrival
- Time to Destination
- Distance

Turn List (Only During Route Guidance)

Press the area in the upper center part of the screen that displays your next turn to see a Turn List for your current route.

Press a turn in the displayed Turn List for the following options:

- Show on Map
- Avoid Street

Options (Only During Route Guidance)

Press the "Options" button to display the following options. Press the desired button.



2D North Up/Map View 2D

Press this button to scroll between the two viewing options.

Settings

Press this button to view all the available settings. See View Map – Settings for more information.

Repeat Directions

Press this button to repeat the current voice prompt.

Turn List

Press this button to view the turn list for the current route.

Stop Guidance

Press this button to stop route guidance.

Where Am I?

Press the area in the lower center part of the screen that displays your current location to view the Where Am I? view.

Where Am I? displays the address and GEO Coordinates of your current location.

- Press the "GPS" button to view the GPS information.
- Press the "Save" button to save the location in your Favorites.

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

VIEW MAP — SETTINGS

With the Map displayed, press the "Options" button and then press the "Settings" button. You can also access this menu by pressing the "Settings" button in the lower right of the Nav Main Menu.

The following Map Settings are available.

Map Setup

Press this button to display items to customize how your map is viewed. Settings – Map Setup for more information.

Speed Limit

Press this button to turn on/off speed limit warning announcements and to enter a predefined speed limit for your route.

Guidance Options

Press this button to display items to customize your route guidance. Settings – Guidance Options for more information.

Units

Press this button to change the units display. Press the desired button.

- U.S. (mile/feet)
- Imperial (mile/yard)
- Metric (meter)

GPS

Press this button to change the GPS display. Press the desired button.

- Decimal
- DMS
- DM

Copy Device Information To USB? (If Equipped)

Press this button to copy your radio information to a USB jump drive through the available USB port.

Settings — Map Setup

With the Map displayed, press the "Options" button on the touchscreen, then press the "Settings" button on the touchscreen and then the "Map Setup" button on the touchscreen. You can also access this menu by pressing the "Settings" button in the lower right of the Nav Main Menu.

The following Map Setup options are available.

- *Orientation*

Press this button on the touchscreen to change how the Map Orientation is displayed. Press the desired button on the touchscreen.

  – North Up
  – Heading Up

- *Current Street*

Press this button on the touchscreen to turn on/off the current street display on the lower center of the Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Destination Information*

Press this button on the touchscreen to change the Destination Information that is displayed in the upper right corner of the Map View. Press the desired button on the touchscreen.

– Time of Arrival
– Time to Destination
– Distance

- *AutoZoom*

Press this button on the touchscreen to change how the AutoZoom feature adjust the zoom level during guidance in Map View. Press the desired button on the touchscreen.

– Far
– Normal
– Near
– Off

- *Vehicle Icon*

Press this button on the touchscreen to change the vehicle icon that is displayed while in Map View. Press “Previous” or “Next” to view the available icons. Press the “back” icon button on the touchscreen when you’ve made you selection.

- *Show POI Icons*

Press this button on the touchscreen to show the selected Point of Interest icons while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *POI Icon List*

Press this button on the touchscreen to display the available Point of Interest icons you would like displayed while in Map View. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *TMC Incidents*

Press this button on the touchscreen to show Traffic Message Channel (TMC) Incidents while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Park Areas*

Press this button on the touchscreen to display Park Areas while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Railroads*

Press this button on the touchscreen to display Railroad tracks while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *City Areas*

Press this button on the touchscreen to display City Areas while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *River Names*

Press this button on the touchscreen to display River Names while in Map View. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

NOTE: You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

Settings — Guidance

With the Map displayed, press the "Options" button on the touchscreen, then press the "Settings" button on the touchscreen and then the "Guidance" button on the touchscreen. You can also access this menu by pressing the "Settings" button in the lower right of the Nav Main Menu.

The following Guidance options are available.

- *Play Voice Guidance Prompts*

Press this button on the touchscreen to enable Voice Guidance Prompts during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Nav Volume Adjustment*

Press the "+" or "–" buttons on the touchscreen to adjust the Nav Voice Prompt Volume.

NOTE: If the NAV Volume Adjustment setting is set between level 0 and 11 it will default to level 12 on a vehicle restart, if the NAV Volume Adjustment setting is set between level 13 and 38 it will RETAIN the setting on a vehicle restart.

- *Lane Recommendation*

Press this button on the touchscreen to enable Lane Recommendation during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Junction View*

Press this button on the touchscreen to enable Junction View during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Navigation Turn-by-Turn Displayed In Cluster*

Press this button on the touchscreen to enable navigation turn-by-turn displayed in vehicles cluster during route guidance. Press and release the button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *TMC Route Mode (If Equipped)*

Press this button on the touchscreen to change how the Traffic Message Channel (TMC) Route Mode functions during route guidance. Select from:

  – Automatic
  – By Delay Time
  – Manual
  – Off

- *TMC Avoidance Types (If Equipped)*

Press this button on the touchscreen to display the available Traffic Message Channel (TMC) Avoidance Types you would like displayed while in route guidance. Press and release the desired selection button on the touchscreen until a check-mark appears, showing the setting has been selected.

- *Avoid*

Press the Avoid button on the touchscreen to choose road types to avoid during your route. To make a selection press and release the desired setting until a check-mark appears.

NOTE: You can press the "back arrow" button on the touchscreen to return to the previous screen or the "X" button on the touchscreen to exit.

INFORMATION

From the Nav Main Menu, push the "Information" button and select one of the following options to view additional information.

- Traffic
- Where Am I?
- Trip Computer

NOTE: You can push the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Information — Where Am I?

To select Where Am I? information, press the "Information" button from the Nav Main Menu and then press the "Where Am I?" button.

Where Am I? displays the address and GEO Coordinates of your current location.

- Press the "GPS" button to view the GPS information.
- Press the "Save" button to save the location in your Favorites.

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

Information — Trip Computer

To select Trip Computer information, press the "Information" button from the Nav Main Menu and then press the "Trip Computer" button.

Trip Computer displays the following trip information from your last trip:

- Travel Direction
- Distance To Final Destination
- Vehicle Speed
- Distance Traveled
- Overall Average Speed
- Moving Average Speed
- Maximum Speed Reached
- Total Time Traveled
- Travel Time Spent Moving
- Travel Time Spent Stopped

NOTE: You can press the "Back Arrow" button to return to the previous screen or the "X" button to exit.

EMERGENCY

From the Nav Main Menu, press the "Emergency" button and press one of the following options to search and route to a specific location.

- Hospital – Search and route to a Hospital close to your current location
- Police – Search and route to a Police Station close to your current location
- Fire Department – Search and route a Fire Department close to your current location

Press the "Location" button to display your exact current location.

Press the “Save” button to save your current location in Favorites.

NOTE: You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Emergency — Hospital

To search for a Hospital close to your current location, press “Emergency” from the Nav Main Menu and then press the “Hospital” button.

You can search for a Hospital by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- ABC (Search)

NOTE: In case of emergency, please contact the facility to verify their availability before proceeding.

Press the desired Hospital and press “Yes” to confirm the destination.

NOTE: If you are currently on a route guidance and you select a Hospital the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Emergency — Police

To search for a Police Station close to your current location, press “Emergency” from the Nav Main Menu and then press the “Police Station” button.

You can search for a Police Station by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- ABC (Search)

NOTE: In case of emergency, please contact the facility to verify their availability before proceeding.

Press the desired Police Station and press “Yes” to confirm the destination.

NOTE: If you are currently on a route guidance and you select a Police Station the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

Emergency — Fire Department

To search for a Fire Department close to your current location, press “Emergency” from the Nav Main Menu and then press the “Fire Department” button.

You can search for a Fire Department by the following categories, which are button tabs at the top of the screen.

- Name
- Distance
- ABC (Search)

NOTE: In case of emergency, please contact the facility to verify their availability before proceeding.

Press the desired Fire Department and press “Yes” to confirm the destination.

NOTE: If you are currently on a route guidance and you select a Fire Department the system will ask you to choose one of the following:

- Cancel previous route
- Add as first destination
- Add as last destination

You can press the “Back Arrow” button to return to the previous screen or the “X” button to exit.

16UC65J-526-AB
Second Edition
Uconnect 6.5 NAV
Printed in the USA

©2015 FCA US LLC. All Rights Reserved.
Chrysler, Dodge, Jeep, Ram, Mopar and Uconnect are trademarks of FCA US LLC.
FIAT is a registered trademark of FCA Group Marketing S.p.A.,
used under license by FCA US LLC.