


BIOBIDET®
BY BEMIS

HORIZON

USER MANUAL



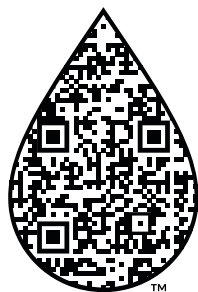

Registration and
Installation Resources

Questions?
We're here to help.

847.458.2334

support@biobidet.com

www.biobidet.com

TABLE OF CONTENTS

04

PRODUCT INFORMATION

Important Safeguards
Overview
Parts List
Remote Control

10

GETTING STARTED

Functions & Features

14

PRODUCT INSTALLATION

Installation Guide

18

MAINTENANCE

Removing The Horizon
Cleaning The Horizon
Extended Travel
Specifications

20

WARRANTY

Warranty


IMPORTANT SAFEGUARDS

PLEASE OBSERVE THE FOLLOWING PRECAUTIONS AND INSTRUCTIONS BEFORE INSTALLATION AND USE.


- This product must be connected to a grounded 120V GFCI (Ground Fault/Circuit Interrupt) outlet. Do not connect the power cord if it is damaged or broken. Do not plug the product into a loose electric outlet.
- It is recommended to operate this product on a separate circuit. Sharing a circuit could cause the breaker to trip or lights to flicker.
- If it is necessary to use an extension cord, use only a three-prong extension cord plugged into a proper GFCI outlet. The marked rating of the extension cord should be equal to or greater than the electrical rating of the unit (15 amp). Consult a qualified electrician or service person if you are not sure whether the unit is properly grounded.
- Do not open this product for repair without authorization from the manufacturer. Only qualified service personnel should service this product.
- Connect this product to a potable cold water supply line.
- Close supervision is necessary when this product is used by children, elderly, or adults with sensitive skin. A low temperature burn may occur when the skin has been in contact with an object at relatively low temperature for an extended period of time.
- If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto the bidet. Do not use benzene or any acid chemical detergent, as they can cause discoloration. Only neutral detergents are permitted.
- Do not plug in the power cord before connecting the water supply hose.
- Install in an area with adequate ventilation to avoid high levels of humidity which can damage the electronic components.
- Do not touch the power cord with wet hands or reach for a product that has fallen into water. Unplug immediately.
- Keep the power cord away from heated surfaces to prevent a fire hazard. Keep any flammable materials away from this product at all times.
- To prevent water leaks and potential property damage, use the provided installation components and ensure your toilet hose is in good working condition.

- During a power failure, unplug the power cord and turn off the water supply to prevent water leaks and property damage.
- To prevent danger, avoid using external timers or circuits to supply power, which could reset the thermal circuit breaker incorrectly.
- Always turn off the water supply before connecting or disconnecting any hoses.
- When traveling for an extended period of time, unplug and drain the bidet, and turn off the water supply to prevent any potential damage.
- If there is a danger of freezing, follow the same procedures you would normally take to protect your toilet from freezing.
- Insert batteries correctly with regards to polarity, and avoid mixing old and new batteries.
- This product includes a UV sterilization feature. Unintended use of device or damage to the housing may result in exposure to ultraviolet radiation. Skin or eye injury could result. Avoid exposure of eyes and skin to unshielded UV lamp.
- Do not use accessories not recommended by manufacturer.

OVERVIEW

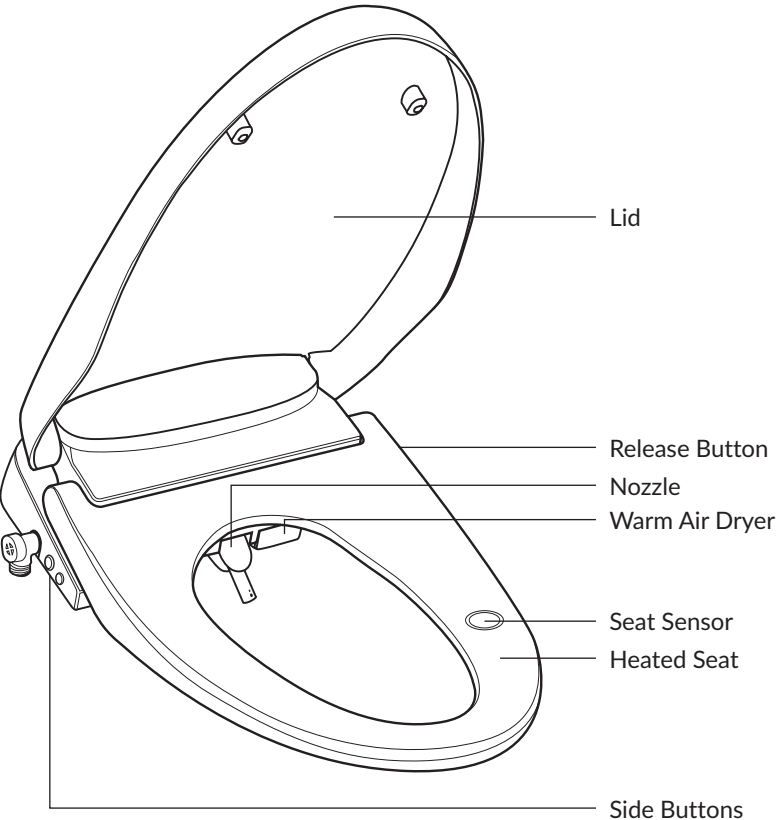

PARTS LIST

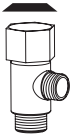

T-Valve


*Rubber washer inside




Remote Control




Remote Control Holder

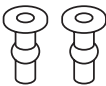

(2) Rubber Anchors

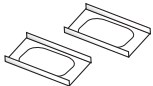


(2) Bolt Guides

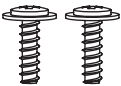

(2) Mounting Screws



Bidet Hose

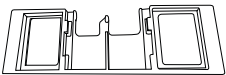


Catch Plate




(2) AAA Batteries

Side Buttons

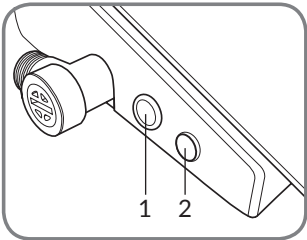

- 1. Power/Stop
- 2. Auto Wash

Stainless Steel Nozzle

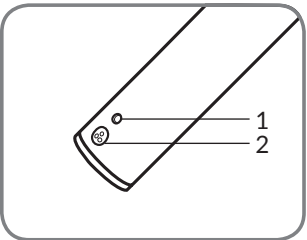

- 1. Rear Wash
- 2. Front Wash

Recommended Installation Tools




Wrench



Phillips Screwdriver

REMOTE CONTROL

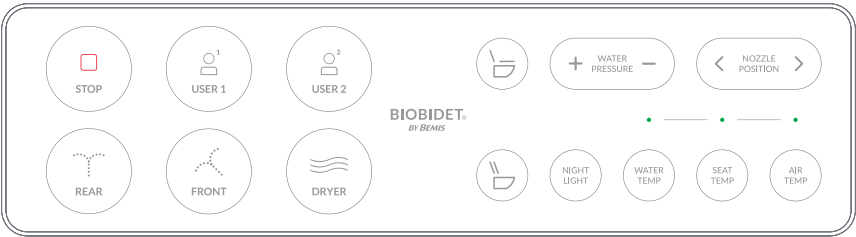

Remote Control Pairing

(Your bidet will come with the remote already paired. Follow these instructions in the event the bidet seat is not responding to the remote.)

- Unplug the bidet seat. Press and hold the “STOP” button on the remote until the indicator lights flash.
- Hold the remote close to the bidet seat and plug it back in. The indicator lights will stop flashing when the remote has successfully paired.

	Stop Button		Open/Close Seat
	User 1 Preset		Adjustable Water Pressure
	User 2 Preset		Adjustable Nozzle Position
	Rear Wash		LED Night Light
	Front Wash		Adjustable Water Temperature
	Warm Air Dryer		Adjustable Seat Temperature
	Open/Close Lid		Adjustable Air Temperature

FUNCTIONS & FEATURES

Operating Your Horizon

Sit Down On The Seat

This product includes a built-in seat sensor that must be activated with skin contact in order to operate bidet functions. The automatic cleaning feature will rinse the nozzle before each use.



Stop Button

Stops all operations.



User 1

Press to activate your preset wash settings. The default setting is a 2 minute of medium pressure Front Wash, and 4 minutes of the dryer.



User 2

Press to activate your preset wash settings. The default setting is 2 minutes of medium pressure Rear Wash, and 4 minutes of the dryer.



Settings User Presets

To set your User 1 or User 2 preset, press and hold the button. Press your desired wash mode, nozzle position, water temperature and pressure, and duration of the wash. When finished, press and hold the User button again until you hear a beep. The wash mode has been saved for future use. If you don't press and hold the button within 15 minutes, your settings will not be saved.



Rear Wash

Press to activate an oscillating rear wash. Press a second time to activate a dynamic wash that alternates temperatures to assist in stimulating bowel movements. Press a third time to disable oscillation and dynamic temperatures.



Front Wash

Press to activate an oscillating front wash. Press a second time to activate a dynamic wash that alternates temperatures to assist in stimulating bowel movements. Press a third time to disable oscillation and dynamic temperatures.



Warm Air Dryer

Reduce the need for toilet paper with a built in adjustable warm air dryer. Press to activate the warm air dryer. Adjust the fan speed to your liking.

The dryer automatically turns off after 4 minutes.



Open/Close Lid & Seat



Press to open or close the lid and/or seat. Press and hold the “open/close lid” button for 3 seconds to turn the automatic open function on/off. This is an automatic hands-free function which makes each trip to the bathroom a safe and luxurious experience.



Adjustable Water Pressure

Press the “Water Pressure” (+, -) buttons to adjust the water pressure to your liking.



Adjustable Nozzle Position

Adjust the nozzle position forward or backward to achieve maximum cleanliness and comfort by pressing the “Nozzle Position” (< >) buttons.



LED Night Light

Easily find your way at night with the soothing glow of the night light. Press to turn the night light on/off.



Adjustable Water/Air/Seat Temperature

Adjust the temperatures of the heated seat, warm water, and the warm air dryer to your liking.



- **Low** - Blue
- **Medium** - Purple
- **High** - Red

Ultraviolet (UV) Sterilization


Clean in comfort with the confidence that your bathroom and body are free from germs. The built-in UV sterilizer automatically cleanses the nozzle after each use.

Sound On/Off

Press and hold the night light button for 3 seconds to turn beeping sounds on/off.

Nozzle Clean

Press and hold the Water Temp button for 3 seconds to extend the nozzle for manual cleaning. This feature can only be activated when the seat is not occupied.

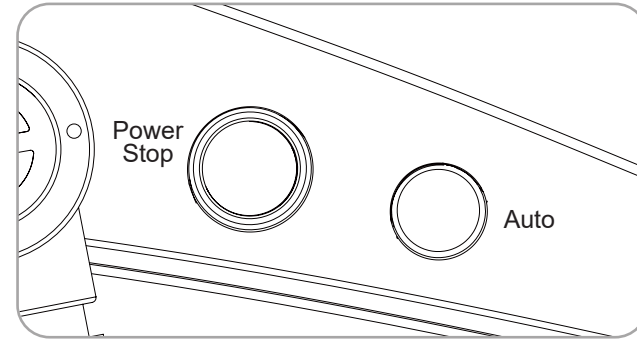

Power/Stop Button (Side button)

Turn the bidet on/off by pressing the “Power/Stop” button on the side.

Short press to power on or long press to enter standby mode. Short press while powered on to stop any operations.

- When the power button is **blue**, it is in UV sterilization mode or in use.
- When the power button is **red**, it is ready to use.

Auto Wash (Side button)

Press to activate an automatic wash sequence consisting of a 2 minute rear wash and a 4 minute drying sequence. Wash settings will be at a low pressure, medium temperature, and standard nozzle position, while the dryer settings will be at a low speed and medium temperature.


INSTALLATION GUIDE

CAUTION BEFORE INSTALLATION

Do not plug in before installation. Please contact our service center at 847.458.2334 for alternate fittings or assistance with this process.

1. Turn Off Water

Turn off the water shut-off valve. Drain the toilet tank completely by flushing the toilet. Unscrew the hose connected to the toilet tank.

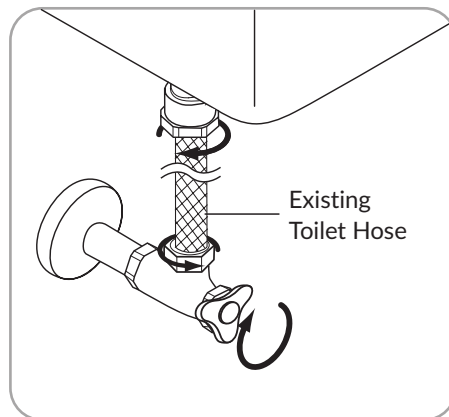


2. Remove Seat & Lid

Remove mounting bolts to release the existing toilet seat from the toilet.




3. Install Catch Plate

Insert the rubber anchors into the mounting holes. Place the catch plate and guides over each mounting hole. Insert the mounting screws through the bolt guides, catch plate, and into the rubber anchors. Fasten the catch plate to the toilet tank.

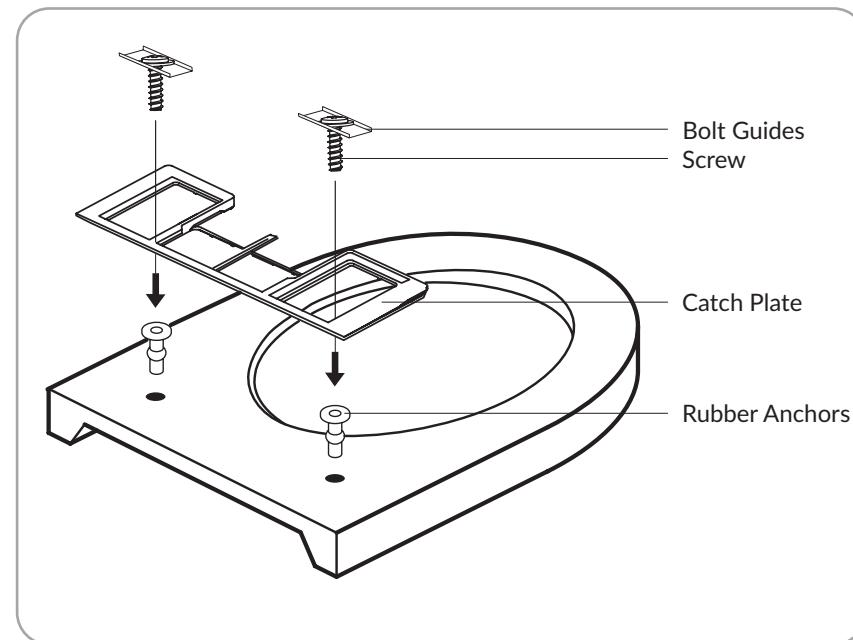

4. Install Your Horizon

Slide the bidet seat all the way onto the catch plate until you hear a click.

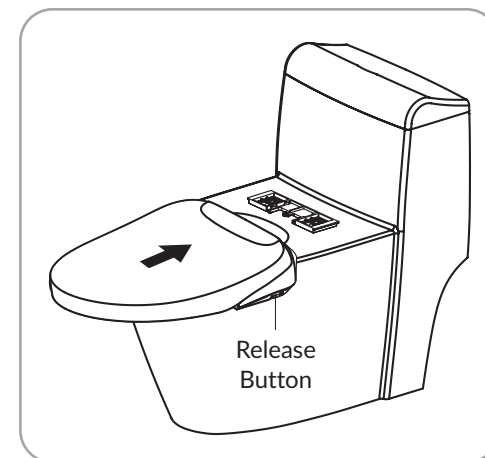

5. Connect the Water Hose


*Shut-off valve may vary. If supplied parts do not fit, please call 847.458.2334. Alternate fittings are available upon request.

- Install the t-valve on to the toilet tank. Ensure the rubber gasket is properly seated inside the t-valve.
- Connect the existing toilet hose to the water shut-off valve and t-valve.
- Connect the bidet hose to the bidet seat and t-valve.
- Open the water shut-off valve. Check for any leaking or dripping.


6. Plug It In!

Plug the power cord into a 120V power outlet.
Please contact our service center at 847.458.2334 if you have any questions.

7. Mounting the Remote

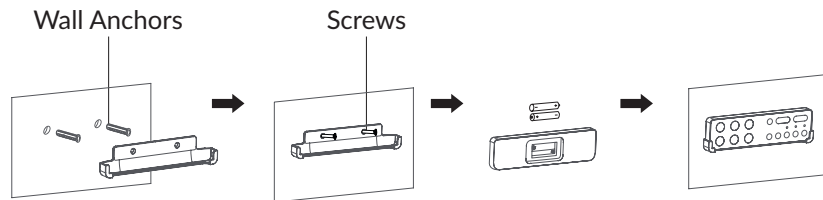


- Drill two 6mm holes on the wall that lines up with the remote holder.
- Install the wall anchors in the newly drilled holes.
- Place the remote holder over the wall anchors and attach it to the wall with the provided screws.
- Insert supplied batteries (1.5V AAA), close the battery cover, and place the remote control in the holder.

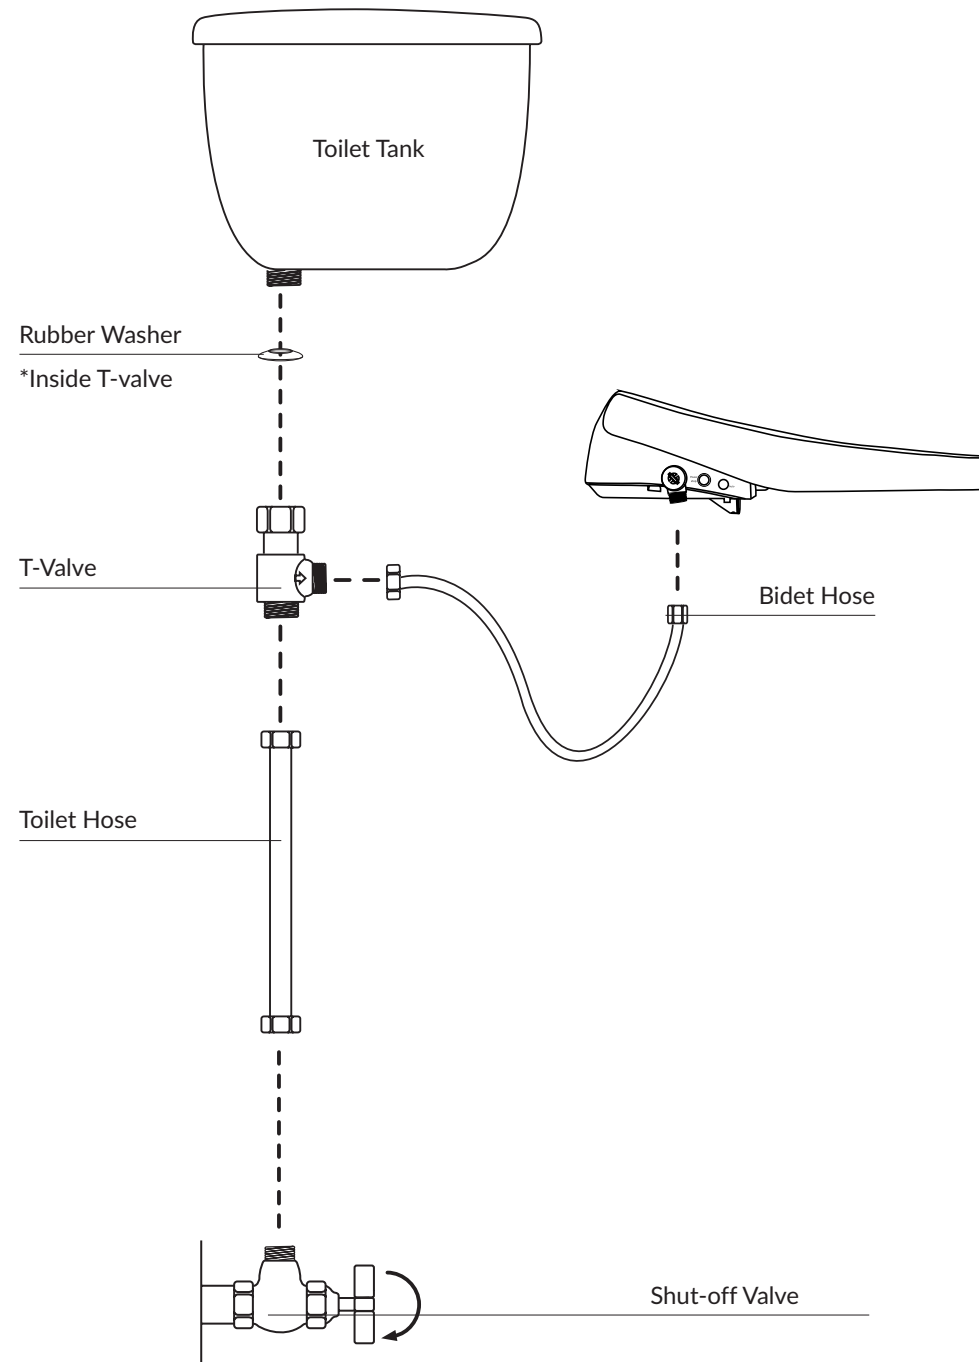

MAINTENANCE

Removing the Horizon

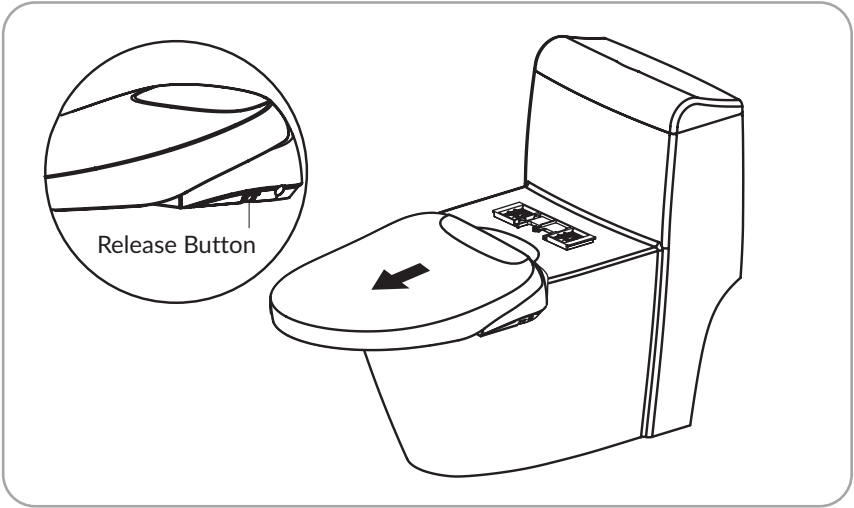

1. Disconnect the power plug.
2. Close water supply shut-off valve.
3. Drain the water from the bidet by holding the release button as shown above.
4. Remove the bidet seat from toilet as illustrated.

Cleaning the Horizon

- Do not use thinner, benzene or toilet bowl cleaner, as it may cause discoloration or damage.
- Disconnect the power cord and use a wet cloth when you clean this product. Do not spray water directly on to this product.

Extended Travel

When the seat will not be used for more than a few days, it is recommended to unplug the unit and turn off the water shutoff valve.

SPECIFICATIONS

Specifications	Horizon
Model	Horizon
Rated Voltage	120 V, 60 Hz
Rated Power	1050 W
Waterproof Guide	IP X 4
Seat Temperature	Off / 93.2 - 102.2°F
Water Temperature	Off / 95 - 102.2°F
Water Heating	Instant
Air Temperature	95-131°F
Ambient Temperature Requirements	33.8-104°F
Dimensions (Elongated)	20.79 in. x 16.38 in. x 5.59 in.

WARRANTY

2 YEAR LIMITED WARRANTY

Bemis warrants that this product will be free of defects in material, workmanship,

and title for a period of two (2) years from the date of original purchase.

If you provide written notice of a defect to Bemis within the applicable warranty period and provide adequate documentation or evidence that establishes a Product defect to Bemis's satisfaction, your sole remedy is the repair, replacement, or refund of the Product's purchase price (less shipping, if applicable), at Bemis's option.

Bemis may, at its option, require the return of any Product for inspection and testing before honoring any defect claim. This Limited Warranty excludes component parts not specified by Bemis, and excludes costs related to shipping and labor, including removal, disposal, repair, or replacement of the defective Product and installation of replacement Product (if applicable). Products returned for a refund must be in original packaging and in saleable condition, and may be subject to a restocking fee. Discontinued colors or models, and custom or specially ordered Products cannot be returned for a refund.

This Limited Warranty is void if: (a) the Product has not been installed, used, or maintained according to any applicable written materials, including written instructions, specifications, packaging, and manuals; (b) the Product is not used for the intended application, or (c) the Product has been modified or repaired without Bemis's express written permission.

THIS LIMITED WARRANTY IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. BEMIS EXPRESSLY DISCLAIMS LIABILITY FOR SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL OR INCIDENTAL DAMAGES ASSOCIATED WITH THE PRODUCT, INCLUDING LOST PROFITS OR BUSINESS INTERRUPTIONS. BEMIS'S LIABILITY UNDER THESE TERMS AND CONDITIONS SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCTS.

Please see BemisMfg.com/terms-and-conditions for complete warranty terms.

BIOBIDET®
BY BEMIS

BIO BIDET INNOVATION LLC

7900 S IL Route 31 Crystal Lake IL 60014

T: 847.458.2334

F: 847.854.1296

support@biobidet.com

www.biobidet.com

[illegible][illegible]

THANK YOU!

BIOBIDET®

BY BEMIS

Bio Bidet Innovation LLC

T: 847.458.2334

TOLL-FREE: 877.339.5214

7900 S IL Route 31 Crystal Lake, IL 60014

support@biobidet.com

www.biobidet.com