




MEDIFY AIR_x

A HIGHER STANDARD OF AIR PURIFICATION

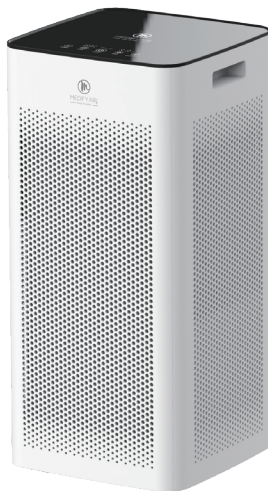

MA-112-PRO AIRPURIFIER

READ AND SAVE THESE INSTRUCTIONS
INSTRUCTION MANUAL AND WARRANTY INFORMATION
Lifetime warranty if replacing filters on time

MA-112-PRO
Rev: 08/02/23

IMPORTANT SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

IF THE POWER CORD OR UNIT DOES NOT WORK, CONTACT MEDIFY CUSTOMER SERVICE IMMEDIATELY.

READ ALL INSTRUCTIONS BEFORE USING.

DANGER — TO REDUCE THE RISK OF ELECTRICAL SHOCK:

- Always unplug the air purifier from the electrical outlet immediately after using it and before cleaning or replacing filters.
- Keep the cord away from heated surfaces.
- Always place the air purifier on a firm, leveled surface.
- Always place the air purifier at least 6 inches away from walls and 3 feet from heat sources such as stoves, radiators, or heaters.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- Keep dry — DO NOT operate in wet or moist conditions.
- Check your air purifier cord and plug connections. Faulty wall outlet connections or loose plugs can cause the outlet or plug to overheat. Be sure the plug fits tightly in the outlet.

NOTE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

DO NOT attempt to defeat this safety feature. To do so could result in an electrical shock hazard.

WARNING — TO REDUCE INJURY TO PERSONS:

- Always unplug the air purifier when not in use.
- Do not operate the air purifier with a damaged cord or plug, or after the air purifier malfunctions, or has been dropped or damaged in any manner. Contact www.medifyair.com for examination, electrical or mechanical adjustment, or repair.
- Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 110v unit with a 110v power supply. You can break or ruin the circuit boards if you plug a 110v plug into a 220v power supply.
- This air purifier is not intended for use in bathroom, laundry areas, and similar moist indoor locations.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings.

- Do not route cord under furniture or appliances. Arrange the cord away from traffic areas where it can be tripped over.
- To disconnect the air purifier, first turn controls to the off position, then remove the plug from outlet.
- Do not tilt or move the air purifier while it is in operation. Shut it off and remove the plug from the outlet before moving it.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock or fire, or damage the air purifier.
- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where openings may become blocked.
- Use this air purifier only for its intended use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
- DO NOT use outdoors.
- **WARNING :** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
- **WARNING :** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.
- Appliance is used on the floor.

SAVE THESE IMPORTANT INSTRUCTIONS FOR EASY REFERENCE.

UNIQUE FEATURES & SPECIFICATIONS

GENUINE MEDIFY TRUE HEPA H13 FILTRATION SYSTEM

• TRUE HEPA H13 FILTRATION

Removes up to 99.9% of airborne particles as small as 0.1 microns, such as allergens, pollen, dust, germs, pet dander, odor, mold spores, and smoke from the air that passes through the filter.

• CARBON ODOR FILTRATION

Reduces household odors and VOCs (volatile organic compounds)/gases as shown by independent laboratory testing.

• PRE-FILTER

Captures large particles.

4 SPEEDS

1, 2, 3 and 4 speeds.

BUILT-IN TIMER

Choose from 2, 4, 8 or 12 hours.

REPLACE FILTER INDICATOR

Illuminates when it is time to replace the filter.

Noise Levels				
Model No.	Noise level for speed 1 (dB)	Noise level for speed 2 (dB)	Noise level for speed 3 (dB)	Noise level for speed 4 (dB)
MA-112-PRO	33.1 dB	35.4 dB	46.6 dB	62.0 dB


SUGGESTED ROOM SIZE

Up to 1102 sf every 15 min and up to 2205 sf every 30 min. Portable air purifiers will be more effective in rooms where all the doors and windows are closed.


AIR CHANGES PER HOUR

This air purifier will purify the air up to 1102 sf every 15 min and up to 2205 sf every 30 min (assuming an 8 FT/2.43 M ceiling) on high speed in a closed room.

EPA Est. No.:88959-CHN-1

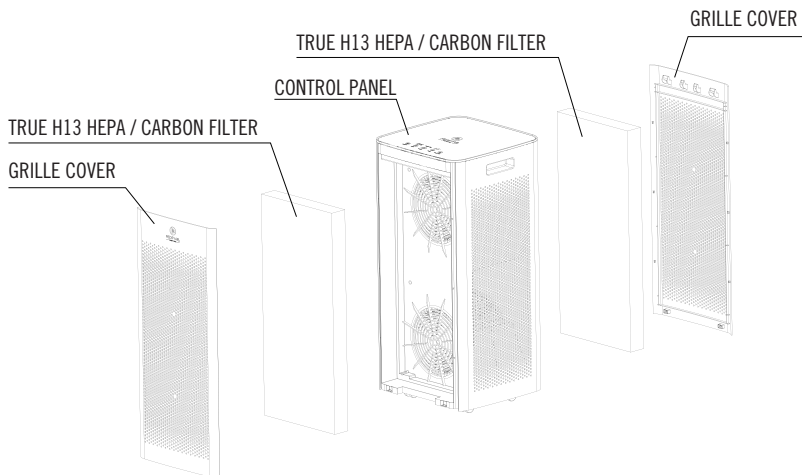

CONTROL PANEL

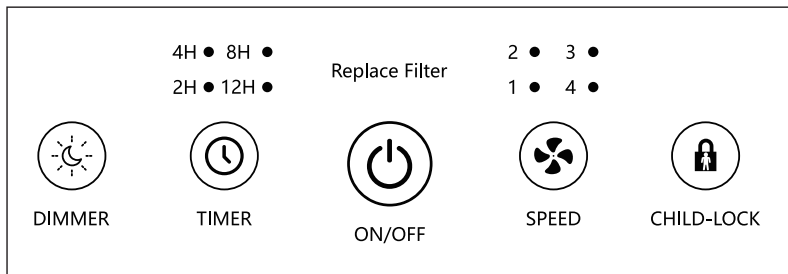

HOW TO USE

BEFORE TURNING THE UNIT ON

- Take the air purifier out of the box.
- Place the air purifier on a firm, level surface.
- Plug the power cord into a standard AC outlet.

POWER BUTTON AND FAN SPEED SETTINGS

- To turn the air purifier on, press the power  button.
- This air purifier has 4 fan speed settings: 1, 2, 3 and 4. The higher the fan speed setting, the faster the air will be purified. To select or change fan speed, press the fan speed  button until the desired setting is reached.

TIMER

Press the timer  button until the desired timer setting is lit on the display. The timer  button will cycle through the following settings: 2 hours, 4 hours, 8 hours, 12 hours and off. To cancel the timer at any time, press the timer  button until all timer LEDs are off. The air purifier will run continuously when the timer function is off.

DIMMER

Press the dimmer  button to change the backlight to desired brightness, there are 4 brightness levels to change for all buttons' backlight LEDs. The dimmer  button backlight will turn off for 1 second when the dimmer button has been pressed.

CHILD-LOCK BUTTON

Press the child-lock button  and hold it down for 3 seconds and all functional buttons will be locked. Press and hold down again the child-lock button for 3 seconds and all functional buttons will be unlocked.


FILTER REPLACEMENT

REPLACE FILTER LIGHT


The replace filter light illuminates when it is time to replace the True HEPA H13 filter based on the air purifier's hours of use.

REPLACING THE TRUE HEPA H13 FILTER


For optimal performance, replace every 2,500 hours under normal usage conditions. Once the filter has been replaced, press and hold the dimmer  button for 3 seconds to reset the indicator.

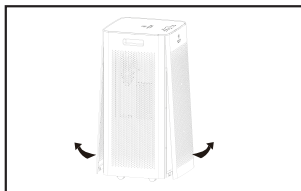

1. Unplug the air purifier. Open the filter grille covers on the left and right of the unit by pushing the lock tabs on the top of the covers.

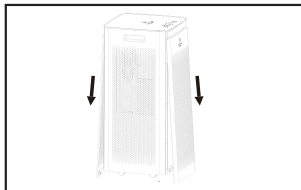


2. Remove the grille covers from the unit.

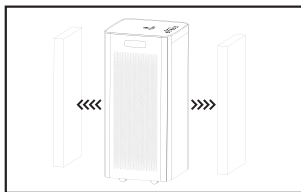


3. Pull the tabs to remove the old filter.


To purchase genuine Medify replacement True HEPA H13 filters, for model MA-112-PRO visit www.medifyair.com.

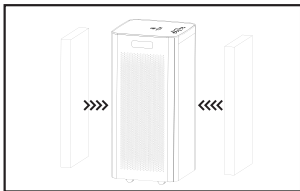

4. Install a new genuine Medify replacement filter with the filter tabs facing out.

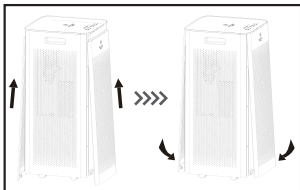

5. Align the tabs at the bottom of the grille covers with the unit. Gently push the grille covers until they snap back into place.

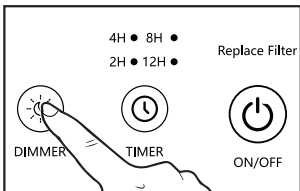


6. Plug the power cord into a standard AC outlet. Press and hold the dimmer  button for 3 seconds to reset the indicator.

CLEANING AND MAINTENANCE

CLEANING THE PRE-FILTER

NOTE: For the best performance, vacuum the pre-filter once a month under normal usage.

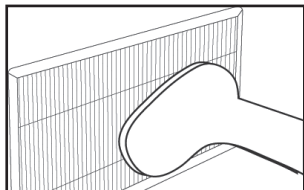

1. Unplug the air purifier.
2. Remove the True HEPA H13 filter as described in the Replacing the True HEPA H13 Filter section.
3. Place the True HEPA H13 filter back into the air purifier and close the grille.
4. Plug the power cord into a standard AC outlet.

FOR THE BEST PERFORMANCE

- NEVER use water or any household cleaners or detergents to clean the True HEPA H13 filter.
- Clean off the outside of the unit with a dry cloth as needed.
- NEVER use water, wax, polish, or any chemical solution to clean the outside of the unit.
- Clean off the grille cover using a damp cloth or the brush attachment of your vacuum as needed.
- Vacuum the pre-filter monthly under normal usage conditions.
- Replace the True HEPA H13 filter every 2,500 hours under normal usage conditions.
- Always use a genuine Medify replacement filter for optimal performance.



This product earned the ENERGY STAR by meeting strict energy efficiency guidelines set by the US EPA. US EPA does not endorse any manufacturer claims of healthier indoor air from the use of this product. The energy efficiency of this ENERGY STAR qualified model is measured based on a ratio between the model's CADR for dust and the electrical energy it consumes, or CADR/Watt.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Unit will not operate	Unit is not plugged in	Plug the unit in
	Power button not pressed	Press the power button to turn the power on
	No power to unit	Check circuits, fuses, try a different outlet
Reduced airflow	The back grille may be blocked	Make sure side intakes are not blocked or the front outflow area
	The filter needs to be replaced	Replace the filter
Reduced odor removal	The filter needs to be replaced	Replace the filter
Excessive noise	The unit is not level	Place the unit on a flat and level surface
Replace filter light remains lit after filter replacement	The replace filter indicator needs to be reset	Press and hold the DIMMER button for 3 seconds until the replace filter light turns off

WARRANTY INFORMATION

If you have any additional questions, please contact customer service. All names and trademarks are property of Medify Air. Our company reserves the right to change the product at any time, without prior notice, and the company has no obligation to adjust any products supplied earlier. Please refer to the detailed warranty terms below. To register for the lifetime warranty, please fill out the attached form and mail it to:

Medify Air

150 E Palmetto Park Road Suite 301

Boca Raton, FL 33432

Or complete the limited lifetime warranty registration available on our website (preferred method):

www.medifyair.com

LIMITED LIFETIME WARRANTY

Medify guarantees your Medify Air Purifier to be free of defects in material or workmanship for a lifetime period, provided you have completed and returned your warranty registration to Medify Air within the first 30 days of purchase, and that the filters are replaced with original and genuine Medify Air replacement filters at least once every three to four (3-4) months or after 2,500 hours of use. Within the first 30 days, Medify Air will replace the defective unit at no charge to you and reimburse you for any shipping charges. After 30 days, Medify Air's obligation and liability under this Lifetime Warranty is dependent on your use of our genuine filters, purchased on our website or from our authorized resellers, which can be found on our website. Prohibited use beyond power. Can only use a 220v unit with a 220v power supply. Can only use a 110v unit with a 110v power supply. You can break or ruin the circuit boards if you plug a 110v plug into a 220v power supply.

Our Lifetime Warranty remains in effect as long as:

1. You submit your warranty registration to Medify Air within 30 days of purchase.
2. You change filters with genuine and original Medify Air replacement filters at least once every three to four (3-4) months or after 2,500 hours of use (whichever comes first).
3. You use a proper power supply based on voltage: 110-120V.
4. There is no evidence of tampering, mishandling, neglect, accidental damage, modification, and/or repair done to the Medify Air purifier by anyone other than authorized Medify Air service personnel.
5. Your air purifier is operated in accordance with the provided instructions.

This Lifetime Warranty is provided by:

Medify Air

150 E Palmetto Park Road Suite 301

Boca Raton, FL 33432

www.medifyair.com
info@medifyair.com
(888) 258-1008

Please visit our website for
details on efficacy test data:
medifyair.com/pages/reports