


RENPHO

USER MANUAL

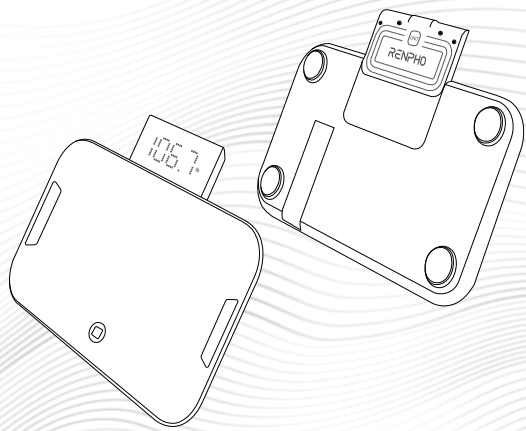

CORE GO

Model: R-MSD03

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


1. This scale is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the scale by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the scale.
3. The scale is for household use only and not for medical or commercial purposes.
4. Do not overload the scale.
5. Inspect the scale for any damage before each use. Do not use a damaged scale to avoid inaccuracy or injury.
6. Only use the provided charging cable and charger (DC 5V 0.5A, not included) to charge the scale.
7. To ensure accuracy, use the scale on a hard, flat and dry surface.
8. To avoid interference or danger, do not use the scale in an environment near equipment with strong electromagnetic fields.
9. To prevent injury, do not stand on the edges of the scale, jump on or stomp it.
10. The scale is a delicate and precise measuring device. Handle with care to avoid breakage.
11. The scale is not waterproof. Keep it dry and never submerge it in water. To clean the surface, use a damp cloth or glass cleaner. Do not use soap or chemical cleaning agents.
12. Do not expose the scale to direct sunlight or use it in high temperatures or extremely humid areas. Store the scale in a cool, dry place.
13. Do not attempt to disassemble the scale for any reason, as this may cause damage or void the warranty.

01

WHAT'S IN THE BOX

RENPHO Core Go x1
Silicone Cover x1
Cleaning Cloth x1
USB-C Charging Cable x1
EVA handbag x1 (Optional)

ABOUT YOUR RENPHO CORE GO

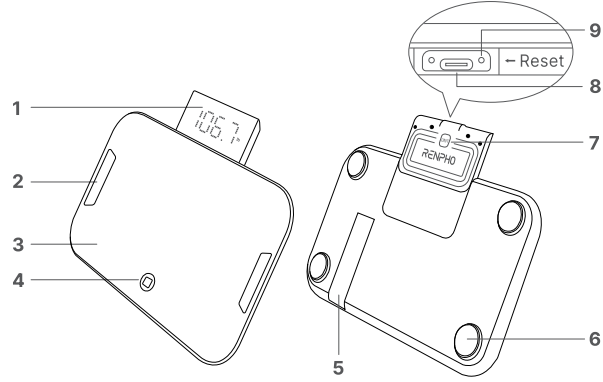

1. LED Display

2. LED Light

3. Weighing Platform / Mirror

4. Light Key

5. Folding Kickstand

6. Foot Pad

7. Unit Conversion Button

8. USB-C Charging Port


9. Reset Button

03

Icons

Icon	Description
st lb kg	Units Switched via the unit conversion button.
Err	Overloaded Maximum Capacity: 400 lbs / 180 kg.
Lo	Low Battery Charge the scale.

CHARGING YOUR RENPHO CORE GO

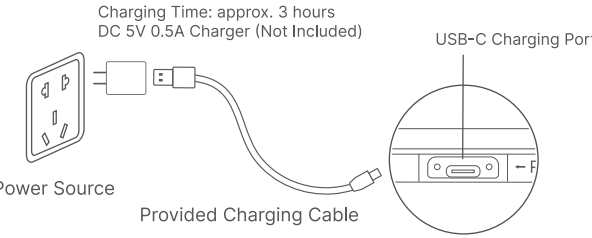

Charging Time: approx. 3 hours
DC 5V 0.5A Charger (Not Included)

Power Source

Provided Charging Cable

USB-C Charging Port

04

RENPHO


Made in China

NA1

USING YOUR RENPHO CORE GO

1. Use as scale

a. Pull out the LED display.

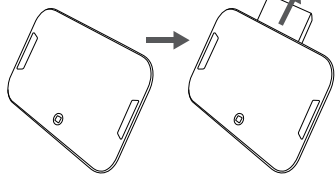


b. Ensure the scale is placed on a flat, hard surface.

c. After calibrating the scale, step on the scale with bare and dry feet.

d. Stand and keep still until the scale emits 2 beep sounds or the weight measurement flashes twice to indicate your final measurement.

Note:

- The display will automatically turn off after 10 s of idle time.
- To prevent the mirror from dirt, weigh with silicone sleeve on the scale.

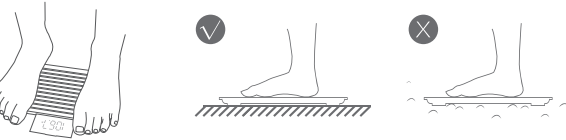

05


2. Use as mirror

a. Take off the silicone sleeve.

b. Unfold the folding kickstand.

c. Tap the Light Key to cycle through: cold light 1, cold light 2, warm light 1, warm light 2, light off.


Note: Makeup light is only available when the display is off.

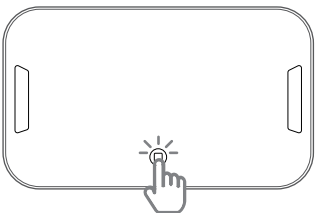

INITIALIZING / RESETTING YOUR RENPHO CORE GO

1. There are 3 ways to initialize the scale: press the unit conversion button, connect the scale to a power source, or use a pin (not included) to press the Reset Button.

2. To reset the scale, insert a pin into the Reset Button, press and release.

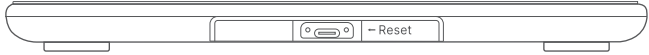

06


CALIBRATING YOUR RENPHO CORE GO

Calibrate the scale before each use to ensure accuracy.

1. Place the scale on a flat, hard surface. Avoid any carpeting.

2. Step on the scale with a single foot to activate it and then step off.

3. The display will show "0.0" or "0.00" to indicate calibrating is complete.

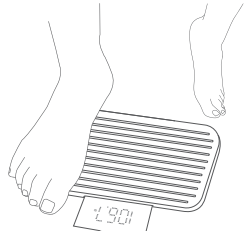

07

TECHNICAL SPECIFICATIONS

Product Name: Digital Scale
Model: R-MSD03
Maximum Capacity: 400 lbs / 180 kg
Division: 0.1 lb / 0.05 kg
Dimension: 228 x 134 x 16.5 mm / 8.98 x 5.28 x 0.65 in
Battery Capacity: 500mAh 1.85Wh
Input: 5V $\approx$ 0.5A
Rated Power: 2.5W

CLEANING & MAINTENANCE

1. Unplug before cleaning.

2. Wipe the mirror with the provided cleaning cloth. If necessary, wipe the housing and silicone sleeve with a slightly damp cloth.

Note:

- Do not submerge the scale in water.
- Do not clean with abrasive chemicals or flammable cleaning agents.

08

WARRANTY POLICY

Your RENPHO product purchase is covered by a one-year limited manufacturer warranty from the date of delivery.

For warranty terms and conditions, please visit:
<https://renpho.com/pages/warranty-terms-and-conditions>

Note: Product registration is not required for the warranty. If you choose not to register your product, it will not void the product warranty.

CUSTOMER SERVICE

Please feel free to contact us if you have any questions or concerns. RENPHO Customer Service Team guarantees a quick response and hassle-free solutions to any issue you may have within business hours.

TEL: +44(0)7434 666088 (UK ONLY)
Monday-Friday 9:00AM-5:00PM (GMT)
+1(844) 417 0149 (US&CA)
Monday-Friday 9:30AM-4:30PM
1800 MY RENPHO (1800 60 7387) (AU ONLY)
Monday-Friday 9:00AM-6:00PM (AEST)
+49 40 23969285 (DE ONLY)
Monday-Friday 8:00AM-6:00PM (CET)

Email: support-eu@renpho.com (UK&EU)
support@renpho.com (US&CA)
support-au@renpho.com (AU)

* For defective products or the return of items, please contact us with your order number within the specified warranty period. DO NOT dispose of any product parts as they may be required for inspection/repair.

09

FCC Regulatory Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Regulatory Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1: This device may not cause interference.
- 2: This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. L'appareil ne doit pas produire de brouillage.
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

10