


Use & care manual

COOLING SEAT CUSHION WITH MASSAGE

SL-252

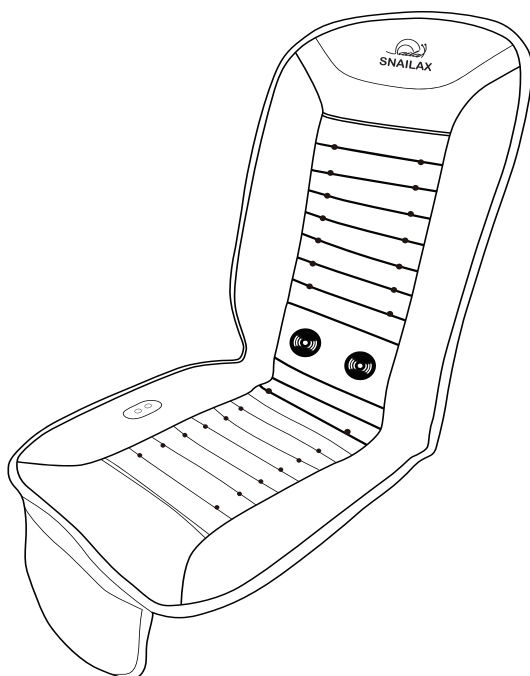

Healthcare serie SL-252


Thank you for purchasing “Snailax” healthcare serie product. please read carefully all the safety instructons and warnings in our manual before using this product to ensure trouble-free operaton and optimum efficiency.

Please retain this user manual for further reference!

Safety Instructions

1. This product should not be used by children without adequate adult supervision.
2. Consult your doctor prior to using this product, if you are pregnant, you are fitted with a cardiac pacemaker, implant or other aid, you are suffering from diabetes, you have any concern regarding your health.
3. Do not use if you have sensitive skin, skin disorders or open wounds.
4. Discontinue use immediately should you feel any discomfort or pain.
5. Never leave the product unattended, especially if children are present.
6. Do not cover the product or obstruct the air vents when it is in operation.
7. Avoid excessive use of the product. Extensive use could lead to increased wear and tear and shorten product lifespan.
8. Remove adaptor from socket when not in use.
9. To minimize risk of electric shock, do not use on wet skin.
10. Keep product away from moisture. Do not use if the product or any of its components or accessories are damp or wet.
11. Product is intended for indoor use only.
12. Do not dismantle or attempt to dismantle or replace product components.
13. Use only with the supplied accessories. Voltage must be compatible with the voltage indicated on the supplied power adaptor.

Failure to observe the above instructions may constitute misuse of the product and can cause serious injury or burns.

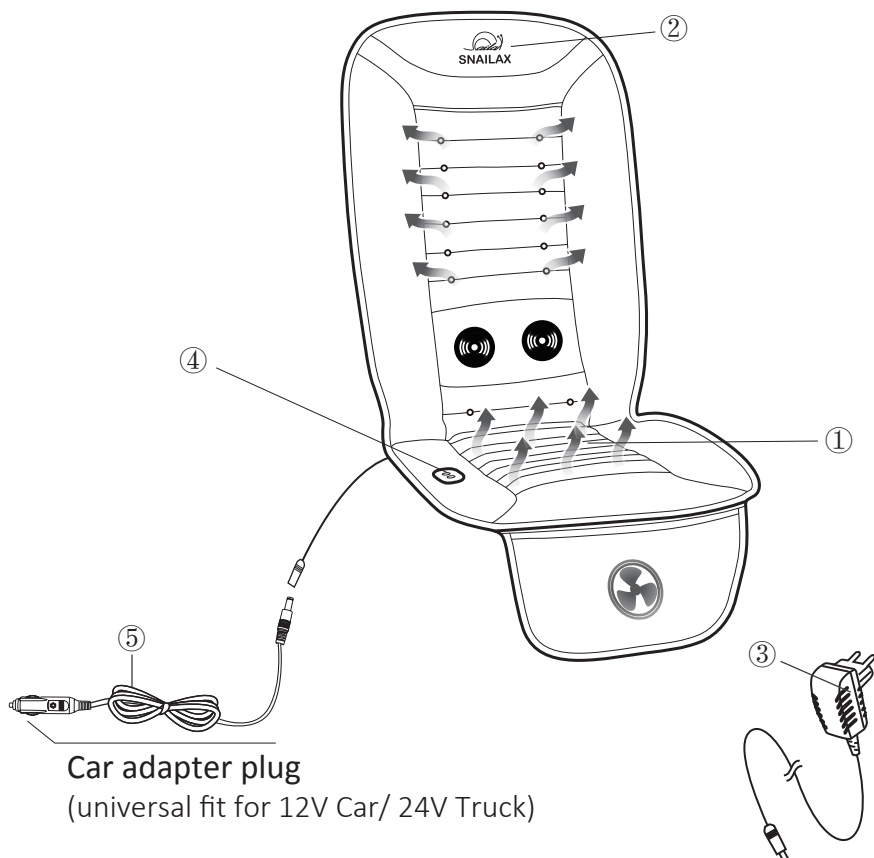

Car adapter plug
(universal fit for 12V Car/ 24V Truck)

Contents:

- ① Cooling Seat Cushion with Massage
- ② Snailax Logo
- ③ Home Adapter (input:100-240V)
- ④ Control Panel
- ⑤ Car adapter (input 12V-24V)

Installation Instruction (on the Car Seat)

Accessories:



A

elastic strap



B

buckle




C

plastic clip


Installation Steps:

Secure the cushion in place by wrapping the elastic strap (A) around the car seat

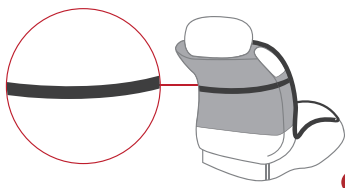


1

Fasten the buckle (B) around the back of the headrest

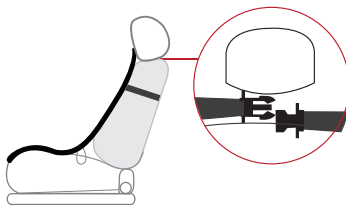


2

insert the plastic clip into the gap between the back and seat, pull and adjust for a secure lock.

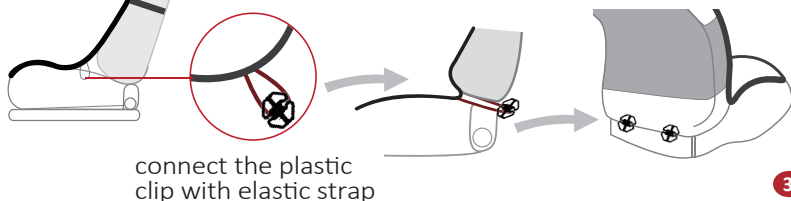

connect the plastic clip with elastic strap

3

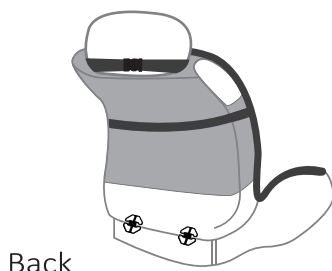

Back



DONE!

Front

Controller Instruction



Massage:

Press to choose I high/ II low /off

Cool Air:

Press to choose I high/ II low /off

⚠ Attention !

The cushion be 1.2 inches thickness, will increase seat height while put on the car seat. Please adjust the seat to a comfortable position before driving.

⚠ Attention !

Please only use the provided home adapter and car adapter.

For safety practice, heating function is set with an auto-off 30-minute timer so it will turn off automatically after 30 minutes. No auto-off timer for cooling.

- ⚠ The massage can be operated independently or simultaneously with Cooling function.

Technical Data & Troubleshooting

Technical Specifications:

Dimension:	41.7x18.5 inches
Weight:	2.2lbs
Voltage:	Input: AC 100-240V ~ 50/60Hz Output: 12VDC 1.0A
Nominal Power:	max. 12Watt

Troubleshooting:

TROUBLE	CORRECTION
NO POWER	CHECK IF ADAPTER IS PLUGED PROPERLY INTO SOCKET.
	CHECK IF ADAPTER OUTPUT IS CONNECTED PROPERLY TO PRODUCT POWER INLET WIRE.
SUDDEN POWER-OFF	CHECK IF ALL CONNECTIONS BE IN APPROPRIATE CONDITION. PRESS THE POWER BUTTON TO TURN ON THE DEVICE.
	CHECK IF IT IS CAUSED BY AUTO-OFF TIMER AFTER 30 MINUTES HEATING. IF SO, PRESS AGAIN THE "POWER" BUTTON TO SWITCH IT ON.

Care and Cleaning Instruction

1. Do not wash the cushion in washing machine or immerse the product in water.
2. Wipe the product with a soft, dry cloth to clean the product.
3. Always turn off before cleaning.
4. Do not wipe the product with alcohol or harsh chemicals such as thinner or bleach.
5. Do not overstretch the elastic back straps.
6. Do not cause obstruction to the blower inlets.
7. Keep the air vents and inlets clear of dust and dirt build-up.
Vacuum the product if needed.
8. Keep away from moisture, heat, fire or exposure to direct sunlight.
9. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric surface.

Warranty

30-Day Money Back Guarantee for any reason

Snailax product can be returned to receive a full refund for any reason within 30days. Please contact our customers service (support@snailax.com), our staff will contact you within 48 hours.

90-Day Money Back Guarantee for quality related issue

Snailax product can be returned / replaced within 90 days if the product break down in the period of proper use.

24-Month Warranty for quality related issue

If the product break down within 24 months in the period of proper use, customers can enjoy the relevant warranty to get them replaced.

Attention!

No warranty will be given to any force majeure and man-made causes to a defective product, such as improper care, personal tear down and willful damage,etc.

Gratitude

We are quite thankful for your trust in our Snailax brand. Snailax will continuously bring you a better user experience.

To learn more information about Snailax's healthy products, please visit:
www.snailax.com
www.facebook.com/Snailax

WARRANTY REGISTRATION !

You can activate the 2-year free warranty:

Send message "WARRANTY" to phone: +1.734.709.6982

or send "WARRANTY" to support@snailax.com



1687 Plymouth Rd, Unit C,
Ann Arbor, MI, 48105 U.S.A

Tel.+1.734.709.6982

support@snailax.com

www.snailax.com