






Parts Manual

Mfg. No: 21B807-4123-H1


Model Components	Page
Air Cleaner, Blower Housing.	4
Alternator, Electric Starter, Ignition.	6
Camshaft, Crankshaft, Lubrication, Piston, Rings, Connecting Rod.	10
Carburetor, Kit - Carburetor Overhaul.	12
Controls, Fuel Supply, Governor Spring.	14
Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Intake Manifold, Valves.	16
Cylinder, Engine Sump, Lubrication, Operator's Manual, Warning Label.	20
Exhaust System, Flywheel.	22
Replacement Engine - US & Canada.	24


Not For
Reproduction

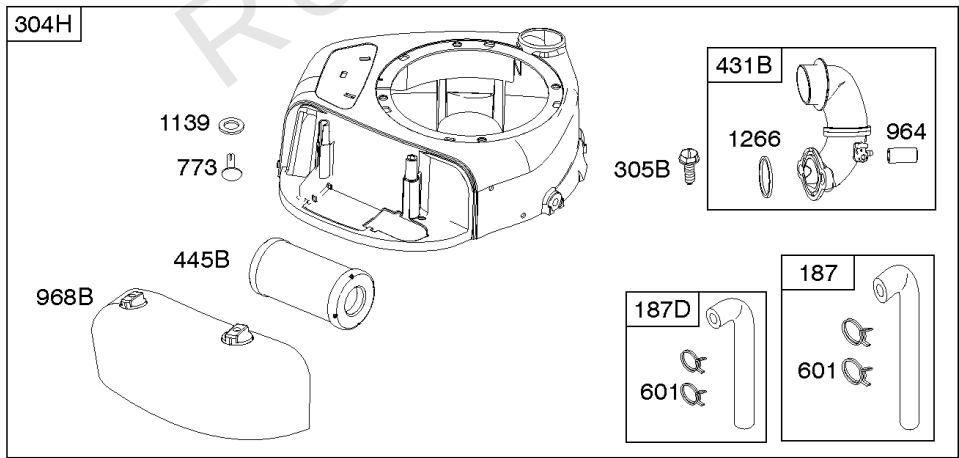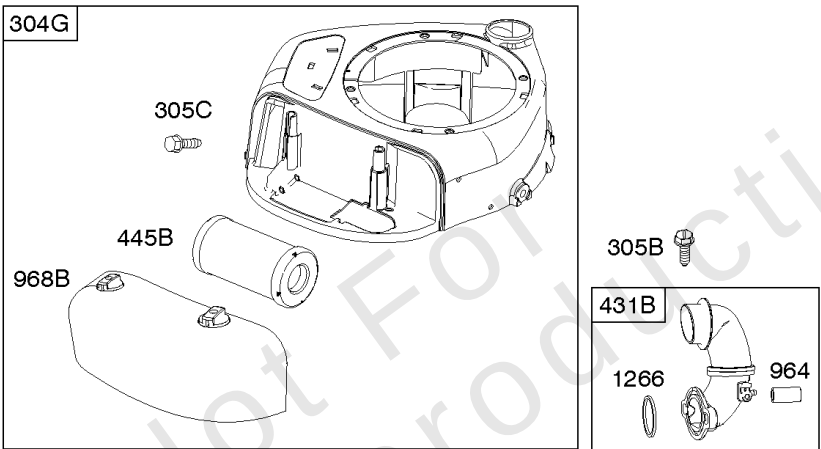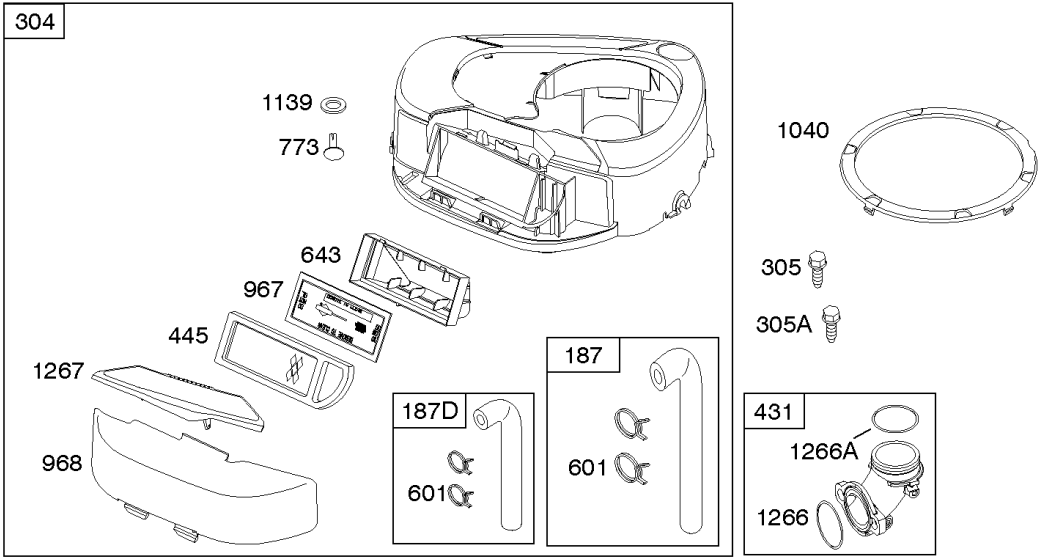

Air Cleaner, Blower Housing








REF NO	PART NO	QTY	DESCRIPTION
187	791805		LINE, Fuel -(Formed)(10-1/4" Long)(Cut to Required Length)
187D	791744		LINE, Fuel -(Formed)(14 Inches Long)(Cut To Required Length)
304G	591641		HOUSING, Blower -(Black-Compatible With Canister Style Filter)
305	697102		SCREW -(Blower Housing)
305A	793376		SCREW -(Blower Housing) (Used On Non-Grommet Style Blower Housings)
305C	799370		SCREW -(Blower Housing) (Used On Grommet Style Blower Housings)
305B	795891		SCREW -(Blower Housing)
431B	797901		ELBOW, Intake
445	797007		FILTER, A/C Cartridge -(Flat Panel)
445B	591583		FILTER, A/C Cartridge -(Canister)
601	791850		CLAMP, Hose -(Green)
601	691038		CLAMP, Hose -(Black)
643	697155		RETAINER, Air Filter
773	796448		RETAINER
964	799159		CAP, Connector
967	697292		FILTER, Pre Cleaner
968	697420		COVER, Air Cleaner -(Black-Compatible With Panel Style Filter)
968B	591646		COVER, Air Cleaner -(Black-Compatible With Canister Style Filter)
1040	698368		PLATE, Trim
1139	796449		WASHER -(Fuel Pump Bracket)
1266	691917		SEAL, O-Ring -(Intake Elbow)
1266A	697123		SEAL, O-Ring -(Intake Elbow)
1267	697419		LATCH, Blower Housing -(Black)

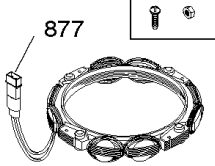DUAL CIRCUIT		5/9 AMP		TRI CIRCUIT	
474B	1059	474C	1059	474C	1059
					

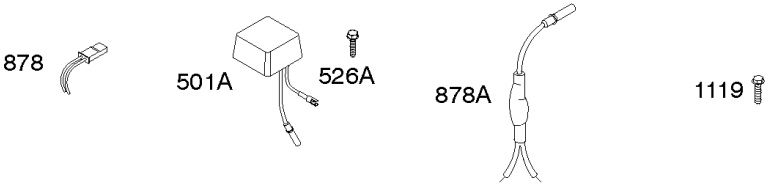

NOTE: All stators use a No. 1119 mounting screw.


NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

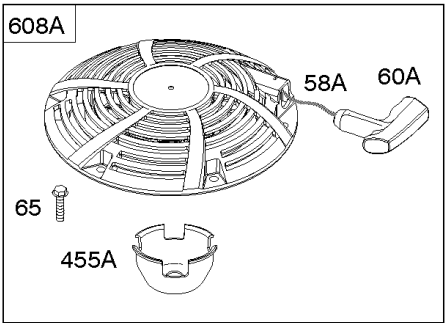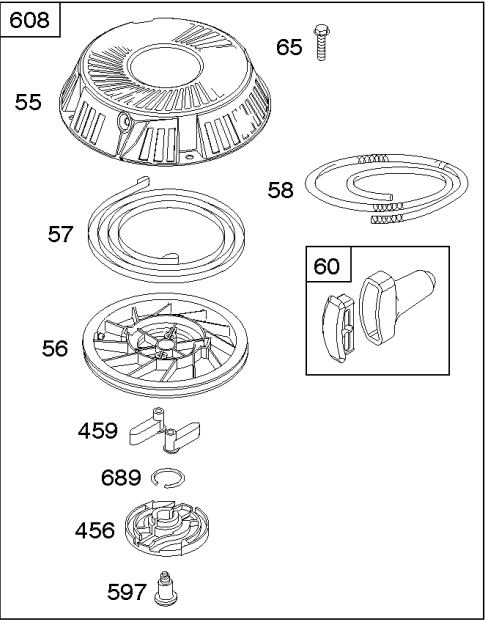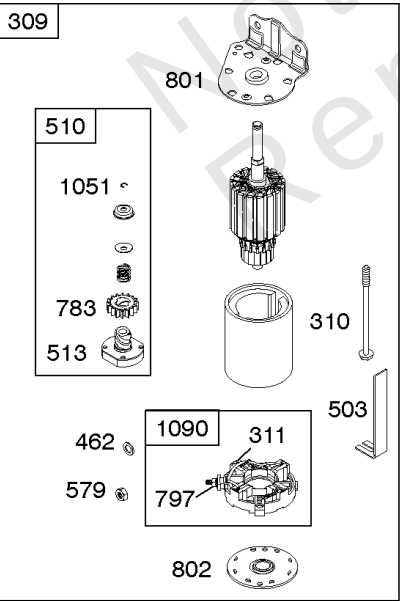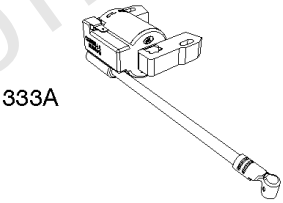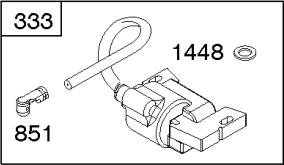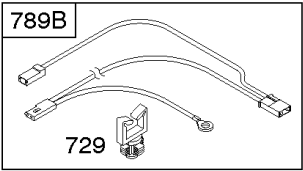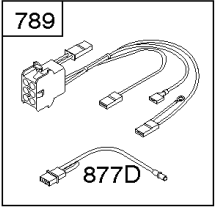

Alternator, Electric Starter, Ignition








REF NO	PART NO	QTY	DESCRIPTION
55	695130		HOUSING, Rewind Starter -Used Before Code Date 12082700
56	695129		PULLEY, Starter -Used Before Code Date 12082700
57	695131		SPRING, Rewind Starter -Used Before Code Date 12082700
58	695132		ROPE, Starter -Used Before Code Date 12082700
58A	697316		ROPE, Starter -Used After Code Date 12082600
60	490652		GRIP-STARTER ROPE
60A	281434S		GRIP, Starter Rope
65	690940		SCREW -(Rewind Starter) -Used After Code Date 12082600
65	690837		SCREW -(Rewind Starter) -Used Before Code Date 12082700
309	693551		MOTOR, Starter
310	690323		SCREW -(Starter Motor)
311	497608		SET, Brush
333A	592841		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
356B	697089		WIRE, Stop
455A	796615		CUP, Flywheel -Used After Code Date 12082600
456	695128		PLATE, Pawl Friction -Used Before Code Date 12082700
459	281505S		PAWL-RATCHET -Used Before Code Date 12082700
462	691261		WASHER -(Starter Cable)
474C	592829		ALTERNATOR -(Tri Circuit Or 5/9 Amp. Regulated)
501A	794360		REGULATOR
503	691532		STRAP, Starter
510	693699		DRIVE, Starter
513	692024		CLUTCH, Drive
521	690581		SHIELD, Cable
526A	697088		SCREW -(Regulator)
579	691029		NUT -(Starter Cable)
597	691696		SCREW -(Pawl Friction Plate) -Used Before Code Date 12082700
608	695058		STARTER, Rewind -Used Before Code Date 12082700
608A	591606		STARTER, Rewind -Used After Code Date 12082600
689	691855		SPRING-FRICTION -Used Before Code Date 12082700
697	791680		SCREW -(Starter Motor) (Drive Cap)
729	691335		CLIP, Wire
729A	691224		CLIP, Wire

DUAL CIRCUIT		5/9 AMP		TRI CIRCUIT	
474B	1059	474C	1059	474C	1059
					

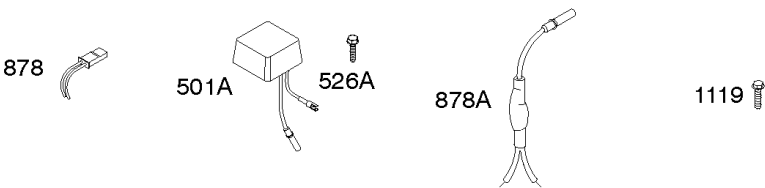


NOTE: All stators use a No. 1119 mounting screw.

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

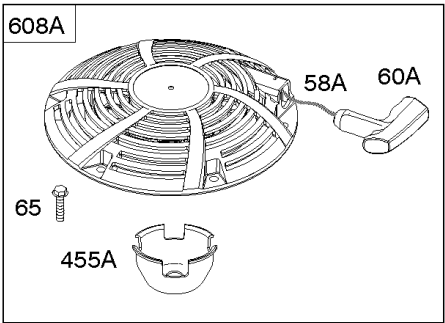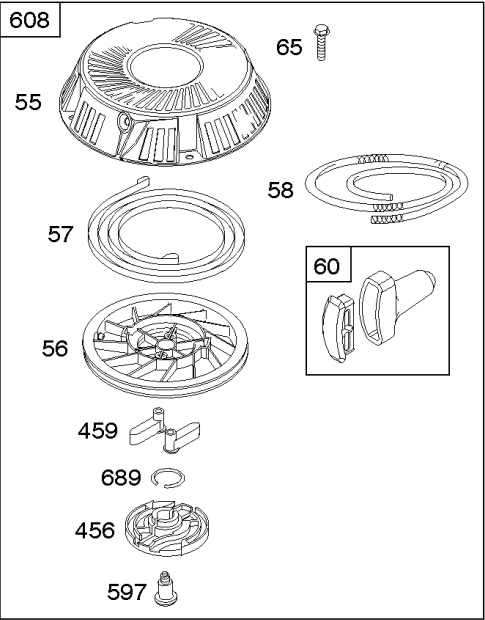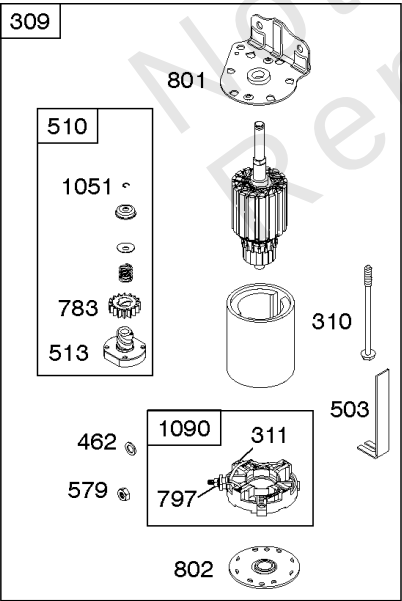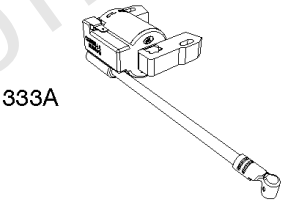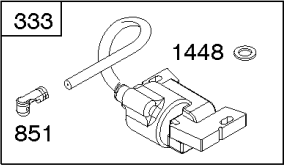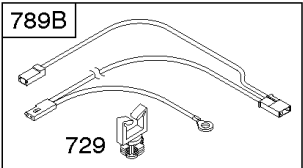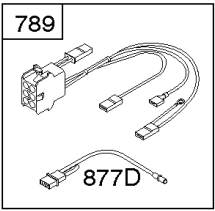


Alternator, Electric Starter, Ignition

REF NO	PART NO	QTY	DESCRIPTION
783	693713		GEAR, Pinion
789	698329		HARNESS, Wiring
789B	692037		HARNESS-WIRING
797	693167		NUT -(Brush Retainer)
801	691283		CAP, Drive
802	691286		CAP, End
851	692424		TERMINAL, Spark Plug
877	393456		WIRE/CONNECTOR, Alternator
877D	790544		WIRE/CONNECTOR, Alternator
878	398661		HARNESS, Wiring
878A	691955		HARNESS, Alternator
1051	691265		RING, Retaining
1059	698516		KIT, Screw/Washer
1090	691293		RETAINER, Brush
1119	691183		SCREW -(Alternator)
1448	690260		WASHER -(Magneto Armature)

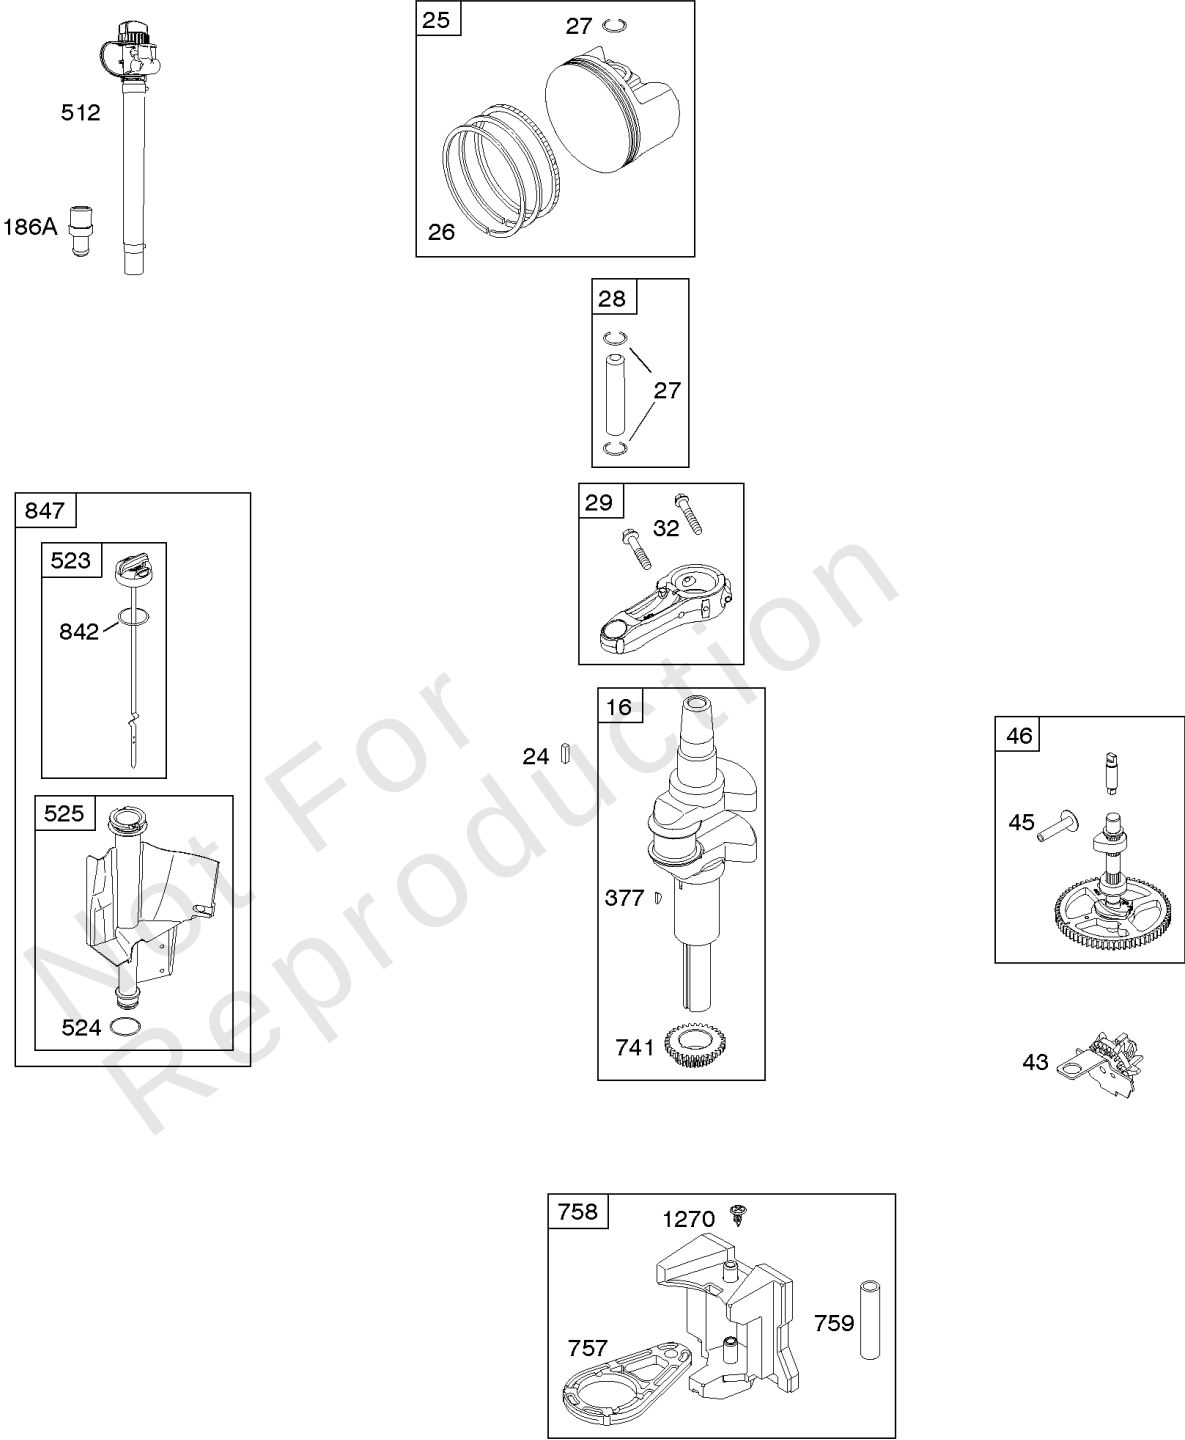

Camshaft, Crankshaft, Lubrication, Piston, Rings, Connecting Rod



REF NO	PART NO	QTY	DESCRIPTION
16	697390		CRANKSHAFT -Used Before Code Date 12071700
16	591953		CRANKSHAFT -Used After Code Date 12071600
24	591757		KEY, Flywheel -Used After Code Date 12071600
24	796335		KEY, Flywheel -Used Before Code Date 12071700
25	792307		PISTON ASSEMBLY -(Standard)
25	792728		PISTON ASSEMBLY -(.020 Oversize)
26	792306		SET, Ring -(Standard)
26	792643		SET, Ring -(.020 Oversize)
27	698469		LOCK, Piston Pin
28	697099		PIN, Piston
29	791633		ROD, Connecting -(Standard)
32	791118		SCREW -(Connecting Rod)
43	691968		SLINGER, Governor/Oil
45	690564		TAPPET, Valve
46	793880		CAMSHAFT
186A	796532		CONNECTOR, Hose -Oil Drain
377	691639		KEY, Woodruff
512	796530		HOSE, Oil Drain
523	699908		DIPSTICK
524	691032		SEAL, O-Ring
525	697184		TUBE, Dipstick
741	697128		GEAR, Timing
757	793242		LINK, Counterweight
758	697391		COUNTERWEIGHT -Used After Code Date 05100200
758	795940		COUNTERWEIGHT -Used Before Code Date 05100300
759	697392		PIN, Counterweight
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	790442		DIPSTICK/TUBE ASSEMBLY
1270	793243		PLUG, AVS Counterweight

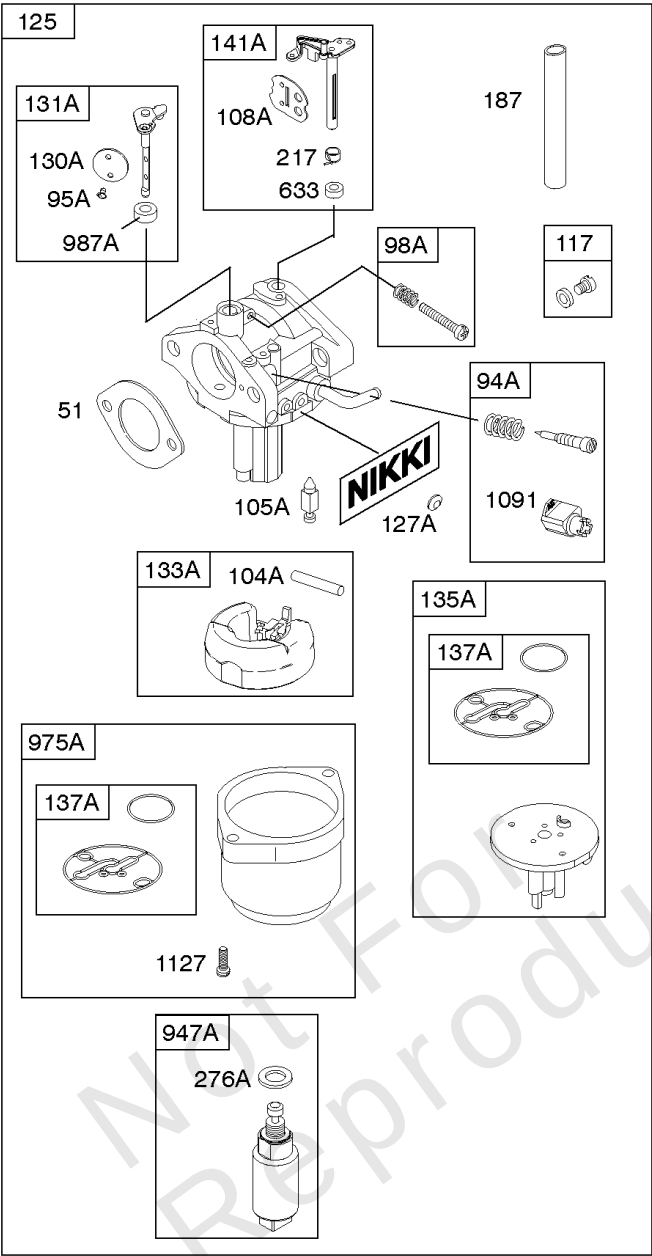

121A CARBURETOR OVERHAUL KIT			
51	127A	137A	98A
104A	987A	1266	217
105A	633	1266A	276A
51A	617		




Carburetor, Kit - Carburetor Overhaul

REF NO	PART NO	QTY	DESCRIPTION
51	692137		GASKET-INTAKE
51A	796081		GASKET, Intake
94A	793610		KIT, Idle Mixture
95A	690718		SCREW -(Throttle Valve)
98A	695408		KIT, Idle Speed
104A	694918		PIN, Float Hinge
105A	696136		VALVE, Float Needle
108A	698773		VALVE, Choke
117	591936		JET, Main -(Standard) (Nikki Carburetor 794458, 794459, 799246, 799247)
118	698788		JET, Main -(High Altitude) (Nikki Carburetor 794458, 794459, 799246, 799247)
121A	796184		KIT, Carburetor Overhaul -(Nikki)
125	590400		CARBURETOR -(Hose Not Included.)
127A	690727		PLUG, Welch
130A	698774		VALVE, Throttle
131A	698776		KIT, Throttle Shaft
133A	694914		FLOAT, Carburetor
135A	698780		TUBE, Fuel Transfer -(Nikki)(Gravity Feed)
135A	792022		TUBE-FUEL TRANSFER -(Nikki)(Pump Feed) -Used Before Code Date 08121500
137A	698781		GASKET, Float Bowl
141A	698778		KIT, Choke Shaft -(Nikki)
187	791805		LINE, Fuel -(Formed)(10-1/4" Long)(Cut to Required Length)
217	695409		SPRING, Choke Return
276A	695410		WASHER, Sealing
617	692138		SEAL, O-Ring -(Intake Manifold)
633	699813		SEAL, Choke/Throttle Shaft
947A	699915		SOLENOID, Fuel
975A	699502		BOWL, Float -(Nikki)
987A	698777		SEAL, Choke/Throttle Shaft
1091	691333		CAP, Limiter
1127	695407		SCREW -(Float Bowl) (Float Bowl to Carburetor Body)
1266	691917		SEAL, O-Ring -(Intake Elbow)
1266A	697123		SEAL, O-Ring -(Intake Elbow)

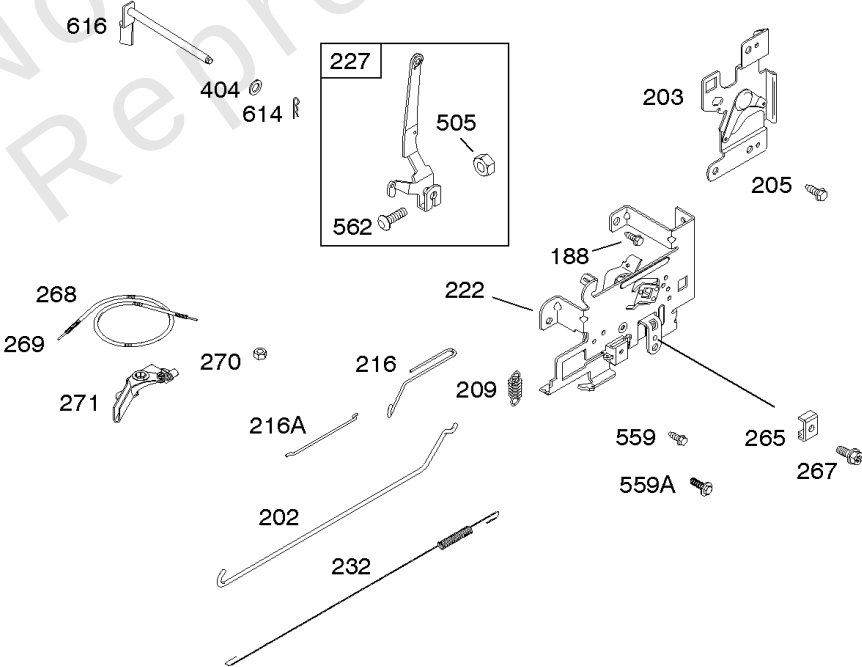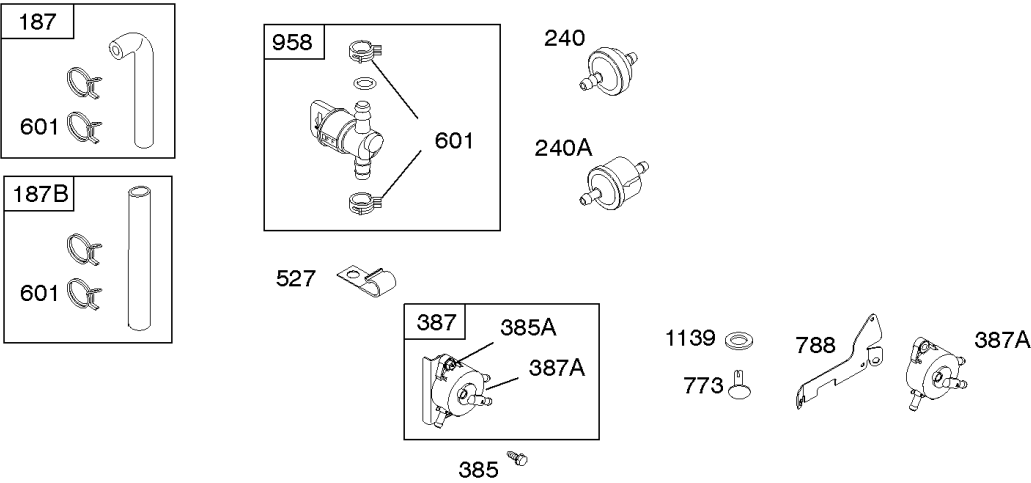




Controls, Fuel Supply, Governor Spring

REF NO	PART NO	QTY	DESCRIPTION
187	791805		LINE, Fuel -(Formed)(10-1/4" Long)(Cut to Required Length)
187B	791766		LINE, Fuel -(15" Long)(Cut to Required Length)
188	691693		SCREW -(Control Bracket)
202	691841		LINK, Mechanical Governor
205	691693		SCREW -(Bell Crank)
209	796260		SPRING, Governor
216	691840		LINK, Choke
222	694042		BRACKET, Control
227	691374		LEVER, Governor Control
232	691842		SPRING, Governor Link
240	394358S		FILTER, Fuel -(White, 75 Microns)
265	691024		CLAMP, Casing
267	794904		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
385	694476		SCREW -(Fuel Pump)
385A	690297		SCREW -(Fuel Pump)
404	691691		WASHER -(Governor Crank)
505	691251		NUT -(Governor Control Lever)
527	698467		CLAMP, Hose
559	697561		SCREW -(Remote Choke Stop) (Length .375 Inches)
559A	693675		SCREW -(Remote Choke Stop) (Length .419 Inches)
562	691119		BOLT -(Governor Control Lever)
601	691038		CLAMP, Hose -(Black)
601	791850		CLAMP, Hose -(Green)
614	691620		PIN, Cotter
616	692012		CRANK, Governor
773	796448		RETAINER
788	699347		BRACKET, Fuel Pump -Used Before Code Date 08073000
958	698183		VALVE, Fuel Shut Off
1139	796449		WASHER -(Fuel Pump Bracket)

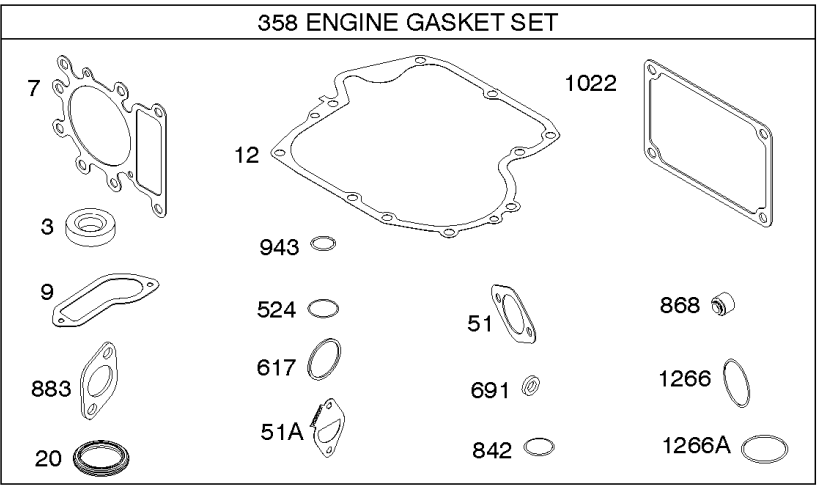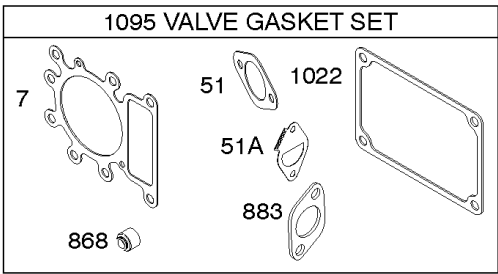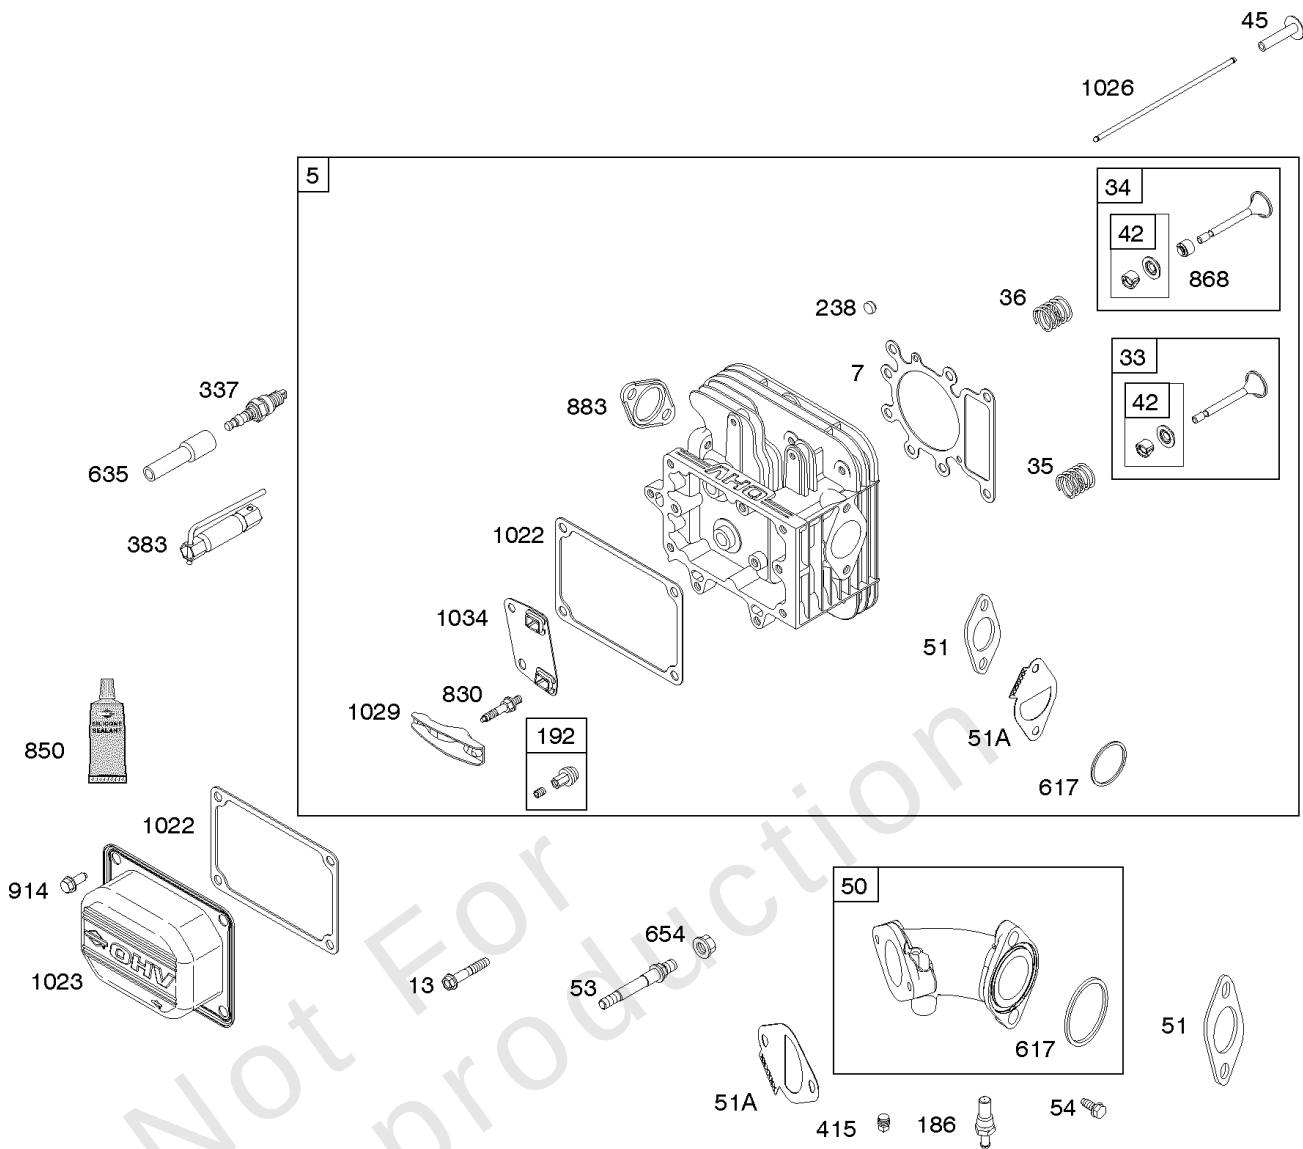

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Intake Manifold, Valves

REF NO	PART NO	QTY	DESCRIPTION
3	391086S		SEAL, Oil -(Magneto Side)
5	796183		HEAD, Cylinder
7	273280S		GASKET, Cylinder Head
9	697109		GASKET, Breather -(After Date Code Use Liquid Sealant Reference 850) -Used Before Code Date 07071900
12	697110		GASKET, Crankcase -(.015" Thick)(Standard)
13	690360		SCREW -(Cylinder Head)
20	795387		SEAL, Oil -(PTO Side)
33	792868		VALVE, Exhaust
34	791935		VALVE, Intake
35	691279		SPRING, Valve -(Intake)
36	691279		SPRING, Valve -(Exhaust)
42	499586		KEEPER, Valve
45	690564		TAPPET, Valve
50	592845		MANIFOLD, Intake
51	692137		GASKET-INTAKE
51A	796081		GASKET, Intake
53	591260		STUD -(Carburetor) -Used After Code Date 11120100
53	690227		STUD -(Carburetor) -Used Before Code Date 11120200
54	691148		SCREW -(Intake Manifold)
186	794873		CONNECTOR, Hose
192	691986		ADJUSTER, Rocker Arm
238	691843		CAP, Valve
337	691043		PLUG, Spark -(EMS)
358	796181		GASKET SET, Engine
383	19576S		WRENCH, Spark Plug
415	794903		PLUG
524	691032		SEAL, O-Ring
617	692138		SEAL, O-Ring -(Intake Manifold)
635	691909		BOOT, Spark Plug
654	690958		NUT -(Carburetor)
691	692407		SEAL, Governor Shaft
830	691095		STUD, Rocker Arm
842	691031		SEAL, O-Ring -(Dipstick Tube)
850	100106		SEALANT, Liquid -Used After Code Date 07071800
868	794086		SEAL, Valve
883	692236		GASKET, Exhaust
914	691108		SCREW -(Rocker Cover)

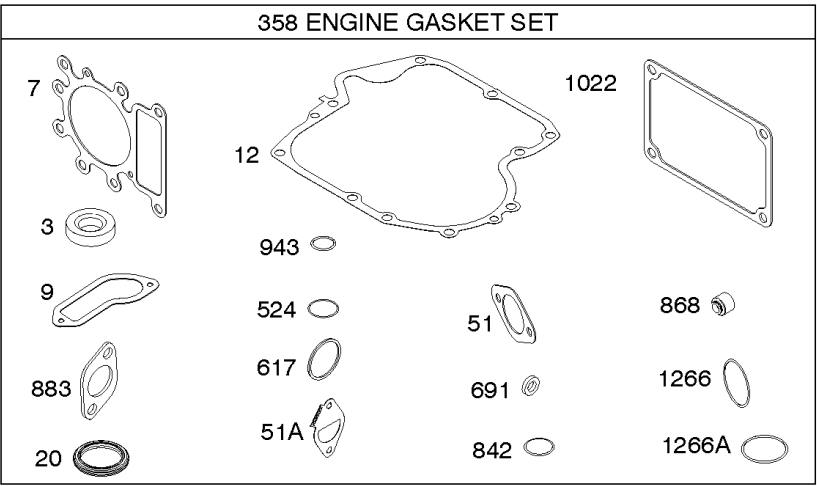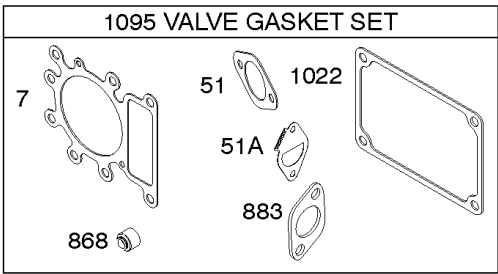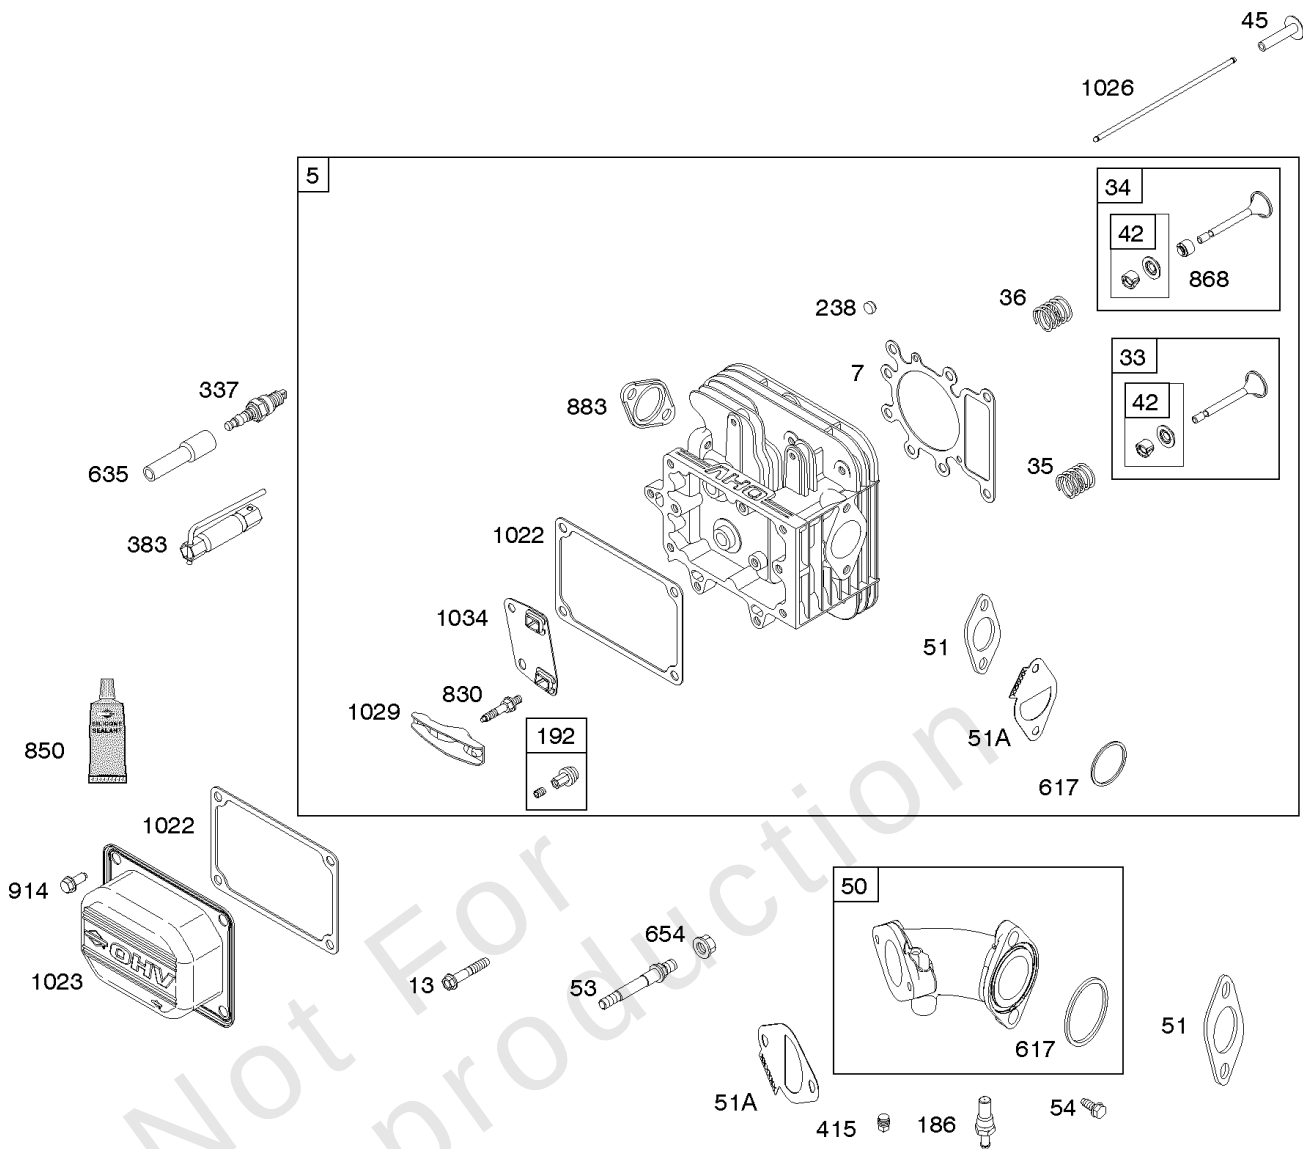

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Intake Manifold, Valves


REF NO	PART NO	QTY	DESCRIPTION
1022	272475S		GASKET, Rocker Cover -(After Date Code Use Liquid Sealant Reference 850) -Used Before Code Date 07091000
1023	797421		COVER-ROCKER
1026	794573		ROD, Push -(Exhaust)
1026	697394		ROD, Push -(Intake)
1029	691751		ARM, Rocker
1034	690822		GUIDE, Push Rod
1095	796189		GASKET SET, Valve
1266	691917		SEAL, O-Ring -(Intake Elbow)
1266A	697123		SEAL, O-Ring -(Intake Elbow)

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL




1036 EMISSIONS LABEL

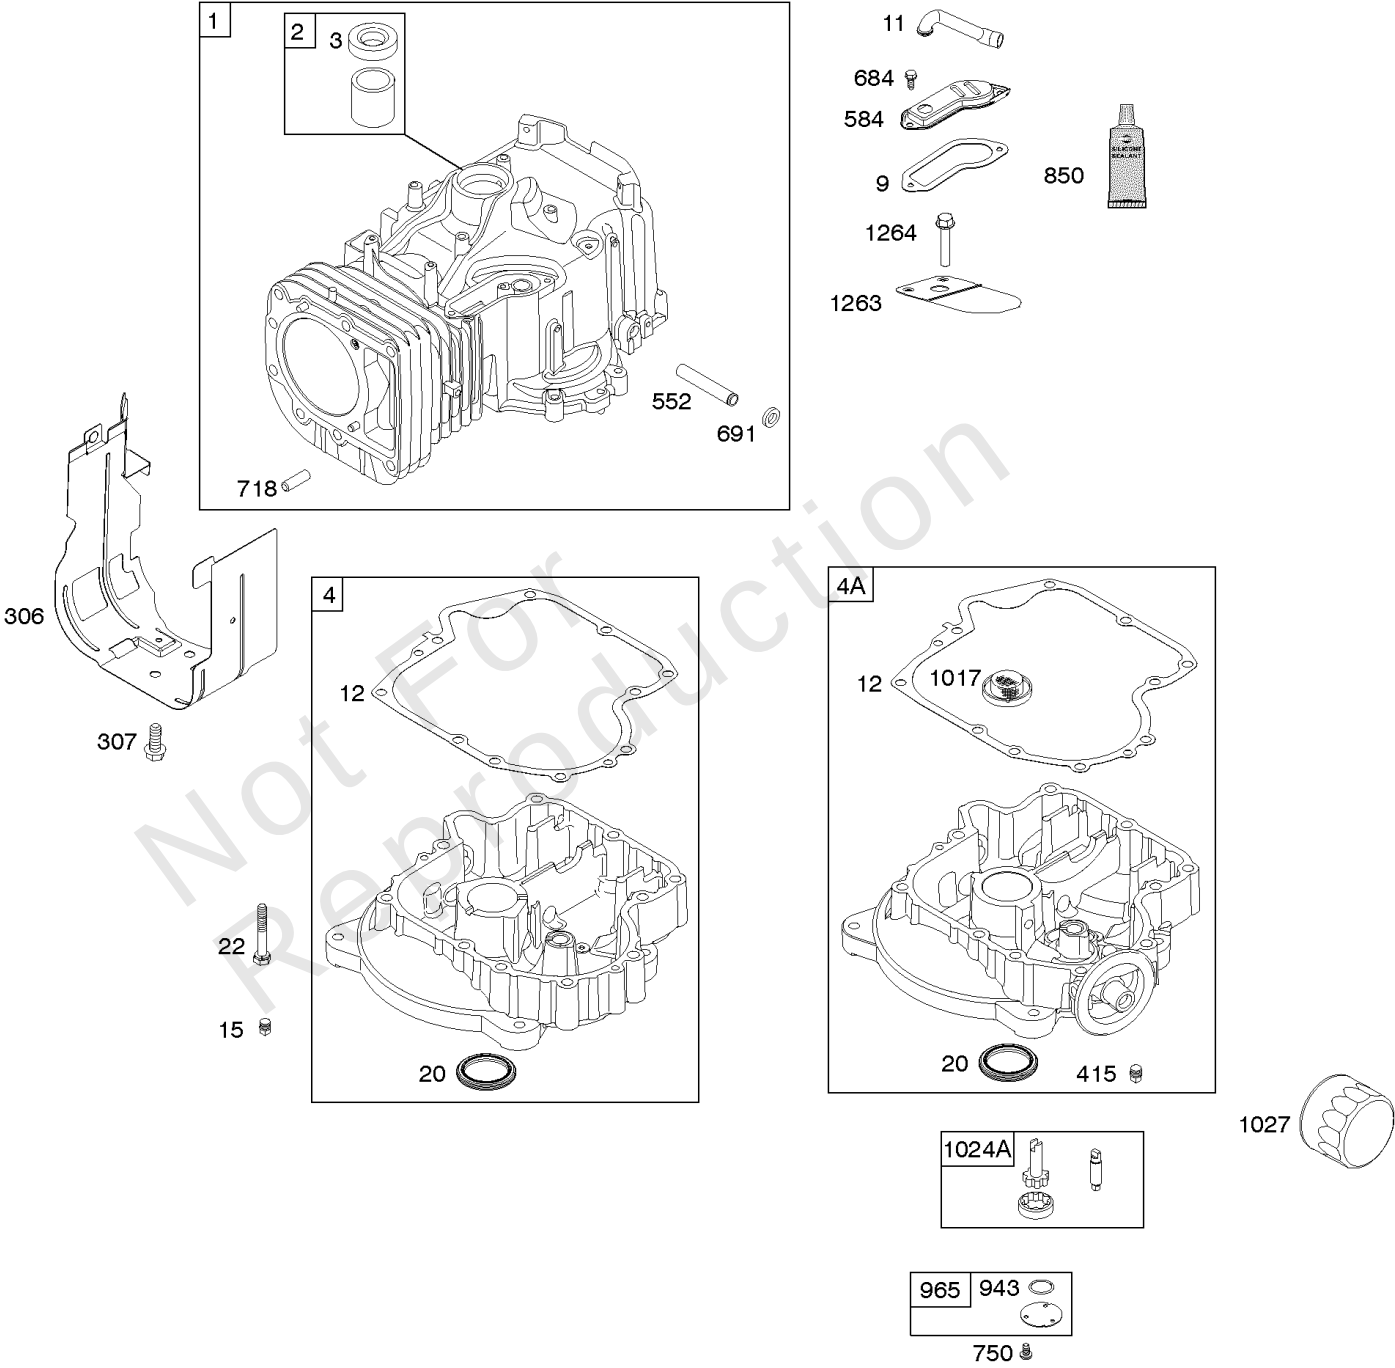

Cylinder, Engine Sump, Lubrication, Operator's Manual, Warning Label

REF NO	PART NO	QTY	DESCRIPTION
1	697377		CYLINDER ASSEMBLY
2	797673		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
4	795940		COUNTERWEIGHT -(Must Use Kit 795940, Includes Sump And Counterweight) -Used Before Code Date 05100300
4	697106		SUMP, Engine -Used After Code Date 05100200
9	697109		GASKET, Breather -(After Date Code Use Liquid Sealant Reference 850) -Used Before Code Date 07071900
11	794683		TUBE, Breather
12	697110		GASKET, Crankcase -(.015" Thick)(Standard)
15	690946		PLUG, Oil Drain -(3/8" Standard)
20	795387		SEAL, Oil -(PTO Side)
22	692125		SCREW -(Crankcase Cover/Sump)
306	592778		SHIELD, Cylinder
307	691693		SCREW -(Cylinder Shield)
415	794903		PLUG
552	697144		BUSHING, Governor Crank
584	794682		COVER, Breather Passage
684	697157		SCREW -(Breather Passage Cover)
691	692407		SEAL, Governor Shaft
718	690959		PIN, Locating
750	790832		SCREW -(Oil Pump Cover)
850	100106		SEALANT, Liquid -Used After Code Date 07071800
965	499613		COVER, Oil Pump
1024A	794644		PUMP-OIL
1027	492932S		FILTER, Oil -(Standard)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1058	276344TRI		MANUAL, Operator's
1263	697124		REED, Breather
1264	697104		SCREW -(Breather Reed)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning

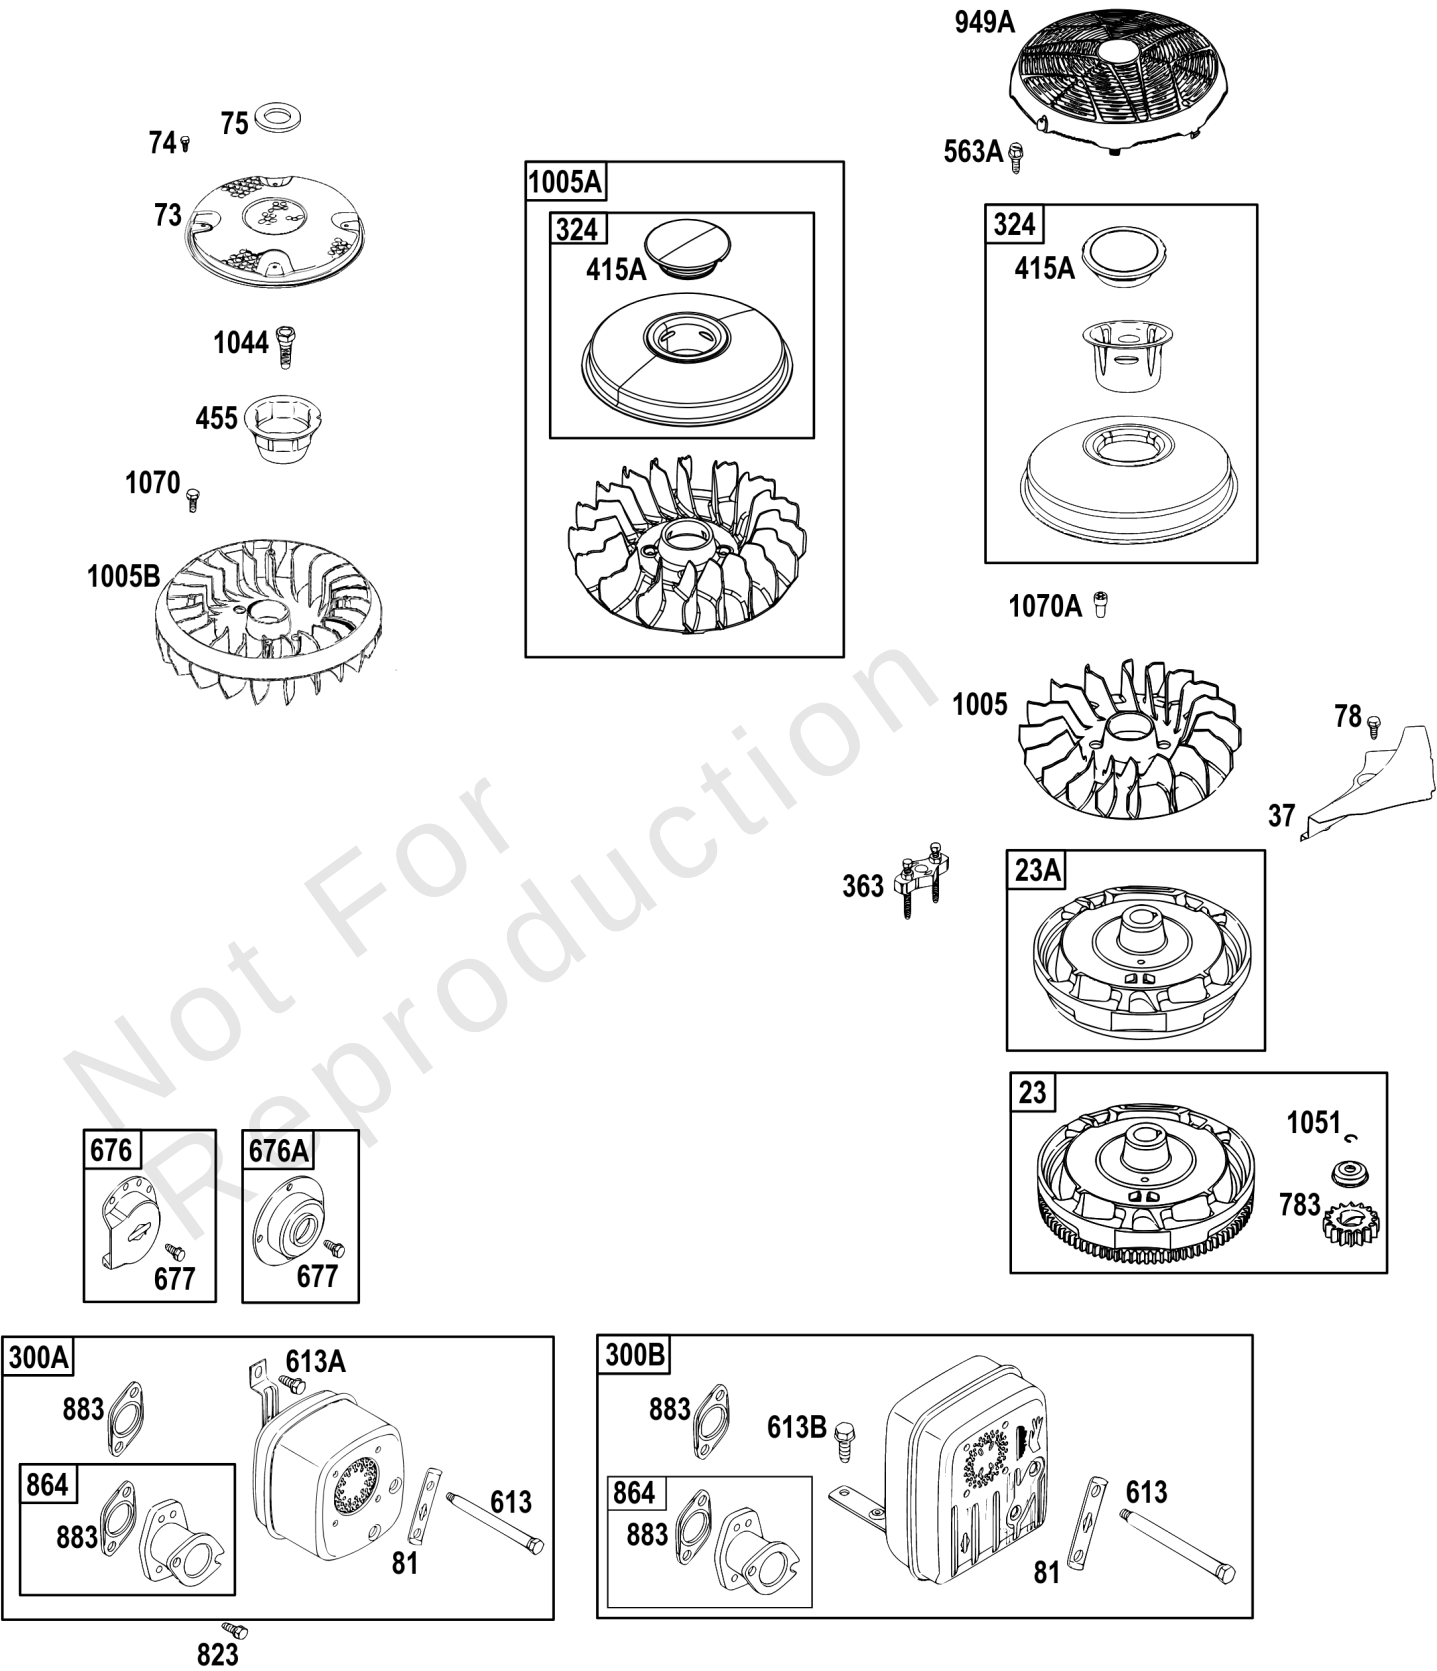

Exhaust System, Flywheel

REF NO	PART NO	QTY	DESCRIPTION
23	698282		FLYWHEEL -Used Before Code Date 12071700
23	591758		FLYWHEEL -Used After Code Date 12071600
37	697352		GUARD, Flywheel
73	-----		Screen-Rotating -(No Longer Available)(See Reference 1005A for Service Flywheel Fan) -Used Before Code Date 07040900
74	697897		SCREW -(Rotating Screen) -Used Before Code Date 07040900
75	690582		WASHER -(Flywheel)
78	691693		SCREW -(Flywheel Guard)
81	691178		LOCK, Muffler Screw
300A	796000		MUFFLER
324	796308		SCREEN/CUP ASSEMBLY -Used After Code Date 07040800
363	19203		PULLER, Flywheel
415A	794129		COVER, Flywheel -(Cover/Retainer) -Used After Code Date 07040800
455	695113		CUP, Flywheel -Used Before Code Date 12082700
563A	799359		SCREW -(Debris Screen Guard)
613	691416		SCREW -(Muffler)
613A	691678		SCREW -(Muffler)
613B	690297		SCREW -(Muffler)
783	693713		GEAR, Pinion
823	698941		SCREW -(Muffler Adapter)
864	796002		ADAPTER, Muffler -(2 1/4" Long)
883	692236		GASKET, Exhaust
949A	799358		GUARD, Debris Screen
1005	796082		FAN, Flywheel -Used After Code Date 07040800
1005A	796200		FAN, Flywheel -Used Before Code Date 07040900
1005B	-----		Fan-Flywheel -(No Longer Available)(See Reference 1005A for Service Flywheel Fan)
1044	698139		SCREW -(Flywheel)
1051	691265		RING, Retaining
1070	791680		SCREW -(Flywheel Fan) -Used Before Code Date 07040900
1070A	690363		SCREW -(Flywheel Fan) -Used After Code Date 07040800 -Used Before Code Date 08061900

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	2199073026	1	Replacement Engine
	697740	1	Replacement Short Block
	-----		Top No-Load Speed: 3000 -Trim: ALL
	-----		Service Note: Transfer the Carburetor Float Bowl and/or Fuel Solenoid Assembly to the replacement engine.
	-----		Service Note: If the original engine is equipped with a Six Pin Wiring Harness transfer to the replacement engine.
	-----		Service Note: Transfer Flywheel and Alternator Assembly from original to replacement engine.
	-----		Service Note: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
	-----		Service Note: Transfer Governor Spring to replacement engine.

