



## UVC DISINFECTOR

---

Multipurpose Device  
for Home and Office



Includes important safety information. Read all instructions before using device.

**CONTENTS**

Foreword ..... 3

Indications for Use ..... 4

Important Safeguards ..... 4

Product Specifications ..... 5

Getting to Know your UVC Disinfector ..... 6

How to Use your UVC Disinfector ..... 6

UVC Disinfector Maintenance ..... 7

Frequently Asked Questions ..... 8

Limited Warranty ..... 10

**DISCLAIMER**

The UVC Disinfector is not intended for use to sanitize or disinfect medical devices or for any medical purpose. The UVC Disinfector is also not intended for use with kitchenware or other food contact surfaces. No medical claims are implied or intended with the sale of this device. Purchaser accepts responsibility for correct and proper use of device.

## FOREWORD

Thank you for choosing the UVC Disinfector – Multipurpose Device for Home and Office by Bright Health™. Using a specialized, high-powered UVC light, the UVC Disinfector can kill up to 99.99% of harmful bacteria and viruses on surfaces treated.

UVC light is the preferable disinfection option since it produces NO HARMFUL OZONE. The EPA has shown that ozone can irritate the lungs and the respiratory system especially for those with respiratory illnesses. Please read and follow all directions in this user manual.

## EXPLANATION OF SYMBOLS USED



Equipment protected throughout by double insulation or reinforced insulation



Refer to instruction manual



Important information concerning your safety or the operation of your device



Contains mercury



**LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.**

## SAVE THESE INSTRUCTIONS!

## Indications for Use

The UVC Disinfectant is intended for home use and is a multi-purpose disinfecting device for personal use products (i.e., toys, cell phones, etc.).

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USING



**DANGER** – To reduce the risk of electrocution:

1. **ALWAYS** unplug this product immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** place or store product where it can fall or be pulled into a tub or sink.
4. **DO NOT** place in or drop into water or other liquid.
5. **DO NOT** reach for a product that has fallen into water. Unplug immediately.



**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used near children or invalids.
2. Use this product only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
3. **NEVER** operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. **KEEP** the cord away from heated surfaces.
5. **NEVER** block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. **KEEP** the air openings free of lint, hair, and the like.
6. **NEVER** use while sleeping or drowsy.
7. **NEVER** drop or insert any object into any opening or hose.
8. **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.



**WARNING** – The UVC Disinfectant is not a toy and is not intended to be used by children.



**WARNING** – The UVC Disinfectant has a powerful UV light bulb included, handle with care and discontinue use in the event of a broken or damaged bulb.



**WARNING** – **DO NOT** use in or around sinks, tubs, pools or any bodies of water.



**WARNING** – The UV that is emitted in the closed chamber is not compatible with life, never place living creatures in the UVC Disinfectant.



**WARNING** – **DO NOT** stack objects on top of your UVC Disinfectant.



**WARNING** – Use this device only for its intended use as described in this manual. If the equipment is not used in the manner specified, the protection provided by the equipment may be impaired.



**WARNING** – **DO NOT** attempt to operate this device with the drawer open. The device was designed to shut off automatically when the drawer is open. It is important not to defeat or tamper with this safety feature as UVC light can cause damage to eyesight.



**WARNING** – **NEVER** insert any object other than a Bright Health™ UVC Disinfectant replacement bulb into the UVC bulb socket.



**WARNING** – **DO NOT** unplug by pulling on cord. To unplug, grasp the plug, not cord.



**WARNING** – **DO NOT** handle plug or appliance with wet hands.



**WARNING** – **ALWAYS** turn off all controls before unplugging.

-  **WARNING** – **ONLY** use Bright Health™ UVC Disinfectant replacement bulbs in this device.
-  **WARNING** – The UVC Disinfectant plugs into a standard 120V power outlet. **ALWAYS** disconnect the device by unplugging. **DO NOT** plug the device into an outlet that is difficult to access.
-  **WARNING** – **DO NOT** look directly into the door window during use.

**Product Specifications**

|                                         |                                                     |
|-----------------------------------------|-----------------------------------------------------|
| EPA Est. No.                            | 99106-CHN-1                                         |
| Model:                                  | BH9032                                              |
| Product Name:                           | Bright Health™ UVC Disinfectant                     |
| Product Weight:                         | 6.8 lbs                                             |
| Cycle Time:                             | 5 minutes (300 seconds)<br>10 minutes (600 seconds) |
| Completion Indicator:                   | 3 beeps                                             |
| Product Dimensions:                     | 9.25" x 11.75" x 11.75"                             |
| Voltage:                                | AC 120 V 60Hz, AC 240 V 50Hz                        |
| Power Rating:                           | 8W                                                  |
| Bulb:                                   | LB6W 42V 6W, 253.7nm (rated - 8,000 hrs)            |
| Window Material:                        | Chi Mei Acryrex CM-11, 100% UV blocked              |
| Environmental Conditions:               |                                                     |
| Storage Temperature:                    | 0° to 120° F / -18° to 49° C                        |
| Operating Temperature:                  | 20° to 100° F / 7° to 38° C                         |
| Humidity:                               | Up to 93%, non-condensing                           |
| Clinical Efficacy (5 minute treatment): |                                                     |
| Pathogen                                | Kill Rate                                           |
| E. Coli (8099)                          | >99.99%                                             |
| Staphylococcus aureus (ATCC 6538)       | >99.99%                                             |
| Influenza A Virus (H1N1)                | >99.99%                                             |
| Coronavirus HCoV-229E                   | >99.99%                                             |

## Getting to Know Your UVC Disinfecter

The UVC Disinfecter uses a specialized, high-powered germicidal UVC light bulb. The polished aluminum drawer interior reflects the UVC light throughout the disinfection chamber to improve disinfection.



## Did You Know?

The UVC Disinfecter is very versatile! You can disinfect a variety of household items safely with the power of light including cell phones, keys, hair care items and small toys!

## How to Use Your UVC Disinfecter

1. Connect the included DC power cord into the DC power input socket on the back of the UVC Disinfecter.
2. Plug the UVC Disinfecter power cord into a working 120V wall outlet.
3. Place your UVC Disinfecter on a level counter or tabletop.

4. Open the disinfection compartment and, if necessary, place the rack in the chamber.
  5. Place the item(s) to be disinfected on the rack.
  6. Close the chamber drawer.
  7. Press the power button, then press the timer button to select 5 minutes (press once) or 10 minutes (press twice). To begin the disinfection cycle, press the UV button.
  8. There will be a soft glow of UV light visible through the tinted disinfection chamber window during the disinfection cycle.
  9. Upon completion of the disinfection cycle, the UVC Disinfector will beep 3 times and the UV light will no longer be visible through the disinfection chamber window.
  10. You may now remove your disinfected equipment. No waiting period is necessary before use.
- NOTE:** The cycle may be stopped or paused by pressing the UV button. The cycle time may be restarted by pressing the timer button during a disinfection cycle.


### Using Your Disinfection Rack

When disinfecting with your UVC Disinfector, use of the rack is suggested to improve disinfection. The rack lifts the object(s) being disinfected and permits the UVC light to reach the maximum surface area. Set accessories on the rack to permit greater penetration of the underside of the article being disinfected. If your item is large, the rack may be removed, but the UVC light may not reach all surface areas. In this case, repositioning the object to expose the untreated area to the UVC light and conducting another disinfection cycle may be done.

### Caring for your UVC Disinfector – Changing the UVC Germicidal Bulb

Your UVC Disinfector has been designed to provide years of dependable service and the UVC germicidal bulb has a life expectancy that should exceed the life of your device, so changing the bulb should not be necessary. However, should a bulb break, **ALWAYS** disconnect the power cord from the electrical outlet BEFORE proceeding to the steps below:

**⚠ WARNING – ALWAYS** wear protective gloves in the event of broken glass to avoid injury. If the UVC Disinfector has been recently operated, **DO NOT** begin the bulb replacement until the UVC Disinfector has cooled to the touch.

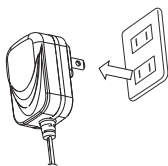


1. Pull the adapter out of the socket.




2. Pull the door out of the disinfection box.




3. Flip the disinfection box.

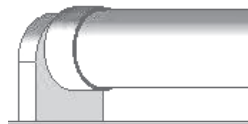


4. Rotate the fluorescent tube 90°.



5. Keep the fluorescent tube horizontal and remove it upwards.

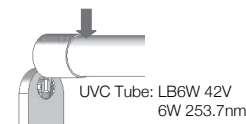


6. To install a fluorescent tube lamp, keep the lamp horizontal and insert it downwards into socket.




7. Rotate the fluorescent tube lamp 90° to fix the lamp in place.



8. Flip the disinfection box.

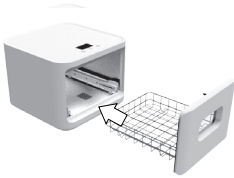

9. Push the door into the disinfection box and fix the door in place.

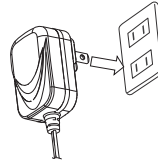

10. Plug the adapter into the socket.

### Cleaning Your UVC Disinfecter

The disinfection drawer is lined with polished aluminum. Please adhere to the following guidelines when cleaning the device.

**⚠ WARNING – ALWAYS** disconnect the power cord from the power outlet **BEFORE** cleaning. If the UVC Disinfecter has been recently operated, **DO NOT** begin cleaning until the UVC Disinfecter has cooled to the touch. **DO NOT** use your UVC Disinfecter until any cleaning solution has fully dried and the disinfection drawer has been installed.

#### Interior

- **DO NOT** use baking soda or other alkali-based cleaners on aluminum as this may cause permanent discoloration.
- The interior can scratch easily. **NEVER** use abrasive cleaners and/or scrubbers when cleaning your device.
- For the aluminum areas, if using a gentle metal or glass cleaner, **ALWAYS** test the cleaner on a small portion of the aluminium to ensure suitability.
- **ALWAYS** polish the aluminium with a soft, lint-free cloth.

#### Exterior

- Should the casing of your UVC Disinfecter become soiled, you may wipe it down with a soft, non-abrasive, moist cloth.
- **DO NOT** immerse your UVC Disinfecter into water.
- **DO NOT** use any cleaning solvents.

### UVC Disinfecter Maintenance

Your UVC Disinfecter has been developed to require little maintenance during normal use. The bulb should last the lifetime of the device and periodic cleaning will keep your UVC Disinfecter ready to use anytime. Every 6 months, check the UVC Disinfecter reusable foam air filter to ensure it is clean and free of dust and debris. Open the plastic door located on the bottom of the device to access the filter. If necessary, wash the filter in a solution of mild soap and warm water. Rinse well and use an absorbent towel to gently squeeze out excess water. Allow the filter to fully air dry before reinstalling in the UVC Disinfecter.

### FREQUENTLY ASKED QUESTIONS (FAQS)

#### How does the UVC Disinfecter work?

The UVC Disinfecter works by emitting high energy light within a narrow light spectrum referred to as UV-C. The UVC Disinfecter uses a low-pressure, mercury-arc germicidal lamp (bulb) to produce high amounts of UV energy. Approximately 90% of the light energy generated is around the 254nm wavelength. This wavelength of light is near the peak of the germicidal effectiveness zone of 265nm (the most lethal to microorganisms).

### **Why doesn't the UVC Disinfector use ozone, like some other devices?**

Simple – safety. There are safety concerns about the use of ozone in the home with the EPA stating the following:

*"When inhaled, ozone can damage the lungs. Relatively low amounts can cause chest pain, coughing, shortness of breath and throat irritation. Ozone may also worsen chronic respiratory diseases such as asthma and compromise the ability of the body..."*

<https://www.epa.gov/indoor-air-quality-iaq/ozone-generators-are-sold-air-cleaners>

### **What are the other benefits of the UVC Disinfector?**

Speed – ozone-based devices take up to 2 hours to work. In addition to the safety of the ozone for users, many may not want to wait 2 hours to use their equipment. With a 5-minute cycle time, the UVC Disinfector has your equipment disinfected quickly.

### **Are there any supplies that need to be reordered?**

No. The UVC Disinfector is easy to use and easy to own since it requires no replacement supplies at all! The device relies on a special germicidal UV-C bulb that is rated to outlast the life of the device and should never require changing. In the rare event that the bulb is damaged or does require replacement, a single low-cost replacement bulb is readily available from your local distributor or Compass Health Brands.

### **How do I use the Disinfector?**

The UVC Disinfector is a single button device and as easy as 1,2,3!

1. Wipe the item to remove any physical residue.
2. Open the chamber and place the item in the drawer face up, then close the drawer.
3. Press the button and in 5 minutes, the cycle is complete and your item is ready to use.

### **Do I need to disinfect some items twice?**

Yes, since UV-C disinfection uses light waves, the disinfection function operates in a "line-of-sight" manner and only irradiates surfaces within the light rays. If an object is large or opaque, a second disinfection cycle may be necessary. For example, items should be periodically disinfected when fully disassembled or an item may need to be turned over after the first cycle. In these cases, you may set the unit to 10 minutes by pressing the cycle button twice. For larger or opaque items, it may be necessary to disinfect the item twice on each side. Upon completion of the first 5-minute cycle, open the chamber, turn the item being disinfected over and re-insert the chamber for a second 5-minute disinfection cycle. For general daily use and most items, only one cycle is necessary.

## **LIMITED WARRANTY**

Compass Health Brands warrants this product to be free from defects in workmanship and materials, under normal residential use and conditions, for a period of one year (12 months) from the original invoice date. Shipping and handling fees are to be paid for by the customer. The manufacturer agrees, at its option during the warranty period, to repair any defect in material or workmanship or to furnish a repaired or refurbished product of equal value in exchange without charge (except for a fee for shipping, handling, packing, return postage, and insurance which will be incurred by the customer). Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing the model number on original dated sales receipt.

## **WARRANTY LIMITATIONS**

This warranty does not include:

- Any condition resulting from other than ordinary wear or any use for which the product was not intended, such as use in rental or for commercial use
- Any condition resulting from incorrect or inadequate maintenance or care of the product
- Damage resulting from misuse, abuse, negligence, accidents or shipping damage
- Dissatisfaction due to buyer's remorse
- Normal wear and tear
- Damages incurred during transportation
- Damages incurred during assembly or maintenance

Compass Health Brands (the Company) makes no express warranty or condition whether written or oral and the Company expressly disclaims all warranties and conditions not stated in this limited warranty. To the extent allowed by the local law of jurisdictions outside the United States, the Company disclaims all implied warranties or conditions, including any implied warranties of merchantability and fitness for a particular purpose. For all transactions occurring in the United States, any implied warranty of condition of merchantability, satisfactory quality, or fitness for a particular purpose is limited to the duration of the express warranty set forth above. Some states or countries do not allow a limitation on how long an implied warranty lasts or the exclusion of limitation of incidental or consequential damages for consumer products. In such states or countries, some exclusions or limitations of this limited warranty may not apply to the Purchaser. For consumer transaction, the limited warranty terms contained in this statement, except to the extent lawfully permitted, do not exclude, restrict, or modify but are in addition to the mandatory statutory rights applicable to the sale of this Product to the Purchaser.

All warranty claims must be filed by the consumer to the retailer of this product, who in turn is to contact the Company regarding any warranty return or replacement. Where the retailer will not provide warranty support, the Company should be contacted for warranty support. Please retain invoices for a minimum of two years for warranty purposes.

## **CLAIM PROCEDURES:**

- Claims for defective merchandise must be made within ONE year from invoice date
- Any claim for defective merchandise returns must be packed in original packaging
- We reserve the right to specify that items be returned to the original warehouse for inspection or be inspected by our representatives
- Pictures are required to claim defective merchandise, along with a copy of the original invoice
- If the claim is justified, the item(s) or part(s) will be repaired or replaced or a credit will be issued. It is our policy to replace parts whenever possible

This warranty gives you specific legal rights. You may have other rights, which vary from state to state.

## **UVC DISINFECTOR BOX**

**Model No.: BH9032**

This device complies with part 15, subpart B requirements of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Part 15.107: Conducted disturbance at mains terminals

Part 15.109: Radiated Spurious Emissions

Please note that changes or modifications of this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**COMPASSHEALTH**

Manufactured for:  
Compass Health Brands Corp.  
Middleburg Heights, OH 44130  
[www.compasshealthbrands.com](http://www.compasshealthbrands.com)  
800.376.7263 • Made in China  
42-BH9032\_02 © 2024