


BIOBIDET®
BY BEMIS

DISCOVERY DLS

USER MANUAL



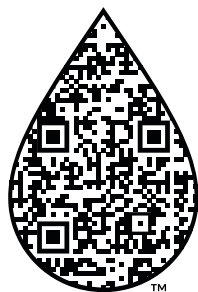

Registration and
Installation Resources

Questions?
We're here to help.

847.458.2334

support@biobidet.com

www.biobidet.com

TABLE OF CONTENTS

04

PRODUCT INFORMATION

Important Safeguards
Overview
Parts List
Remote Control

10

GETTING STARTED

Functions & Features

14

PRODUCT INSTALLATION

Installation Guide

18

MAINTENANCE

Removing The Discovery DLS
Cleaning The Discovery DLS
Extended Travel
Specifications

20

WARRANTY

Warranty


IMPORTANT SAFEGUARDS

PLEASE OBSERVE THE FOLLOWING PRECAUTIONS AND INSTRUCTIONS BEFORE INSTALLATION AND USE.


- This product must be connected to a grounded 120V GFCI (Ground Fault/Circuit Interrupt) outlet. Do not connect the power cord if it is damaged or broken. Do not plug the product into a loose electric outlet.
- It is recommended to operate this product on a separate circuit. Sharing a circuit could cause the breaker to trip or lights to flicker.
- If it is necessary to use an extension cord, use only a three-prong extension cord plugged into a proper GFCI outlet. The marked rating of the extension cord should be equal to or greater than the electrical rating of the unit (15 amp). Consult a qualified electrician or service person if you are not sure whether the unit is properly grounded.
- Do not open this product for repair without authorization from the manufacturer. Only qualified service personnel should service this product.
- Connect this product to a potable cold water supply line.
- Close supervision is necessary when this product is used by children, elderly, or adults with sensitive skin. A low temperature burn may occur when the skin has been in contact with an object at relatively low temperature for an extended period of time.
- If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto the bidet. Do not use benzene or any acid chemical detergent, as they can cause discoloration. Only neutral detergents are permitted.
- Do not plug in the power cord before connecting the water supply hose.
- Install in an area with adequate ventilation to avoid high levels of humidity which can damage the electronic components.
- Do not touch the power cord with wet hands or reach for a product that has fallen into water. Unplug immediately.
- Keep the power cord away from heated surfaces to prevent a fire hazard. Keep any flammable materials away from this product at all times.

- To prevent water leaks and potential property damage, use the provided installation components and ensure your toilet hose is in good working condition.
- During a power failure, unplug the power cord and turn off the water supply to prevent water leaks and property damage.
- To prevent danger, avoid using external timers or circuits to supply power, which could reset the thermal circuit breaker incorrectly.
- Always turn off the water supply before connecting or disconnecting any hoses.
- When traveling for an extended period of time, unplug and drain the bidet, and turn off the water supply to prevent any potential damage.
- If there is a danger of freezing, follow the same procedures you would normally take to protect your toilet from freezing.
- Insert batteries correctly with regards to polarity, and avoid mixing old and new batteries.
- This product includes a UV sterilization feature. Unintended use of device or damage to the housing may result in exposure to ultraviolet radiation. Skin or eye injury could result. Avoid exposure of eyes and skin to unshielded UV lamp.
- Do not use accessories not recommended by manufacturer.


OVERVIEW

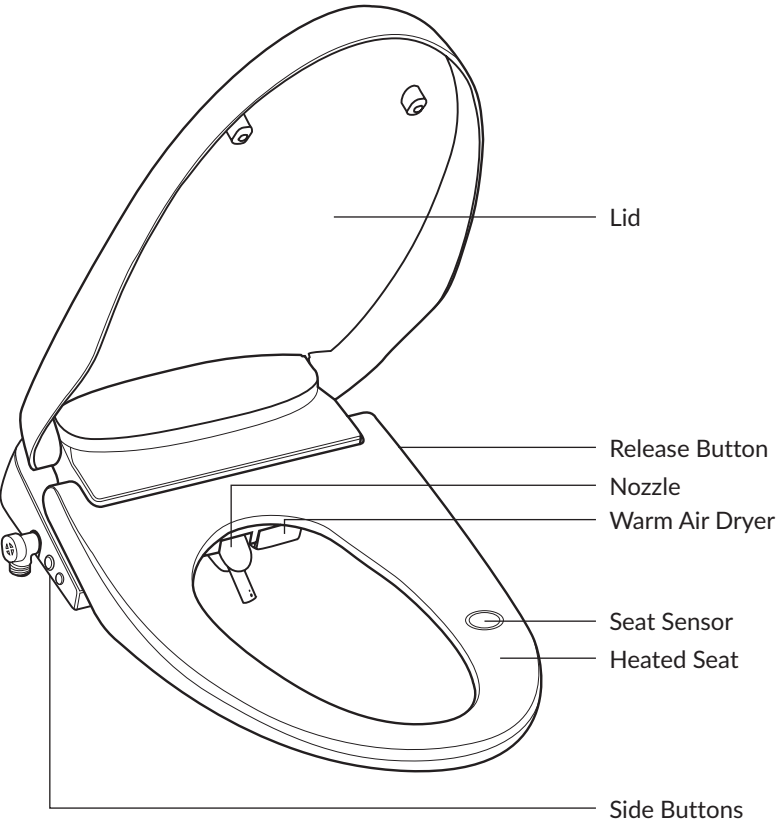

PARTS LIST

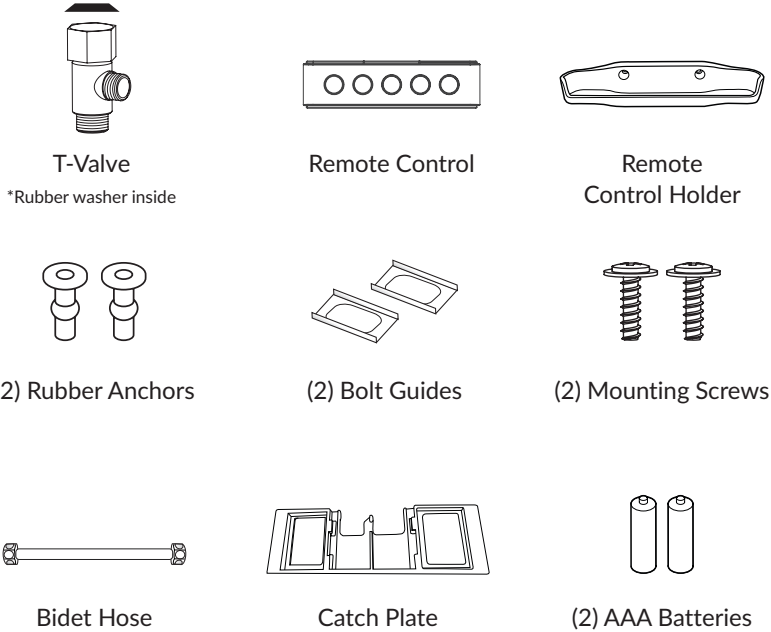


Side Buttons

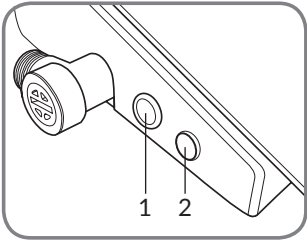

- 1. Power/Stop
- 2. Auto Wash

Stainless Steel Nozzle

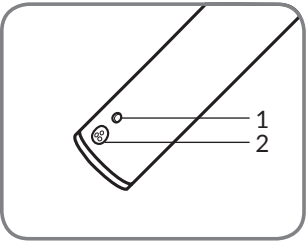


- 1. Rear Wash
- 2. Front Wash

Recommended Installation Tools



REMOTE CONTROL

Front, Top, and Back Side

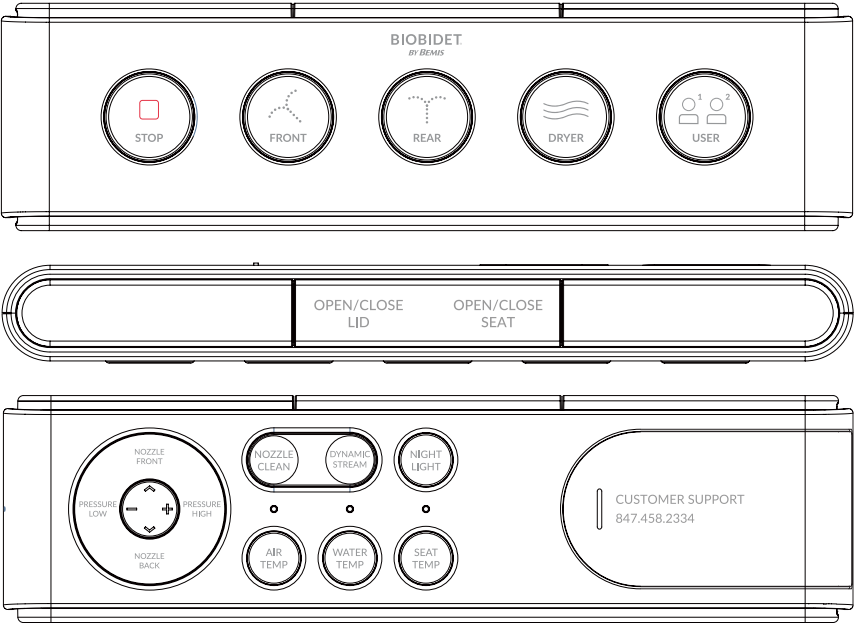

Remote Control Pairing

(Your bidet will come with the remote already paired. Follow these instructions in the event the bidet seat is not responding to the remote.)

- Unplug the bidet seat. Press and hold the “STOP” button on the remote until the indicator lights flash.
- Hold the remote close to the bidet seat and plug it back in. The indicator lights will stop flashing when the remote has successfully paired.

- Stop Button
- Adjustable Nozzle Position
- Front Wash
- Nozzle Clean
- Rear Wash
- Dynamic Stream
- Warm Air Dryer
- LED Night Light
- User Presets
- Adjustable Air Temperature
- Open/Close Lid
- Adjustable Water Temperature
- Open/Close Seat
- Adjustable Seat Temperature
- Adjustable Water Pressure

FUNCTIONS & FEATURES

Operating Your Discovery DLS

Sit Down On The Seat

This product includes a built-in seat sensor that must be activated with skin contact in order to operate bidet functions. The automatic cleaning feature will rinse the nozzle before each use.



Open/Close Lid & Seat

Press to open or close the lid and/or seat. Press and hold the “Nozzle Clean” and “Dynamic Stream” buttons for 3 seconds to turn the automatic open function on/off. This is an automatic hands-free function which makes each trip to the bathroom a safe and luxurious experience.



Stop Button

Stops all operations.



Front Wash

Press “Front Wash” to activate an oscillating front wash. Automatically, the nozzle comes out and sprays warm water towards the front. Press again to disable oscillation.



Rear Wash

Press “Rear Wash” to activate an oscillating rear wash. Automatically, the nozzle comes out and sprays warm water towards the rear. Press again to disable oscillation.



Warm Air Dryer

Reduce the need for toilet paper with a built in adjustable warm air dryer. Press to activate the warm air dryer. Adjust the fan speed to your liking. The dryer automatically turns off after 4 minutes.



User 1

Press to activate your User 1 preset wash function. (Default setting is a 2 minute Front Wash with medium pressure, followed by a 4 minute drying cycle.)



User 2

Press and hold to activate your User 2 preset wash function. (Default setting is a 2 minute Rear Wash, followed by a 4 minute drying cycle.)



Customize Your Presets

To customize your User 1 preset, press and hold the “User” and “Front” buttons at the same time. Proceed by selecting your preferred wash type (Front or Rear), and adjusting the settings to your liking. If you would like to include a drying cycle as part of your preset, simply proceed with the Dryer function as well. When finished, press and hold the “User” and “Front” buttons again to save your selections.

To customize your User 2 preset, press and hold the “User” and “Rear” buttons at the same time. Proceed by selecting your preferred wash type (Front or Rear), and adjusting the settings to your liking. If you would like to include a drying cycle as part of your preset, simply proceed with the Dryer function as well. When finished, press and hold the “User” and “Rear” buttons again to save your selections.

NOTE: If you don't press and hold the respective buttons within 15 minutes, your settings will not be saved.



Adjustable Water Pressure

Press the “Pressure High” and “Pressure Low” (+/-) buttons to adjust the water pressure to your liking.



Adjustable Nozzle Position

Adjust the nozzle position forward or backward to achieve maximum cleanliness and comfort by pressing the “Nozzle Front” and “Nozzle Back” (^, v) buttons.



Nozzle Clean

Press to extend the nozzle for manual cleaning. This feature can only be activated when the seat is not occupied.



Dynamic Stream

Press “Dynamic Stream” during a wash cycle to activate a wash that quickly alternates between warm and cold water. This feature assists in stimulating bowel movements.



LED Night Light

Easily find your way at night with the soothing glow of the night light. Press to turn the night light on/off.



Adjustable Water/Air/Seat Temperature

Adjust the temperatures of the heated seat, warm water, and the warm air dryer to your liking.




- **Low** - Blue
- **Medium** - Purple
- **High** - Red

Sound On/Off

Press and hold the night light button for 3 seconds to turn beeping sounds on/off.

Ultraviolet (UV) Sterilization

The built-in UV sterilizer automatically cleanses the nozzle after each use.

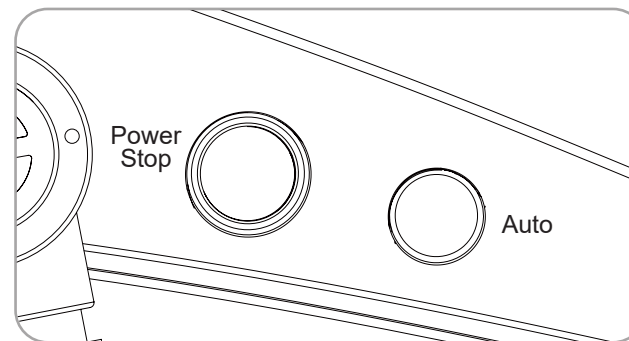

Power/Stop Button (Side button)

Turn the bidet on/off by pressing the “Power/Stop” button on the side.

Press to power on or press and hold to enter standby mode. Press while powered on to stop any operations.

- When the power button is **blue**, it is in UV sterilization mode or in use.
- When the power button is **red**, it is ready to use.

Auto Wash (Side button)

Press to start an auto wash cycle that consists of 2 minutes of rear wash with medium temperature and nozzle position settings, then 4 minutes of the dryer with medium temperature and low speed settings.


INSTALLATION GUIDE

CAUTION BEFORE INSTALLATION

Do not plug in before installation. Please contact our service center at 847.458.2334 for alternate fittings or assistance with this process.

1. Turn Off Water

Turn off the water shut-off valve. Drain the toilet tank completely by flushing the toilet. Unscrew the hose connected to the toilet tank.

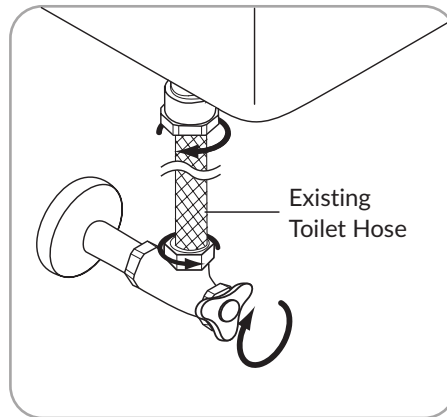


2. Remove Seat & Lid

Remove mounting bolts to release the existing toilet seat from the toilet.




3. Install Catch Plate

Insert the rubber anchors into the mounting holes. Place the catch plate and guides over each mounting hole. Insert the mounting screws through the bolt guides, catch plate, and into the rubber anchors. Fasten the catch plate to the toilet tank.

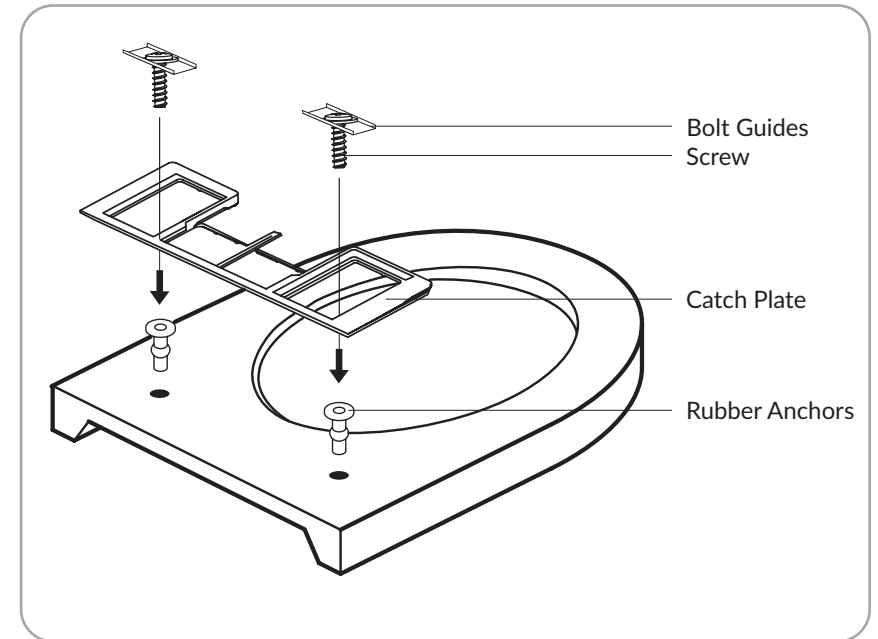

4. Install Your Discovery DLS

Slide the bidet seat all the way onto the catch plate until you hear a click.

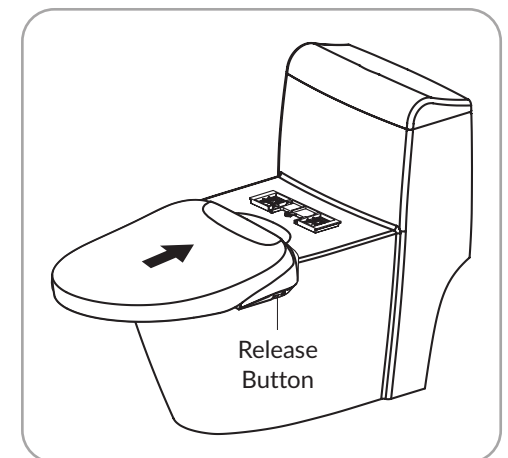

5. Connect the Water Hose


*Shut-off valve may vary. If supplied parts do not fit, please call 847.458.2334. Alternate fittings are available upon request.

- Install the t-valve on to the toilet tank. Ensure the rubber gasket is properly seated inside the t-valve.
- Connect the existing toilet hose to the water shut-off valve and t-valve.
- Connect the bidet hose to the bidet seat and t-valve.
- Open the water shut-off valve. Check for any leaking or dripping.


6. Plug It In!

Plug the power cord into a 120V power outlet.
Please contact our service center at 847.458.2334 if you have any questions.

7. Mounting the Remote

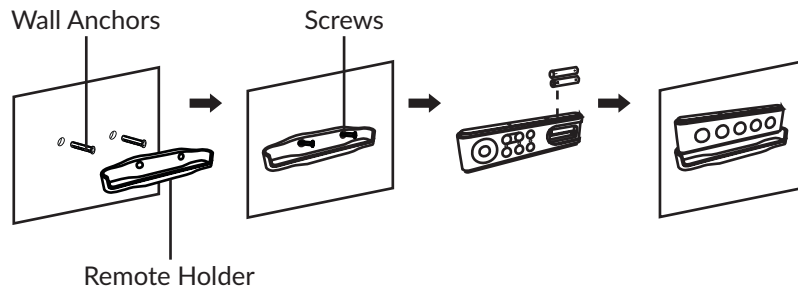


- Drill two 6mm holes on the wall that lines up with the remote holder.
- Install the wall anchors in the newly drilled holes.
- Place the remote holder over the wall anchors and attach it to the wall with the provided screws.
- Insert supplied batteries (1.5V AAA), close the battery cover, and place the remote control in the holder.

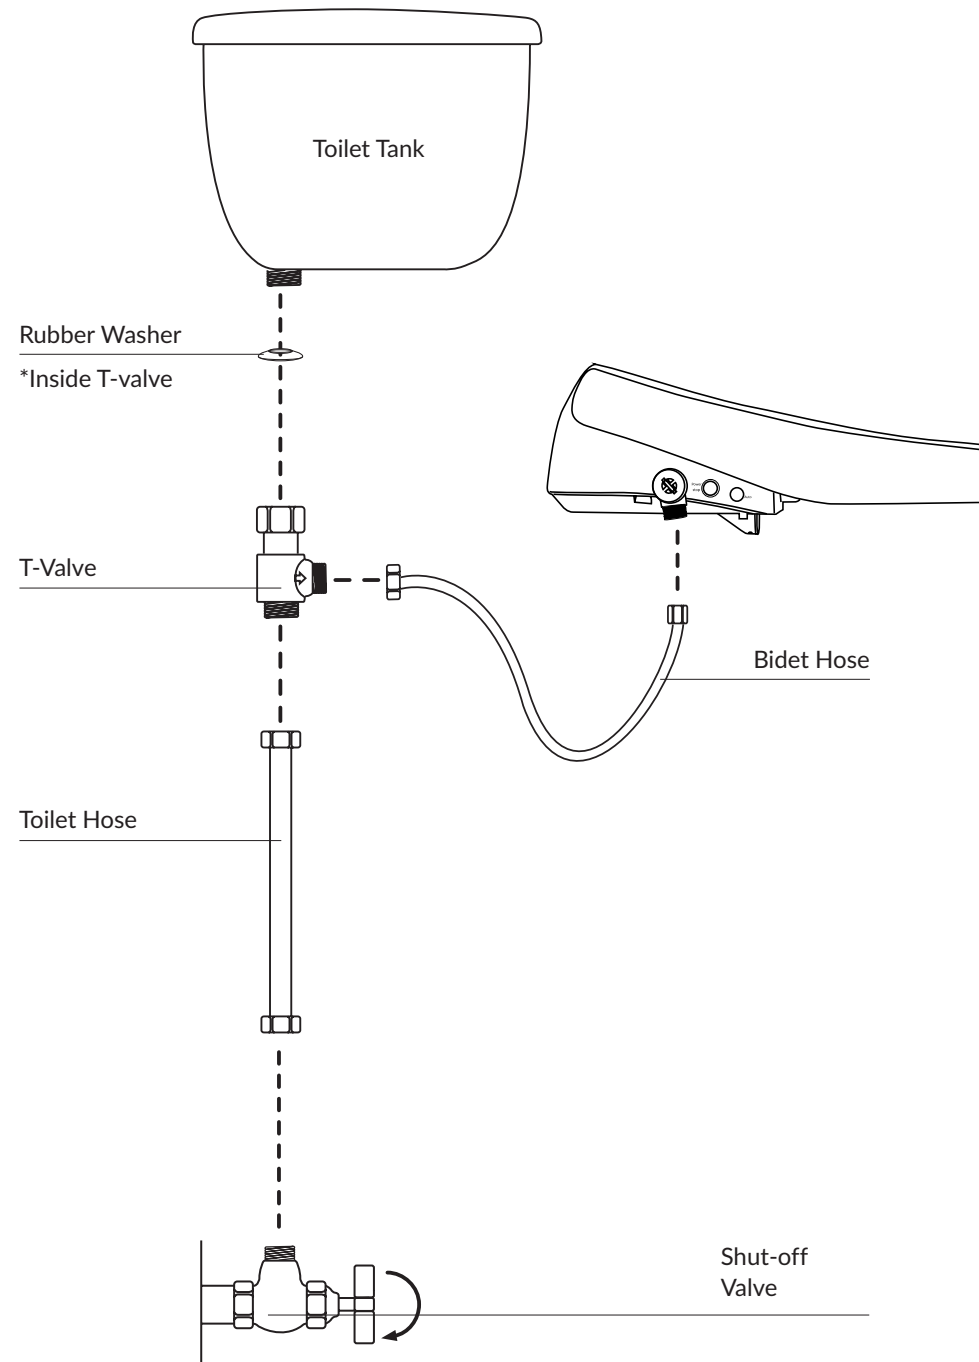

MAINTENANCE

Removing the Discovery DLS

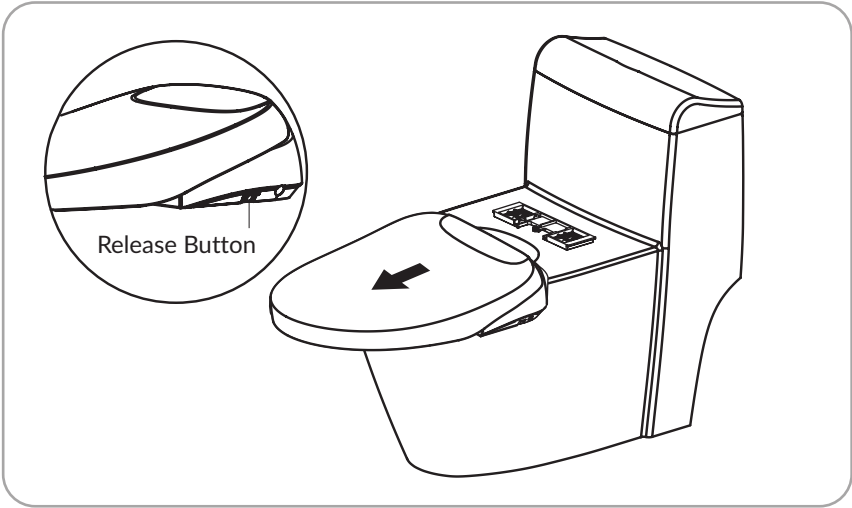

1. Disconnect the power plug.
2. Close water supply shut-off valve.
3. Drain the water from the bidet by holding the release button as shown above.
4. Remove the bidet seat from toilet as illustrated.

Cleaning the Discovery DLS

- Do not use thinner, benzene or toilet bowl cleaner, as it may cause discoloration or damage.
- Disconnect the power cord and use a wet cloth when you clean this product. Do not spray water directly on to this product.

Extended Travel

When the seat will not be used for more than a few days, it is recommended to unplug the unit and turn off the water shutoff valve.

SPECIFICATIONS

Specifications	Discovery DLS
Model	Discovery DLS
Rated Voltage	120 V, 60 Hz
Rated Power	1050 W
Waterproof Guide	IP X 4
Seat Temperature	Off / 93.2 - 102.2°F
Water Temperature	Off / 95 - 102.2°F
Water Heating	Instant
Air Temperature	95-131°F
Ambient Temperature Requirements	33.8-104°F
Dimensions (Elongated)	20.79 in. x 16.38 in. x 5.59 in.

WARRANTY

2 YEAR LIMITED WARRANTY

Bemis warrants that this product will be free of defects in material, workmanship,

and title for a period of two (2) years from the date of original purchase.

If you provide written notice of a defect to Bemis within the applicable warranty period and provide adequate documentation or evidence that establishes a Product defect to Bemis's satisfaction, your sole remedy is the repair, replacement, or refund of the Product's purchase price (less shipping, if applicable), at Bemis's option.

Bemis may, at its option, require the return of any Product for inspection and testing before honoring any defect claim. This Limited Warranty excludes component parts not specified by Bemis, and excludes costs related to shipping and labor, including removal, disposal, repair, or replacement of the defective Product and installation of replacement Product (if applicable). Products returned for a refund must be in original packaging and in saleable condition, and may be subject to a restocking fee. Discontinued colors or models, and custom or specially ordered Products cannot be returned for a refund.

This Limited Warranty is void if: (a) the Product has not been installed, used, or maintained according to any applicable written materials, including written instructions, specifications, packaging, and manuals; (b) the Product is not used for the intended application, or (c) the Product has been modified or repaired without Bemis's express written permission.

THIS LIMITED WARRANTY IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. BEMIS EXPRESSLY DISCLAIMS LIABILITY FOR SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL OR INCIDENTAL DAMAGES ASSOCIATED WITH THE PRODUCT, INCLUDING LOST PROFITS OR BUSINESS INTERRUPTIONS. BEMIS'S LIABILITY UNDER THESE TERMS AND CONDITIONS SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCTS.

Please see BemisMfg.com/terms-and-conditions for complete warranty terms.

BIOBIDET®
BY BEMIS

BIO BIDET INNOVATION LLC

7900 S IL Route 31 Crystal Lake IL 60014

T: 847.458.2334

F: 847.854.1296

support@biobidet.com

www.biobidet.com

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.This image shows a single sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

THANK YOU!

BIOBIDET®

BY BEMIS

Bio Bidet Innovation LLC

T: 847.458.2334

TOLL-FREE: 877.339.5214

7900 S IL Route 31 Crystal Lake, IL 60014

support@biobidet.com

www.biobidet.com