

SLIM THREE

USER MANUAL

BIOBIDET®
BY BEMIS



04	PRODUCT INFORMATION
	Important Safeguards Overview & Parts Wireless Remote
09	GETTING STARTED
	Functions & Features
12	INSTALLATION
	Installation Guide
16	MAINTENANCE
	Cleaning Tips Draining the Water Tank Troubleshooting Guide Specifications
20	WARRANTY
	Warranty Customer Support



Registration and
Installation Resources

Questions?
We're here to help.

847.458.2334
support@biobidet.com
www.biobidet.com


Technical support and alternate
fittings are available.

PLEASE OBSERVE THE FOLLOWING PRECAUTIONS AND INSTRUCTIONS BEFORE INSTALLATION AND USE.


- This product must be connected to a grounded 120V GFCI (ground fault circuit interrupt) outlet. Do not connect the power cord if it is damaged or broken. Do not plug the product into a loose electrical outlet.
- It is recommended to operate this product on a separate circuit. Sharing a circuit could cause the breaker to trip or lights to flicker.
- If it is necessary to use an extension cord, use only a three-pronged extension cord plugged into a proper GFCI outlet. The marked rating of the extension cord should be equal to or greater than the electrical rating of the unit (10 amp). Consult a qualified electrician or service person if you are not sure whether the unit is properly grounded.
- Do not open this product for repair without authorization from the manufacturer. Only qualified service personnel should service this product. Do not use accessories not recommended by the manufacturer.
- Connect this product to a potable cold water supply line.
- Close supervision is necessary when this product is used by children, elderly, or adults with sensitive skin. A low-temperature burn may occur when the skin has been in contact with an object at relatively low temperature for an extended period of time.
- If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto the bidet. Do not use benzene or any acid chemical detergent, as they can cause discoloration. Only neutral detergents are permitted.
- Do not plug in the power cord before connecting the water supply hose.
- Install in an area with adequate ventilation to avoid high levels of humidity, which can damage the electronic components.
- Do not touch the power cord with wet hands or reach for a product that has fallen into water. Unplug immediately.
- Unplug the bidet seat when cleaning or detaching from the toilet bowl. Do not plug in until plumbing work has been completed.
- Keep the power cord away from heated surfaces to prevent a fire hazard. Keep any flammable materials away from this product at all times.

WATER DOES IT BETTER.®

Slim Three

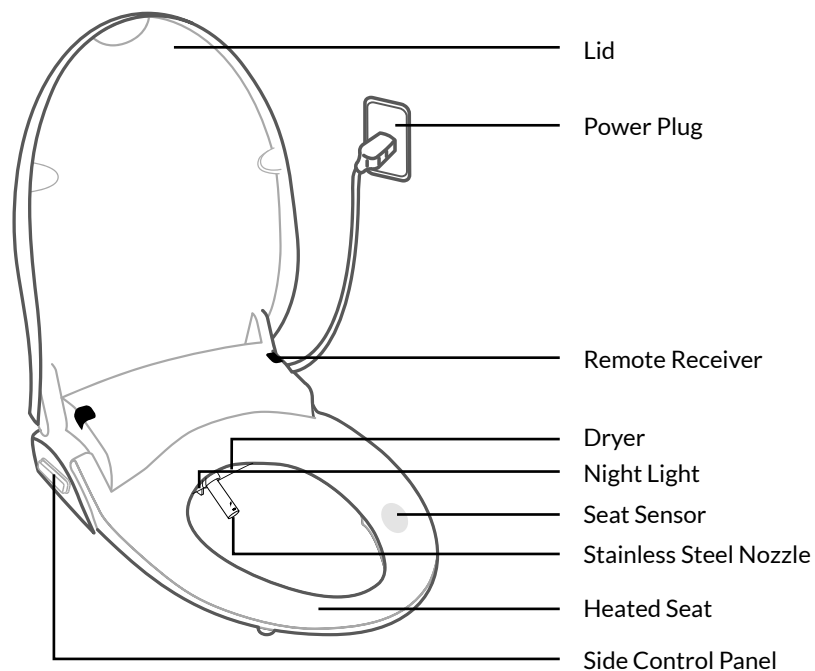


Side Control Panel

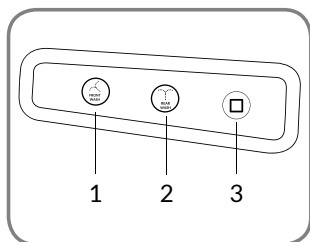


1. Feminine Wash
2. Posterior Wash
3. Stop Button

Stainless Steel Nozzle

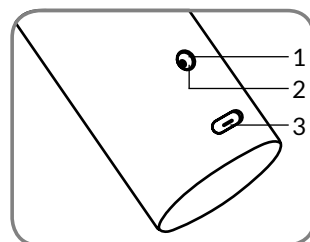

1. Turbo Wash
2. Posterior Wash
3. Feminine Wash


Slim Three Parts List

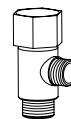

T-Valve
*Rubber Washer Inside




Top Mount
Rubber Nuts

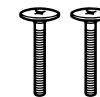


Mounting
Bolts




Washers

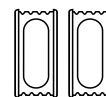


Bolt Guides

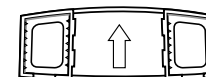


Catch Plate




Bidet Hose

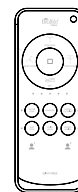

Remote
Control

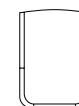

Remote
Control Bracket

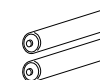

AAA
Batteries

Recommended Installation Tools




Wrench



Phillips Screwdriver

-  Stop Button
-  Rear Wash
-  Front Wash
-  Turbo Wash
-  Warm Air Dryer
-  Adjustable Nozzle Position
-  Adjustable Water Pressure
-  Adjustable Water Temperature
-  Massage
-  Nozzle Cleaning
-  Adjustable Seat Temperature
-  Child Wash
-  Energy Saving
-  User Presets

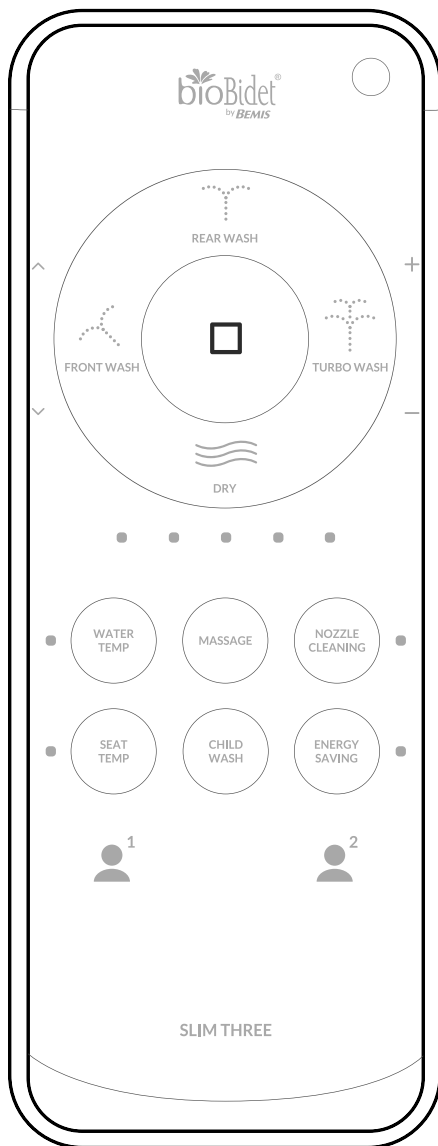

Functions & Features

The Slim Three is a bidet toilet seat designed for superior hygiene, comfort, and sustainability. Each use will leave you feeling clean and confident, while reducing your overall eco footprint.

Sit Down On The Seat

This product includes a built-in seat sensor that must be activated with skin contact in order to operate bidet functions.



Stop Button

Stops all operations.



Rear Wash

Press to activate the posterior wash cycle, carefully crafted with the optimum cleansing angle and spray pattern. Press again to oscillate.



Front Wash

Press to activate the feminine wash cycle, which offers an alternate accommodating spray pattern. Press again to oscillate.



Turbo Wash

Press to activate a focused wash with higher water pressure. Press again to oscillate.



Warm Air Dryer

Press to activate the warm air dryer. The dryer will automatically operate for 3 minutes.



Adjustable Nozzle Position

Adjust the nozzle position forward or backward to achieve maximum cleanliness and comfort by pressing the “Front” or “Rear” (^, v) buttons.



Adjustable Water Pressure

Press “High” or “Low” (+, -) to adjust the pressure of the water spray to your desired comfort level.



Adjustable Water Temperature

Adjust the water temperature by pressing the “Water Temp” button to cycle through preset temperature levels.



Massage

Press “Massage” during a wash cycle to activate a pulsating spray pattern.



Nozzle Cleaning/Sitz Bath

While not seated, press “Nozzle Cleaning” to extend the nozzle for three cycles of automatic cleaning. Afterwards, the nozzle will remain extended for manual cleaning without spraying. Press the “Stop” button to rinse and retract the nozzle when finished.

Sitz Bath - While the nozzle cleaning function is in use, press “Wash” or “Bidet” to switch to a sitz bath. The water pressure changes to low and operates for 5 minutes. The Nozzle Cleaning LED will turn on during this function. Press the “Nozzle Cleaning” button again to switch to a normal wash cycle.



Adjustable Seat Temperature

Adjust the seat temperature by pressing the “Seat Temp” button to cycle through preset temperature levels.



Child Wash

Press to activate a child-friendly wash with low water pressure, low water temperature, and an extra extended nozzle position. This wash consists of a one-minute bidet wash followed by 30 seconds of oscillation and 30 seconds of the massage function.



Energy Saving

Switch energy saving features on/off.

- **Yellow** - The seat and water temperature will be maintained at 89°F until the seat is occupied.
- **Green** - The seat and water heater will be turned off until the seat is occupied.
- **Off** - Energy Saving is deactivated.



User Presets

Nozzle position, water pressure, and temperature settings can be preset and stored for 2 users.

- Adjust the nozzle position, water pressure, and temperatures to your preference, and then press “Stop”.
- **Preset 1:** Press the “Stop” button and the ^ button simultaneously for 3 seconds. Press the “User 1” button. The lights will blink 3 times.
- **Preset 2:** Press the “Stop” button and the v button simultaneously for 3 seconds. Press the “User 2” button.
- Press the “Stop” button or wait for the wash cycle to complete.


BEFORE INSTALLATION

Do not plug the power cord in until installation is complete.

Please contact customer support at 847.458.2334 for alternate fittings or assistance with this process.

1. Turn Off Water

Turn off the water shut-off valve. Drain the toilet tank completely by flushing the toilet. Unscrew the hose connected to the toilet tank.

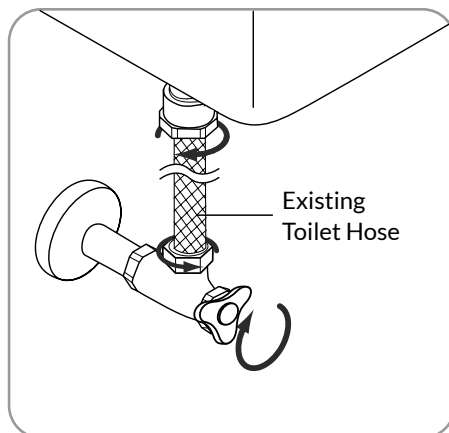


2. Remove Toilet Seat

Remove mounting bolts to release the existing toilet seat from the toilet.




3. Install Catch Plate

Insert the top mount rubber nuts into the toilet mounting holes. Place the catch plate and bolt guides over the mounting holes. Insert the mounting bolts through the washers, guides, catch plate, and into the top mount rubber nuts. Fasten to secure the catch plate on the toilet.

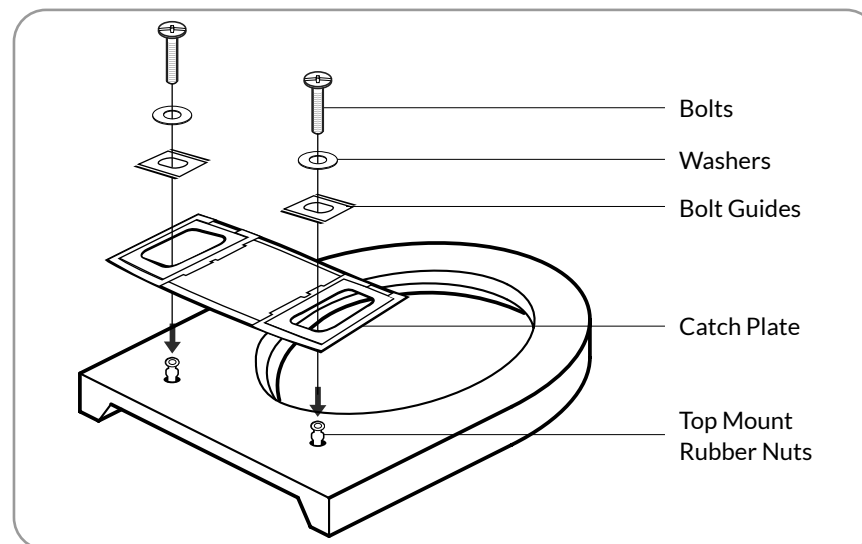

4. Install Your Slim Three

Slide the bidet seat all the way onto the catch plate until you hear a click.

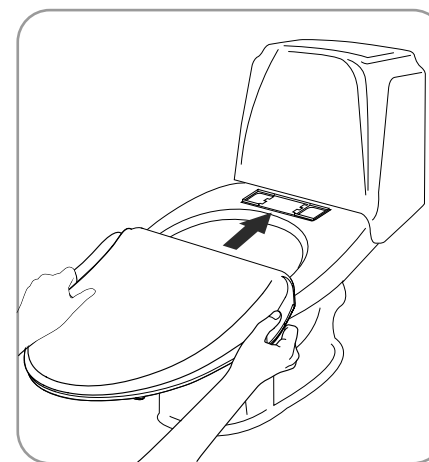

5. Connect the Water Hoses

1. Install the t-valve onto the toilet tank. Ensure the rubber washer is properly seated inside the t-valve.
2. Connect your existing toilet hose to the water shut-off valve and t-valve.
3. Connect the provided bidet hose to the bidet seat and t-valve.
4. Open the water shut-off valve. Check for any leaking or dripping.



Shut-off valves may vary. If supplied parts do not fit, please call 847.458.2334. Alternate fittings may be available upon request.

6. Plug It In!


Plug the power cord into a 120V power outlet.

7. Installing the Remote

1. Make sure to clean the area thoroughly before attaching. Attach the remote control bracket to the wall by removing the adhesive protection and placing where desired.
2. Insert two AAA batteries into the battery compartment. Ensure the batteries are inserted correctly according to polarity.

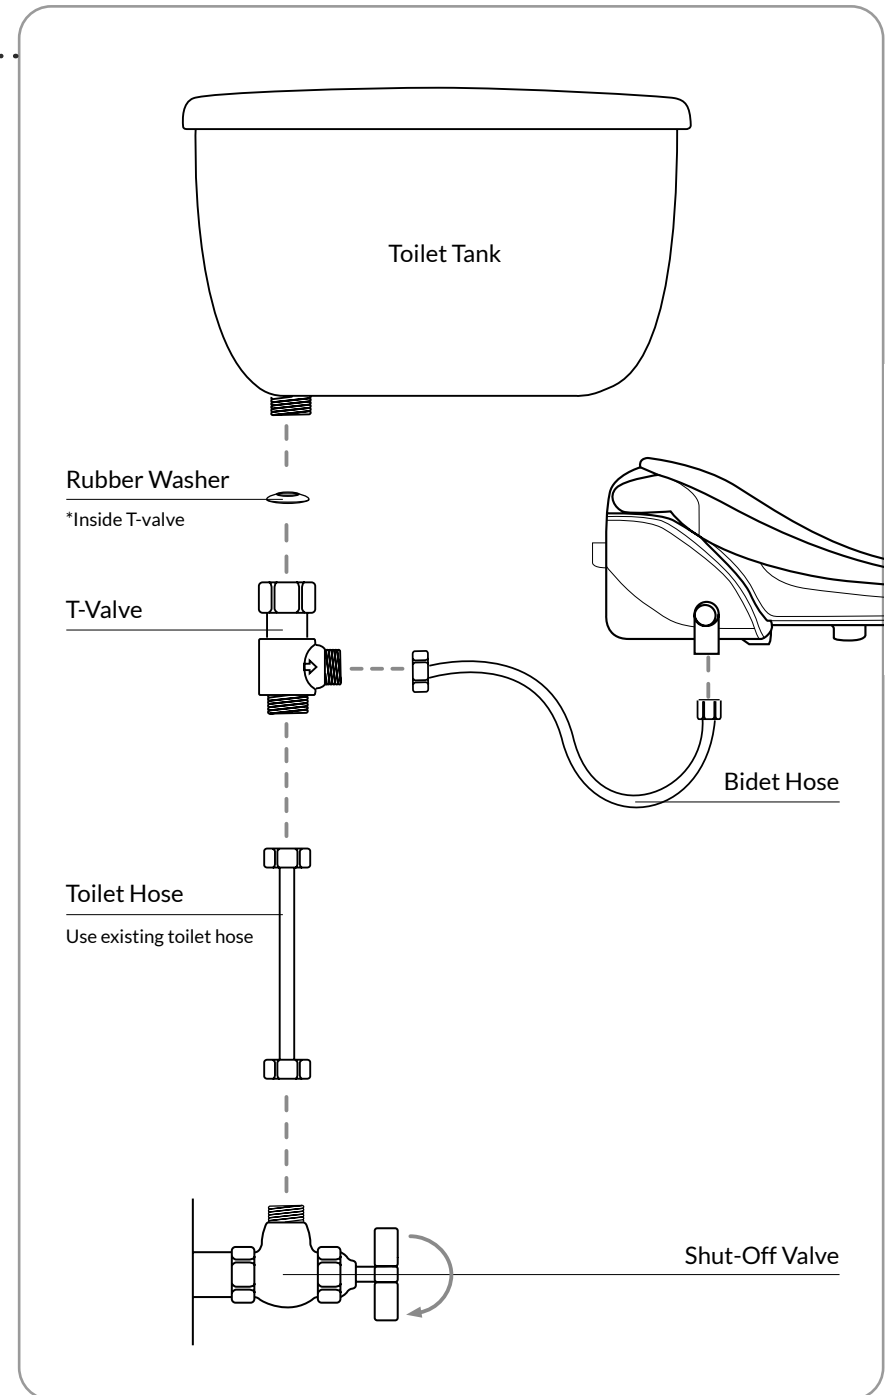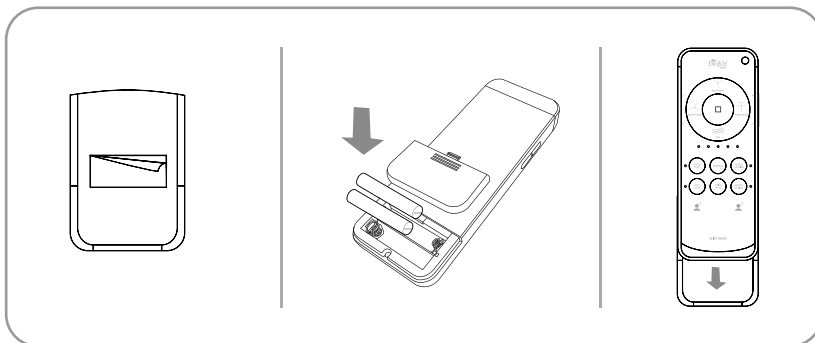

Cleaning the Strainer

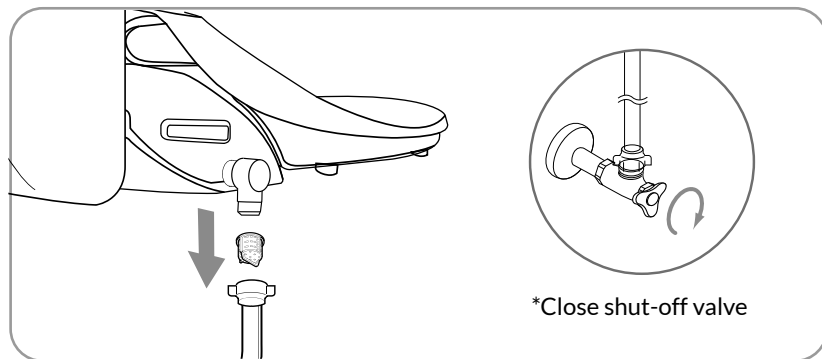


This product will not operate properly if the strainer is clogged. Please clean the strainer regularly.

1. Unplug the power cord and close the water shut-off valve.
2. Unscrew the bidet hose from the bidet seat.
3. Clean the strainer with a small brush.
4. Re-connect the bidet hose.
5. Open the water shut-off valve.
6. Plug in the power cord.

Optional Filters

Use of external water filter is only recommended in areas with known hard water issues. If a filter is used, it must be replaced every 3 months. This product is designed and intended for use exclusively with Bio Bidet water filters. The purchase or use of any other water filter is not the responsibility of Bio Bidet Innovation LLC. As such, any use of non water filters is prohibited and will void the warranty for those Bio Bidet products. Bio Bidet will not be responsible for any resulting damages or claims related to the misuse or distribution of non Bio Bidet filters.

Draining the Water Tank

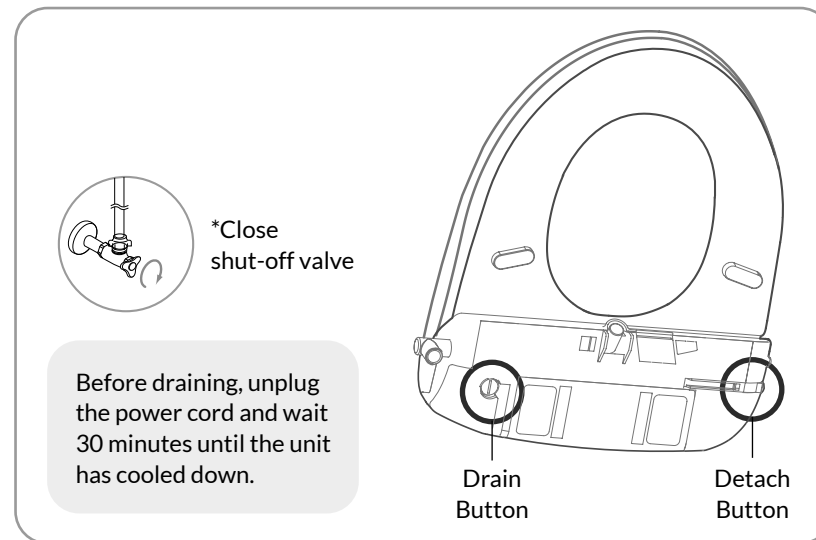

If you do not intend to use this product for an extended period of time, drain the water from this product's water tank.

1. Disconnect the power plug.
2. Close the water shut-off valve.
3. Press the detach button on the right side of the bidet and gently pull to remove the unit from the catch plate.
4. Use a flathead screwdriver to open the drain plug, which will drain the water. Wait until water is completely drained.

To resume usage after draining, reattach the bidet seat to the toilet, then open the water shut-off valve and plug in the power cord.

Cleaning the Slim Three

- Avoid using harsh cleaners to preserve the plastic material of the bidet seat. Wipe the surface with a damp cloth or neutral cleaning solution. Do not splash water onto the power plug.

Problem	Solution
Completely out of order	- Check if the power plug is connected - Check if the power supply or outlet has failed
Water does not spray	- Check if water valve is open - Check if the nozzle is blocked - Check for any kinked hoses
Water pressure is low	- Check if screen filter is blocked and clean if needed - Check if the water pressure is set to the lowest pressure setting.
Water is not warm enough	- Verify temperature is set correctly - Verify eco settings
Seat is not warm enough	- Verify temperature is set correctly - Verify eco settings
Water is leaking	- Check for any loose connections - Turn off the water supply valve and contact Bio Bidet support.

Specifications		Slim 3
Rated Voltage		AC 120V, 60Hz
Max Power Consumption		870W
Power Cord Length		1.2 m
Recommended Inlet Water Pressure		9.95 ~ 106.7 psi
Wash	Wash Volume	0.13 ~ 0.21 gal/min
	Heater Capacity	800 W
Heated Seat	Temperature Control	4 Levels (off-low-middle- high)
	Heater Capacity	250 W
Dry	Temperature Control	Room Temp - 122°F
	Heater Capacity	250 W
Feed Water Temperature Tolerance Range	37 ~ 95°F (Recommended 54~95°F)	
Usage Room Temperature Tolerance Range	37 ~ 104°F (Recommended 50~95°F)	
Dimension	Elongated	15.9" x 20.8" x 7.0"
	Round	15.9" x 19.5" x 7.0"
Weight Net Weight (Gross Weight)	Elongated	10.5 lb
	Round	10.2 lb

1 YEAR FULL WARRANTY

Bemis warrants that this product will be free of defects in material, workmanship, and title for a period of one (1) year from the date of original purchase.

If you provide written notice of a defect to Bemis within the applicable warranty period and provide adequate documentation or evidence that establishes a Product defect to Bemis's satisfaction, your sole remedy is the repair, replacement, or refund of the Product's purchase price (less shipping, if applicable), at Bemis's option.

Bemis may, at its option, require the return of any Product for inspection and testing before honoring any defect claim. This Limited Warranty excludes component parts not specified by Bemis, and excludes costs related to shipping and labor, including removal, disposal, repair, or replacement of the defective Product and installation of replacement Product (if applicable). Products returned for a refund must be in original packaging and in saleable condition, and may be subject to a restocking fee. Discontinued colors or models, and custom or specially ordered Products cannot be returned for a refund.

This Limited Warranty is void if: (a) the Product has not been installed, used, or maintained according to any applicable written materials, including written instructions, specifications, packaging, and manuals; (b) the Product is not used for the intended application, or (c) the Product has been modified or repaired without Bemis's express written permission.

THIS LIMITED WARRANTY IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. BEMIS EXPRESSLY DISCLAIMS LIABILITY FOR SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL OR INCIDENTAL DAMAGES ASSOCIATED WITH THE PRODUCT, INCLUDING LOST PROFITS OR BUSINESS INTERRUPTIONS. BEMIS'S LIABILITY UNDER THESE TERMS AND CONDITIONS SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCTS.

Please see BemisMfg.com/terms-and-conditions for complete warranty terms.

BIOBIDET®
BY BEMIS

BIO BIDET INNOVATION LLC

7900 S IL Route 31 Crystal Lake IL 60014
T: 847.458.2334
F: 847.854.1296
support@biobidet.com
www.biobidet.com

THANK YOU!

BIOBIDET®

BY BEMIS

Customer Support

T: 847.458.2334

TOLL-FREE: 877.339.5214

7900 S IL Route 31 Crystal Lake, IL 60014

support@biobidet.com

www.biobidet.com