

**doona™**

# doona™ +

## Doona Base User Guide



4-30 lbs (1.8-13.6 kg).  
17-32 in (43-81 cm).  
Language: English



Keep this user guide for future use. Store in compartment at the bottom of the product.

# Table of contents.

|                                          |    |
|------------------------------------------|----|
| <b>01/ Safety Warnings</b>               | 5  |
| <b>02/ Certifications</b>                | 6  |
| <b>03/ Registration &amp; Recall</b>     | 7  |
| <b>04/ Use Requirements</b>              | 8  |
| <b>05/ Product Overview</b>              | 9  |
| <b>06/ Use in the Vehicle</b>            | 10 |
| 6.1 Selecting a Vehicle Seating Position | 10 |
| 6.2 Compatible Vehicle Belts             | 13 |
| 6.3 Incompatible Vehicle Belts           | 14 |
| <b>07/ Installing the Doona Base</b>     | 16 |
| 7.1 Recline Angle and Leveling           | 16 |
| 7.2 LATCH Connectors                     | 17 |
| 7.3 LATCH Installation                   | 18 |
| 7.4 Lap-Shoulder Belt Installation       | 21 |
| 7.5 Lap Belt Installation                | 24 |
| 7.6 Uninstalling the Base                | 26 |

|                                                                             |           |
|-----------------------------------------------------------------------------|-----------|
| <b>08/ Installing the Doona Infant Car Seat with a Base .....</b>           | <b>28</b> |
| <b>09/ Removing the Doona Infant Car Seat<br/>from the Doona Base .....</b> | <b>30</b> |
| <b>10/ Care and Maintenance.....</b>                                        | <b>32</b> |
| <b>Re-Use after a Crash .....</b>                                           | <b>32</b> |
| <b>11/ Two-Year Warranty .....</b>                                          | <b>34</b> |
| <b>12/ Warranty Card .....</b>                                              | <b>36</b> |

Congratulations for choosing Doona's Infant Car Seat and Doona Base for your child's safety.

In order to protect your child, the Doona Base must always be used and installed as described in this user guide.

**IMPORTANT!** Keep instructions for future use. Read carefully before use. Death or serious injury can occur if you do not follow these instructions and the instructions provided in the Doona Car Seat User Guide and on the car seat and the base.

Keep this user guide in the compartment located at the bottom of the Doona Base.

If you have any questions regarding its use, feel free to contact your local distributor:

**SP DISTRIBUTION LLC  
10100 NW 25TH STREET,  
SUITE 201,  
MIAMI,  
FL 33172**

Customer Service:  
Tel: +1 (844) 477-9539  
E-mail: [info.usa@doona.com](mailto:info.usa@doona.com)

# 01 / Safety Warnings.

## **⚠ WARNING**

- Read all instructions on the car seat and base, in this user guide, and in your vehicle manual before installing the Doona Base.
- DO NOT use accessories with the Doona Base unless they are approved by Simple Parenting for use with the Doona Base. Unapproved accessories may degrade the performance of the Doona Base in a sharp turn, sudden stop, or crash.
- NEVER use the Doona Base after a crash unless crash and base meet ALL conditions in "Re-Use After A Crash" section. If any conditions are not met, then it must be replaced.
- Do not use this product if any components are broken or missing.
- Always secure the Doona Base in the vehicle with a vehicle belt or LATCH as instructed in the Doona Base user guide, even when not occupied. An unsecured Doona Base can injure other occupants in the vehicle in the event of a crash or sudden stop.
- Never leave your child unattended.
- NEVER use on a passenger seat with an active frontal airbag!



## 02 / Certifications.

The Doona Base conforms to all applicable Federal Motor Vehicle Safety Standards. This Restraint is certified for Use in Motor Vehicles.

The Doona Base has been designed, tested and certified according to US safety standards and regulations.

Do not use the Doona Base on an aircraft, only the Doona Car Seat is certified for aircraft use.

### **Vehicle Types**

The Doona Base is certified for use in all passenger cars, including SUV's, crossovers, vans, and light trucks.

### **Registered patents.**

US Patent No. 8,801,028

US Patent No. 8,469,390

US Patent No. 8,469,389

US Patent No. 8,434,781

US Patent No. 9,505,321

# 03 / Registration & Recall.

Child restraints could be recalled for safety reasons.

You must register this restraint to be reached in a recall. Send your name, address, email address if available and the restraint's model number and manufacturing date to:

**SP DISTRIBUTION LLC  
10100 NW 25TH STREET,  
SUITE 201,  
MIAMI,  
FL 33172**

Or call Customer Service at +1 (844) 477-9539

Or register on-line at:  
[www.doona.com/register](http://www.doona.com/register)

For recall information, call the US Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to [www.NHTSA.gov](http://www.NHTSA.gov)

# 04 / Use Requirements.

The Doona Base has been tested and certified in combination with the Doona Infant Car Seat.

- Use the Doona Base only with the Doona Infant Car Seat.
- For Rear-Facing use only.
- For use with children weighing 4-30 lbs (1.8-13.6 kg).

# 05 / Product Overview.



1. Base anchor points

2. Recliner knob

3. Vehicle belt guides

4. Belt lock-offs

5. LATCH adjuster strap

6. LATCH adjuster release button

7. LATCH connector release button

8. LATCH connector

9. Recline level indicator

10. Base release button

# 06 / Use in the Vehicle.

## 6.1/ Selecting a Vehicle Seating Position.


### **⚠ WARNING**

**Death or serious injury can occur.**

- NEVER place a rear-facing child restraint in a vehicle seating position with an active frontal air bag. An airbag hitting the Doona Car Seat can cause serious injuries to your child, possibly resulting in death.
- If your vehicle has a frontal airbag on the passenger side it **MUST BE DEACTIVATED** before installing a child restraint in that position. Check your vehicle manual for child restraint installation instructions.
- If your vehicle has seating positions with side airbags, check your vehicle manual for information about installing a child restraint in that position.



- **IMPORTANT!** Prevent damage to your Doona Base and your vehicle; Check that all Doona Base parts are installed as instructed to prevent them from getting caught in doors or moving seats.
- Read all instructions in this user guide and the instructions in your vehicle manual before using the Doona Base.
- According to crash statistics, children less than 12 years old are safer when properly restrained in rear seating positions than in front seating positions.
- NEVER allow others to use or install the Doona Base before they have read and understood the instructions in this user guide and the child restraint installation instructions in the vehicle manual.
- NEVER install the Doona Base on a vehicle seat that is facing the rear or side of the vehicle.

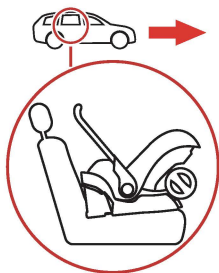

|   |                                 |     |
|---|---------------------------------|-----|
| ✓ | Forward facing vehicle seat     | yes |
| ✗ | Seat with active frontal airbag | no  |
| ✓ | Seat with lap/shoulder belt     | yes |
| ✓ | Seat with lap belt only         | yes |
| ✗ | Rear-facing vehicle seat        | no  |
| ✗ | Side-facing vehicle seat        | no  |

**!** NEVER place a rear-facing child restraint in the front seat of a vehicle with an active frontal air bag. An airbag hitting the child restraint can cause serious injuries to your child, possibly resulting in death. For vehicle seats with side airbags, please observe the instructions in your vehicle manual.



## 6.2 Cinturones de Vehículos Compatibles

- 1. Combination lap-shoulder belts with free sliding latch plates.**
  - The retractor on most lap-shoulder belts with free sliding latch plates can be locked. Lap-shoulder belts with lockable retractors can be used with a car seat. Pull the vehicle belt all the way out, then let it feed back in about 12 inches and pull out again. If the belt cannot be pulled back out, the retractor is locked.
  - If the retractor cannot be locked, a locking clip will be needed in order to install a car seat with this vehicle belt, contact your local Simple Parenting distributor to request one.
- 2. Combination lap-shoulder belts with locking latch plates.** Locking latch plates hold a car seat secure by keeping the lap belt locked unless the latch plate is tilted.
- 3. Inflatable Vehicle Seatbelts:** The Doona can be installed with a Ford/Lincoln inflatable seatbelt. Installation with base; The lockoff will not close around the inflatable seatbelt. Follow instructions for installation with base for lap-shoulder belt installation and route the shoulder belt over the closed belt lockoff.
- 4. Lap belts with locking latch plates.**
- 5. Lap belts with locking retractors.** Pull the vehicle belt all the way out, then let it feed back in about 12 inches and pull out again. If the belt cannot be pulled back out, the retractor is locked. **DO NOT** use a lap belt with a retractor that does not lock.

## 6.3. Incompatible Vehicle Belts

### **⚠ WARNING**

NEVER install the Doona Infant Car Seat with the Doona Base in a vehicle with the following types of vehicle belts. Check your vehicle manual for information about the vehicle's seat belt type.

**1.** Vehicle belts that are attached to the door in any way.



**2.** A vehicle belt that moves along a track automatically to restrain the passenger when the door is closed.



**3.** Lap belts with a retractor that does not lock.



**4.** Inflatable seat belts or seat belt airbags, indicated with a label, in vehicles from manufacturers other than Ford and Lincoln.



**5.** Lap belts forward of the seat bite or crease do not always allow for a secure installation. Check that Doona Base stays securely installed as instructed in the installation section. DO NOT install with a vehicle belt that does not allow a secure installation



**6.** Combination Lap-shoulder belt with two ELRs. Lap-shoulder belts that have a separate non-locking retractor each for the lap section and the shoulder section.






# 07 / Installing the Doona Base.

## ⚠ WARNING

The Doona Base must be properly leveled to provide a safe recline position for your child when the Doona Car Seat is placed on the base. Always check for correct level after placing your child, in the Doona Car Seat, on the base.

### 7.1. Recline Angle and Leveling

- Before you install the Doona Base, park the car on a level surface.
- To adjust the level of the base, rotate the recliner knob (#2). **(pic.a)**.
- The base is leveled when the white markers on the recline level indicators (#9) on both sides are completely within the green area **(pic.b)**.
- If you cannot level the base properly by adjusting the recline foot, please follow these steps:
  - Try installing the Doona Base on a different seat. OR
  - Place a rolled soft object (e.g. towel or pool noodle) in the vehicle seat bight and place the base on the rolled soft object to level the base **(pic.c)**.

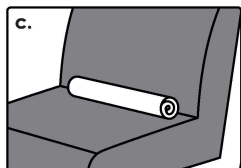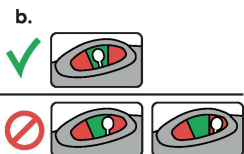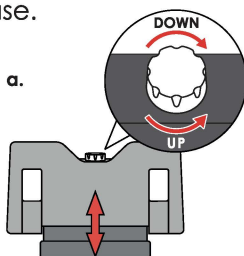


**IMPORTANT:** If a rolled soft object is required, ensure that the recliner knob (#2) on the base remains on its lowest position (turned all the way clockwise).

## 7.2. LATCH Connectors


The Doona Base can be installed in the vehicle either with the LATCH system or with a vehicle seat belt.

LATCH stands for Lower Anchors and Tethers for Children; these anchors are specifically designed for car seat installation. Since 2002, LATCH anchor points are required by law in the USA for all vehicles. Not all seating positions are equipped with lower anchors. Check your vehicle manual for information on the location of available LATCH lower anchors if the vehicle is equipped with LATCH anchor points. The Doona Base and Car Seat do not have a top tether and do not use the top tether anchor in the vehicle.

To release the LATCH connector (#8) from its storage slot in the Doona Base or from the LATCH anchor points in the vehicle, press and hold the red LATCH connector release button (#7) and pull it out.

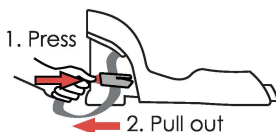

To store the LATCH connectors (#8), push them into the storage slots in the base until they click into place.

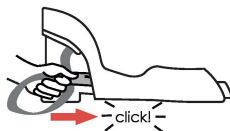


## **! WARNING**

LATCH connectors should always be stored in their storage slots in the base when not in use.

## 7.3. LATCH Installation

### **⚠ WARNING**

- The Doona Base must be properly secured in the vehicle before installing the Doona Infant Car Seat on it.
- Before using the Doona Base in the vehicle, you must first adjust its level. The white marker on the recline indicator must be completely within the green zone.
- The front edge of the Doona Base bottom must be in contact with the vehicle seat bottom. At least 80% of the Doona Base must be in contact with the vehicle seat bottom. Never use the Doona Base on a short vehicle seat bottom that supports less than 80% of the Doona Base.
- The Doona Base can be installed in the vehicle either with the LATCH system or with the vehicle belt. **DO NOT** attempt to install the Doona Base using both the LATCH system and the vehicle belt.
- Check your vehicle manual for information on seating positions equipped with LATCH and the position of Lower Anchor points.
- Never install the Doona Base with LATCH in a seating position that uses non-standard Lower Anchor spacing. Standard Lower anchor spacing is 11" (280 mm).

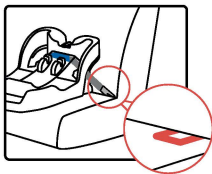





**Step 1:** Release the LATCH connectors (#8) from their storage slots in the Doona Base - press and hold the red LATCH connector release buttons (#7) and pull the LATCH connectors out (**pic.a**).

**Step 2:** Lengthen the LATCH adjuster strap (#5) - press and hold the LATCH adjuster strap release button (#6), then pull the strap (**pic.b**).

**Step 3:** Place the Doona Base flat on the vehicle seat bottom of the desired vehicle seating location, contacting the vehicle seat back. Place the base's LATCH connectors on the vehicle's LATCH anchor points, then press them in until you hear a click sound (**pic.c**).

**Step 4:** Adjust the level of the base until the white markers on the recline level indicators are entirely in the green zone.


**Step 5:** Tighten the LATCH adjuster strap (#5) - while pressing the Doona Base down into the seat and pulling the LATCH adjuster straps up (**pic.d**).

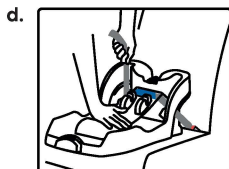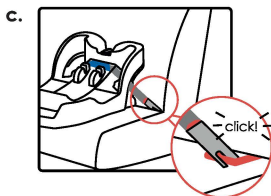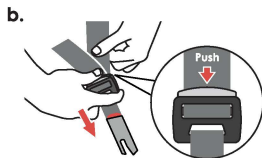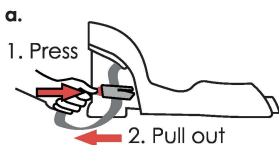

**STEP 6:** Check for a secure installation: grasp the Doona Base at the belt guides and push side to side and front to back. The Doona Base should not move more than 1" in any direction.

**IMPORTANT!**

- After completing installation, check that the white marker in the recline indicator is still entirely within the green zone. It may be necessary to go back to step 4 and adjust the recline foot.

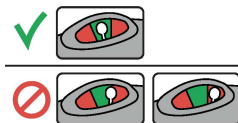

- If the Doona Base cannot be securely installed in this seating position, try moving to a different vehicle seating position, or installing with the vehicle belt.


## 7.4. Lap-Shoulder Belt Installation

### **WARNING**

- Before installing the Doona Base in the vehicle, check if the vehicle seating position and belt are compatible, check your vehicle manual and see section 6. Use in the Vehicle.
- The Doona Base must be secured in the vehicle before installing the Doona Infant Car Seat in it.
- Before using the Doona Base in the vehicle, you must first adjust its level. The white marker on the recline indicator must be completely within the green zone.
- The front edge of the Doona Base bottom must be in contact with the vehicle seat bottom. At least 80% of the Doona Base must be in contact with the vehicle seat bottom. Never use the Doona Base on a short vehicle seat bottom that supports less than 80% of the Doona Base.
- The Doona Base can be installed in the vehicle either with the LATCH system or with the vehicle belt. DO NOT attempt to install the Doona Base using both the LATCH system and the vehicle belt.
- When installing the Doona Base with a lap-shoulder belt, ensure LATCH connectors are always stored in their storage slots in the base.
- Vehicle seat belt must lock and maintain a secure installation of the Doona Base. If it cannot be locked, try installing with LATCH, in a different vehicle seating position, or contact Simple Parenting for a locking clip.

**Step 1:** Place the Doona Base flat on the vehicle seat bottom of the desired vehicle seating location, contacting the vehicle seat back.

**Step 2:** Adjust the level of the base until the white markers on the recline level indicators are entirely in the green zone.

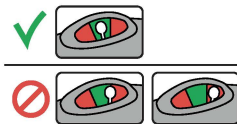

**Step 3:** Pull the vehicle's Lap-Shoulder belt out. Ensure it is not twisted.

**Step 4:** Route the vehicle seat belt under and through the first vehicle belt guide (#3), then through the second vehicle belt guide (#3) **(pic.a)**.

**Step 5:** Engage the vehicle seat belt buckle tongue in the vehicle seat buckle **(pic.b)**.

**Step 6:** Tighten the lap belt of the vehicle seat belt **(pic.c)**. Engage the vehicle belt retractor lock, if equipped. Press down on the base and then feed the belt back into the retractor.

**Step 7:** Once the vehicle seat belt has been tightened, lock the blue lock-off clip to hold the belt tight **(pic.d)**. If installing with an inflatable vehicle belt, the blue lock-off will not close and lock, see instructions for inflatable vehicle belts below. **Make sure to only use the lock-off placed opposite from the side where the vehicle belt buckle is located.**

**Note:** The blue lock-off will not make a click sound when locked.


#### **For Inflatable Vehicle Belts:**

The blue lock-off cannot be closed and locked on inflatable vehicle belts because they are too thick. If installing with an inflatable seatbelt, close the blue lock-off on the side opposite the vehicle belt buckle and place the shoulder belt over it. Make sure the vehicle belt retractor is in locking mode and the vehicle belt is securely tightened around the base.

**Step 8:** Check for a secure installation: grasp the Doona Base at the belt guides and push side to side and front to back. The Doona Base should not move more than 1" in any direction.

## ⚠ WARNING

- DO NOT lock both of the blue lock-offs onto the vehicle seat belt!

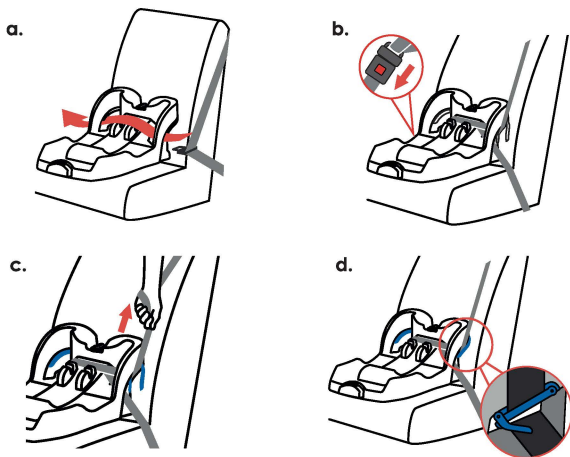

## IMPORTANT!

- After completing installation, check that the white marker in the recline indicator is still entirely within the green zone. It may be necessary to go back to step 2 and adjust the recline foot.
- If the Doona Base cannot be securely installed in this seating position, try moving to a different vehicle seating position, or installing with LATCH.

## 7.5. Lap Belt Installation

### **WARNING**

- Before installing the Doona Base in the vehicle check if the vehicle seating position and belt are compatible, check your vehicle manual and see section 6. Use in the Vehicle.
- The Doona Base must be secured in the vehicle before installing the Doona Infant Car Seat on it.
- Before using the Doona Base in the vehicle, you must first adjust its level. The white marker on the recline indicator must be completely within the green zone.
- The front edge of the Doona Base bottom must be in contact with the vehicle seat bottom. At least 80% of the Doona Base must be in contact with the vehicle seat bottom. Never use the Doona Base on a short vehicle seat bottom that supports less than 80% of the Doona Base.
- The Doona Base can be installed in the vehicle either with the LATCH system or with the vehicle belt. DO NOT attempt to install the Doona Base using both the LATCH system and the vehicle belt.
- When installing the Doona Base with a lap belt, ensure LATCH connectors are always stored in their storage slots in the base.
- Vehicle seat belt must lock and maintain a secure installation of the Doona Base. If it cannot be locked, try installing with LATCH, in a different vehicle seating position, or contact Simple Parenting for a locking clip.

**Step 1:** Place the Doona Base flat on the vehicle seat bottom of the desired vehicle seating location, contacting the vehicle seat back.

**Step 2:** Lock belt lock-offs (#4) on both sides of the Doona Base (pic.a). The lock-offs are NOT in use when installing Doona Base with a lap belt.

**Step 3:** Adjust the level of the base until the white markers on the recline level indicators are entirely in the green zone.




**Step 4:** Pull the vehicle's lap belt out. Ensure it is not twisted.

**Step 5:** Route the vehicle seat belt under and through the first vehicle belt guide (#3), and through the second vehicle belt guide (#3) (pic.b).

**Step 6:** Engage the vehicle seat belt buckle tongue in the vehicle seat buckle (pic.c).

**Step 7:** Tighten the lap belt (pic.d). Pull the free end of the lap belt while pushing down in the center of the base, or if your vehicle lap belt is equipped with a retractor, engage the locking mode and then feed belt back into the retractor while pushing down in the center of the base.

**Step 8:** Check for a secure installation: grasp the Doona Base at the belt guides and push side to side and front to back. The Doona Base should not move more than 1" in any direction.

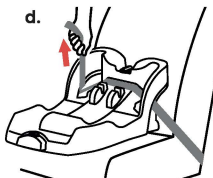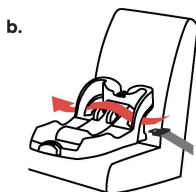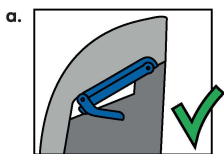


## ⚠ WARNING

- DO NOT use the blue lock-offs when installing the Doona Base with a lap belt.

### IMPORTANT!

- After completing installation, check that the white marker in the recline indicator is still entirely within the green zone. It may be necessary to go back to step 3 and adjust the recline foot.

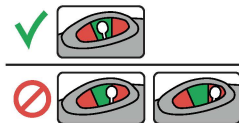

- If the Doona Base cannot be securely installed in this seating position, try moving to a different vehicle seating position, or installing with LATCH.

## 7.6. Uninstalling the Base

- Uninstalling the base when installed with LATCH:

**Step 1:** Press the LATCH adjuster release button (#6) to release tension on the LATCH strap (pic. 1).

**Step 2:** Press and hold the LATCH connector release buttons (#7) and pull the LATCH connectors (#8) off of the vehicle LATCH anchors (pic. 2)

**Step 3:** Store the LATCH connectors by pushing them into their storage slots in the base until they click into place (pic. 3). Pull LATCH adjuster strap to remove slack from LATCH belt.


- Uninstalling the base when installed with a vehicle belt:

**Step 1 (pic. 4):** If installed with a lap-shoulder belt, open the belt lock-off on the shoulder belt (#4).


**Step 2 (pic. 5):** Release the vehicle belt buckle.

**Step 3 (pic. 6):** Pull the vehicle belt out of the Doona Base.

Uninstalling the base when installed with LATCH:

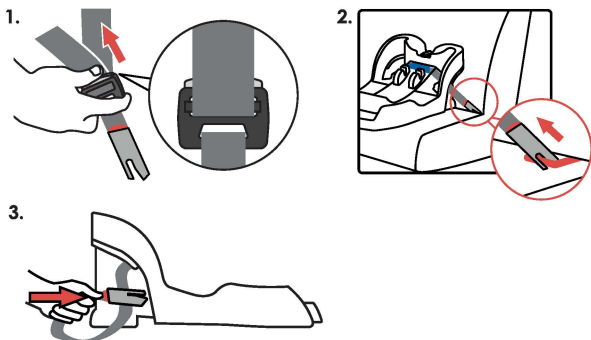

Uninstalling the base when installed with a vehicle belt:

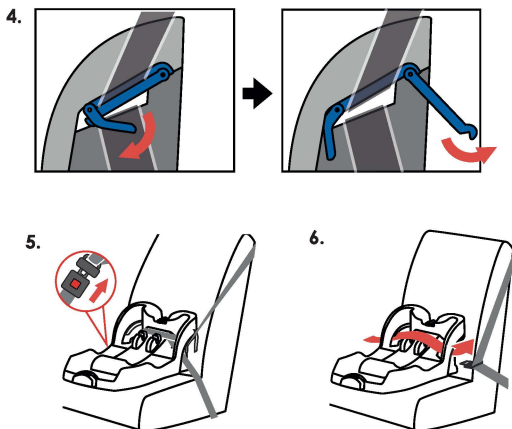

# 08 / Installing the Doona Infant Car Seat with a Base.

## **WARNING**

- The Doona Base must be secured in the vehicle before installing the Doona Infant Car Seat in it.
- Before you install the Doona Infant Car Seat in the Doona Base, make sure it is in car seat mode and the handle is in the upright position B.
- Vehicle seat belt must lock and maintain a secure installation of the Doona Base. If it cannot be locked, try installing with LATCH, in a different vehicle seating position, or contact Simple Parenting for a locking clip.

**IMPORTANT!** For further information on the Doona Infant Car Seat use modes, changing between use modes and adjusting the rotation angle of the handle please refer to the Doona Infant Car Seat user guide.


**Step 1:** When the Doona Infant Car Seat is in carrier mode (wheels are folded), and the handle is in its vertical B position, place the Doona Infant Car Seat facing the back of the vehicle (opposite the direction of driving) **(pic.a)**.

**Step 2:** Align the Doona Infant Car Seat above the base anchor points and slide it down until a click is heard and it is locked in place (**pic.b**).

**Step 3:** Lift to ensure that the Doona Infant Car Seat is properly secured (**pic.c**).

**Step 4:** Check the base release button - it should turn from red to green once the Doona Infant Car Seat is successfully locked in the base (**pic.d**).

**Step 5:** Rotate the handle toward the back of the vehicle into position C, for anti-rebound protection (**pic. e**).

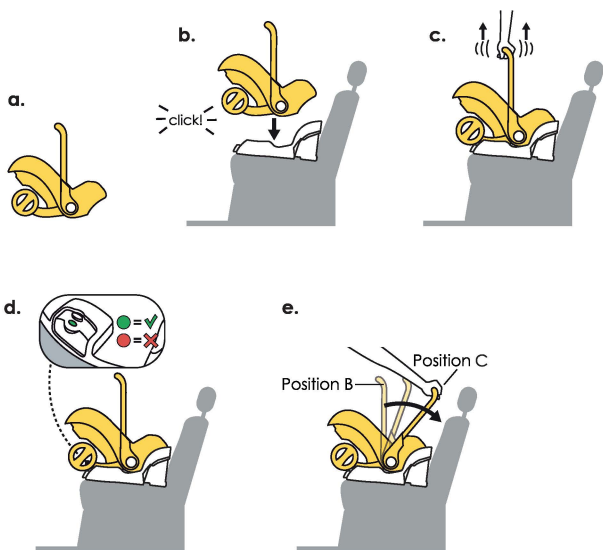






## 09 / Removing the Doona Infant Car Seat from the Doona Base.

**Note:** For further information on the Doona Infant Car Seat use modes, changing between use modes, and adjusting the rotation angle of the handle, please refer to the Doona Infant Car Seat user guide.

**Step 1:** Rotate the Doona Infant Car Seat handle to its vertical position B (**pic. a**).

**Step 2:** Press and hold the base release button (#10) and slightly tilt the Doona Infant Car Seat toward your body until it is released from the base anchor points (#1) (**pic.b**), then lift the Doona Infant Car Seat up and remove it from the car (**pic.c**).

**Step 3:** Unfold the Doona Infant Car Seat wheels (**pic.d**), rotate and extend the handle to 'stroller mode' (**pic.e**) and you are ready to go!

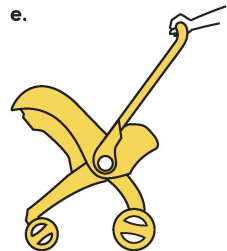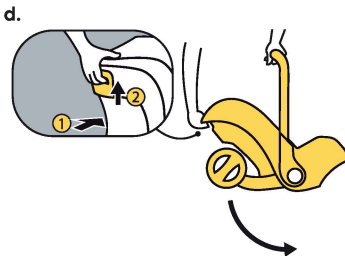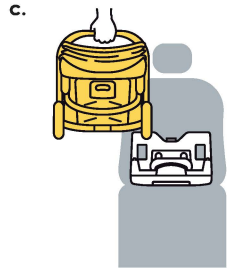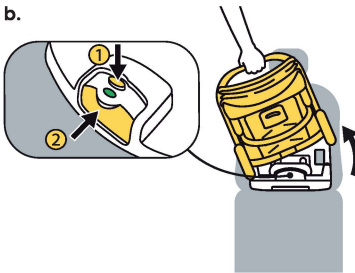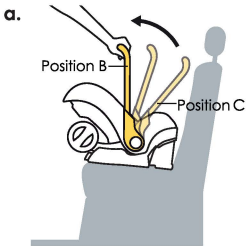

# 10/ Care and Maintenance.

## **WARNING**

- NEVER use the Doona Base after a crash unless crash and base meet ALL conditions in "Re-Use After A Crash" section. If any conditions are not met, then it must be replaced.
- Regularly check all parts for damage. Ensure the correct operation of all mechanical components.
- Never use spare parts or accessories other than those supplied or approved by the manufacturer – The Doona Base is compatible only with the Doona Infant Car Seat.

## Re-Use after a Crash

NHTSA recommends that car seats be replaced following a moderate or severe crash in order to ensure a continued high level of crash protection for child passengers. Car seats do not automatically need to be replaced following a **minor crash**.

### What defines a minor crash?

A minor crash is one in which ALL of the following apply:

- The vehicle was able to be driven away from the crash site.
- The vehicle door nearest the car seat was not damaged.

- None of the passengers in the vehicle sustained any injuries in the crash.
- If the vehicle has air bags, the air bags did not deploy during the crash; and
- There is no visible damage to the car seat.

**NEVER** use a car seat that has been involved in a moderate to severe crash. Always follow manufacturer's instructions.

<https://www.nhtsa.gov/car-seats-and-boosters-seats/car-seat-use-after-crash>

## Cleaning

It is recommended to clean the Doona Base periodically, in order to keep it properly functioning.

Always remove the Doona Infant Car Seat before cleaning the Doona Base. It is also recommended to remove the Doona Base from the car in order to clean it properly.

Surface clean with a damp cloth. DO NOT use any solvents, harsh detergents, or lubrication. Using anything other than mild detergents, like dish soap, can weaken components and cause malfunction.

## Replacement Parts

Replacement parts are available for the Doona Base. To order replacement parts, contact your local distributor's customer service:

**SP DISTRIBUTION LLC**  
**10100 NW 25TH STREET,**  
**SUITE 201, MIAMI, FL 33172**

Customer Service:  
Tel: +1 (844) 477-9539  
E-mail: [info.usa@doona.com](mailto:info.usa@doona.com)

# 11 / Two-Year Warranty.

We guarantee that the Doona Base was manufactured in accordance with the US safety standards and regulations, and it meets the highest standards of quality.

For the Doona Base we provide a 2-year warranty against manufacturing or material defects.

The warranty period is effective from the day of purchase.

As proof of purchase we ask that you fill out the Warranty Card and retain it for the whole term of the warranty period, together with your sales receipt. In case of a warranty claim, the Warranty Card must be returned together with the product to your local distributor.

Please also register your Doona Base online at:

[www.doona.com/register](http://www.doona.com/register)

The Warranty will cover a Doona Base which has been handled properly.

The warranty is valid only with Simple Parenting's replacement components for this product.

Simple Parenting reserves the option to provide repair or replacement components for this product.

The warranty does not apply in the following cases:

- The product shows normal signs of wear and tear.
- Damage occurred as a result of exposing the product to excessive stress.
- Damage occurred as a result of inappropriate or improper use.
- The product has been used for a purpose other than that specified in this user manual.
- Damage occurred as a result of use of accessories or parts not made by Simple Parenting for use with the Doona Base.

In the event of a warranty claim, please contact your local distributor:

Customer Service Tel: +1 (844) 477-9539

E-mail: [info.usa@doona.com](mailto:info.usa@doona.com)

# 12 / Warranty card.

Warranty card:

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Zip code: \_\_\_\_\_

City/Town: \_\_\_\_\_

State: \_\_\_\_\_

Telephone no. (including area code): \_\_\_\_\_

E-mail address: \_\_\_\_\_

Product serial number : \_\_\_\_\_

Retailer (store where purchased): \_\_\_\_\_

Receipt number: \_\_\_\_\_