




EOTECH®

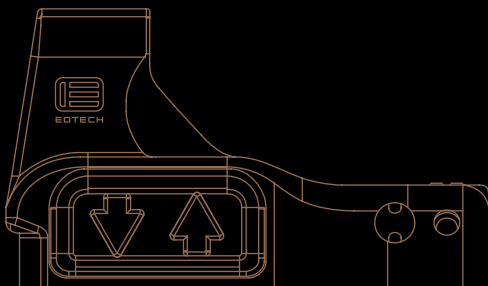

EFLX Mini Reflex Sight

Export of this product is strictly controlled and enforced by the U.S. Department of Commerce, Bureau of Industry and Security, as prescribed in the Export Administration Regulation (EAR), Title 15, Code of Federal Regulations, Parts 730-774. EOTECH LLC does not authorize any of its dealers or distributors to export this commodity without prior, written authorization, and will not provide warranty or post-sales support of unauthorized international exports.

Contents

1 / FEATURES

Anatomy	4
Specifications	5

2 / GET STARTED

Adjustments	6
On/Off	
Programmable Shutoff	
Brightness Adjustment	
Night Vision	
Elevation and Windage Adjustments	
Battery	9
Mounting	10
Package Contents	11

3 / MAINTENANCE

Cleaning Instructions	12
Operator Level Maintenance	13
Service and Repair	14
Contact Information	15

Anatomy

The EOTECH EFLX mini reflex sight (MRS) is engineered and constructed to meet the rugged demands of the serious shooter. The EFLX MRS combines speed, durability and simplicity in a small package to produce an optic that is ideal for most pistol platforms.



Specifications

Magnification	1X
Illumination Source	LED
Eye Relief	Unlimited
Dot Size	3 MOA or 6 MOA models
Dot Color	Red
Weight	1.4 oz (35g) with battery
L x W x H	1.9" x 1.2" x 1" (47 x 30.5 x 25.4mm)
Adjustments	1 MOA per click
Battery Type	1 x CR2032
Battery Life	Approx 25,000 hrs (3 MOA) at brightness level 5 Approx 20,000 hrs (6 MOA) at brightness level 5
Auto Shut-Off Options	User selectable to shut-off after 12 hours or for no shut-off
Daytime Settings	8 (7 daytime / 1 ultra-bright)
Night-Vision Settings	1
Switch Type	Push Buttons
Mounting Interface	Leupold® Delta Point Pro™
Housing Material	Aluminum

Adjustments

On/Off

- To turn on the optic, press either the up or down arrow.
- To turn off, press and hold the down arrow for 2 seconds.

Programmable Shutoff

The EFLX MRS contains an auto-shutdown feature that will automatically turn the illumination off after approximately twelve hours of inactivity (no button pushes). This preserves battery life and eliminates the chance of accidentally leaving the illumination on.

To activate:

1. When the unit is off, press DOWN to turn the unit on with 12 hour shut-off
2. When the unit is off, press UP to turn the unit on without auto shut-off
3. Long press UP or DOWN for 2 seconds to turn off the unit

Brightness Adjustment

Use the appropriate up or down arrow to adjust the brightness.

- Pressing the up arrow will increase brightness
- Pressing the down arrow will decrease brightness

The illumination is designed to turn-on at the same setting where it was turned off. This allows the shooter to quickly return to a favored brightness setting with just a single button push.

Night Vision

The single night vision setting is the lowest brightness setting on the EFLX. It is below level 1 of the daytime settings. From the level 8 daytime setting, press the down button 8 times to arrive at the NV setting.



Decrease
Illumination

Increase
Illumination

Elevation and Windage Adjustments

The EOTECH EFLX MRS contains precision adjustable elevation and windage dials for zeroing your firearm.

The adjustments contain an audible click to assist the shooter in making the proper Point-of-Impact (POI) correction. The adjustments are calibrated at 1 MOA per click.



Elevation:

Counter-clockwise = POI up
Clockwise = POI down



Windage:

Counter-clockwise = POI right
Clockwise = POI left

Battery

Battery Replacement

To change the battery, unscrew the battery cap using the provided tool. Remove the battery and replace with a new CR2032 battery. The battery should be inserted with the positive side facing upward.

Low Battery Indicator

In a low battery condition the reticle will flash 6 times every 1 second upon initial power on.



Battery
Cap

Mounting

The EFLX MRS is capable of being mounted directly onto an appropriately milled slide, plate adapter, or onto a rear dovetail mounting adapter (sold separately). The mounting configuration is compatible with the Leupold® Delta Point Pro™ footprint.

Two Torx flathead fasteners are included for mounting the EFLX MRS directly to an appropriately milled slide. Tighten fasteners with provided wrench to 17-19 inch pounds. If using an aftermarket rear dovetail mount or plate, please use the hardware included with the plate.

Please follow the aftermarket mount manufacturer's instructions for proper mounting procedure. EOTECH recommends the use of a qualified gunsmith for installing the EFLX MRS onto your pistol slide.

Package Contents

The EFLX includes:

- EFLX sight
- 1 × CR2032 Battery
- User Manual
- 2 × Torx Fasteners
- Universal Adjustment Tool
- Torx Wrench
- Protective Rubber Cover

Cleaning Instructions



CAUTION: NEVER DISASSEMBLE THE SIGHT'S OPTICAL ASSEMBLY! Disassembly will void the warranty and damage the sight.

1. The optical system and the window are coated with anti-reflection material. When cleaning the glass surfaces, first blow away any dirt and dust. Fingerprints and lubricants can be wiped off with lens tissue or a soft cotton cloth, moistened with lens cleaning fluid or glass cleaner sold in any camera store. Always dampen the glass surfaces prior to cleaning. **To avoid damaging the window, never clean the glass surface with a dry cloth. It must be moistened with cleaning fluid, glass cleaner or an EOTECH LensPen.**
2. No maintenance is needed on the sight's surface, except to occasionally wipe off with a damp, soft cloth. Use only a water-based cleaner such as glass cleaner, ammonia, or soap and water. **Never use any solvent-type cleaner such as alcohol or acetone to clean the sight's surface. Do not use gun cleaner to clean or lubricate the EFLX.**
3. All moving parts of the sight are permanently lubricated. **Do not try to lubricate any moving parts.**

Operator Level Maintenance

The operator is limited to replacing batteries and cleaning the battery compartment and outer housing surfaces of the sight.

Replacing the Battery

See the heading 'Battery Replacement' (*page 9*).

Battery Compartment Care

Do not use deteriorated or corroded batteries. Inspect battery for rips, tears, or cuts in the housing. If there is any exposed, internal content of the battery, it could potentially affect the operation of the sight.

Outer Housing Care

See the heading 'Cleaning Instructions' (*page 12*).

Service and Repair

- Contact EOTECH's Customer Service Department at **eotechinc.com/help-center**.
- Be sure to leave a name, contact number, return shipping address, and failure description in the email or on a voice mail. This will allow the manufacturer to generate a Return Authorization Number (RA#) to include with the sight(s).

PRO TIP: *Do not ship the sight(s) without a return authorization number — this will severely delay the turnaround time on repair or replacement.*

- If required, fill out a DD Form 1149 to include with the sight(s) you will return. Include a reference to the RA#, and a signature line for EOTECH's Service Department to sign indicating the receipt of materials. The signed copy will be mailed, faxed, or emailed back to you upon receipt of the sight(s) for the purposes of accountability.
- If the manufacturing date is more than five years old, a fee will be assessed for repair to include the cost of both parts and labor. A purchase order will be required to process the repair. Please contact EOTECH for an estimate.
- Please send the unit postage prepaid. Please include your name, address, telephone number, and a written description of the problem you are encountering, and also include the RA #. Whenever possible, ship the sight in its original box.

Contact Information

CUSTOMER SERVICE/REPAIR

888-368-4656

eotechinc.com/help-center

RA# REQUEST WEB ADDRESS

eotechinc.com/help-center

SHIPPING ADDRESS

EOTECH

46900 Port Street

Plymouth, MI 48170 USA

**SCAN FOR
PRODUCT
REGISTRATION**



**SCAN FOR
WARRANTY
INFORMATION**





EOTECH®

**Thank you for purchasing an
EOTECH EFLX Mini Reflex Sight**

EF1900 Rev B
JULY 2023

EOTECHINC.COM