



4D Fusion Master Drive




INSTALLATION MANUAL | OG8802

Assembly instructions


OG8802 massage chair arrives in two boxes.



- 1** Open box 1. Pick up the accessory box. Take the chair out of the box.
Accessories: Screwdriver, square clips, power cord, user manual, installtional manual and warranty card.

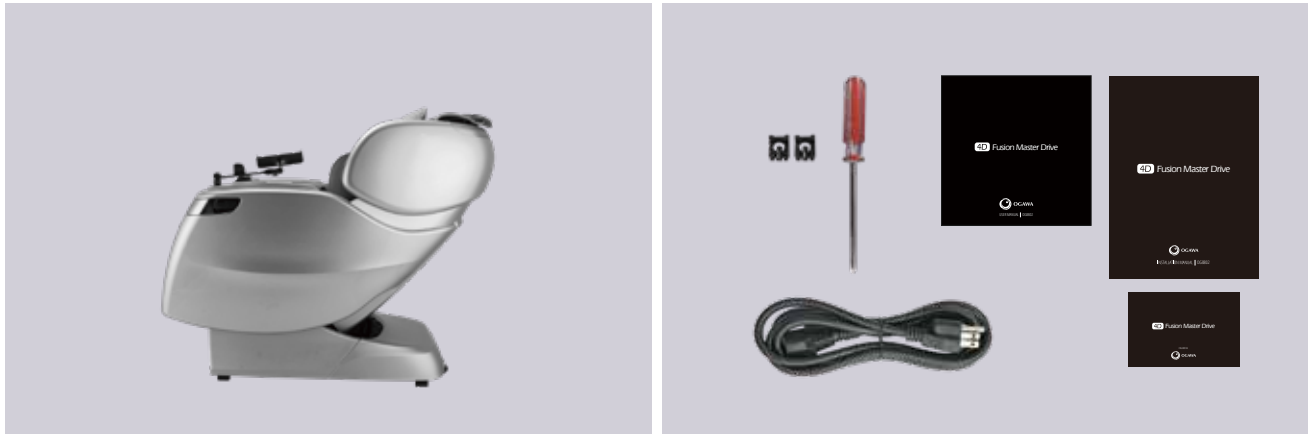


- 2** Plug in the power cord and turn on the power switch. Wait for the chair to automatically move to its home position. Once the chair is fully inclined, unplug the power cord.

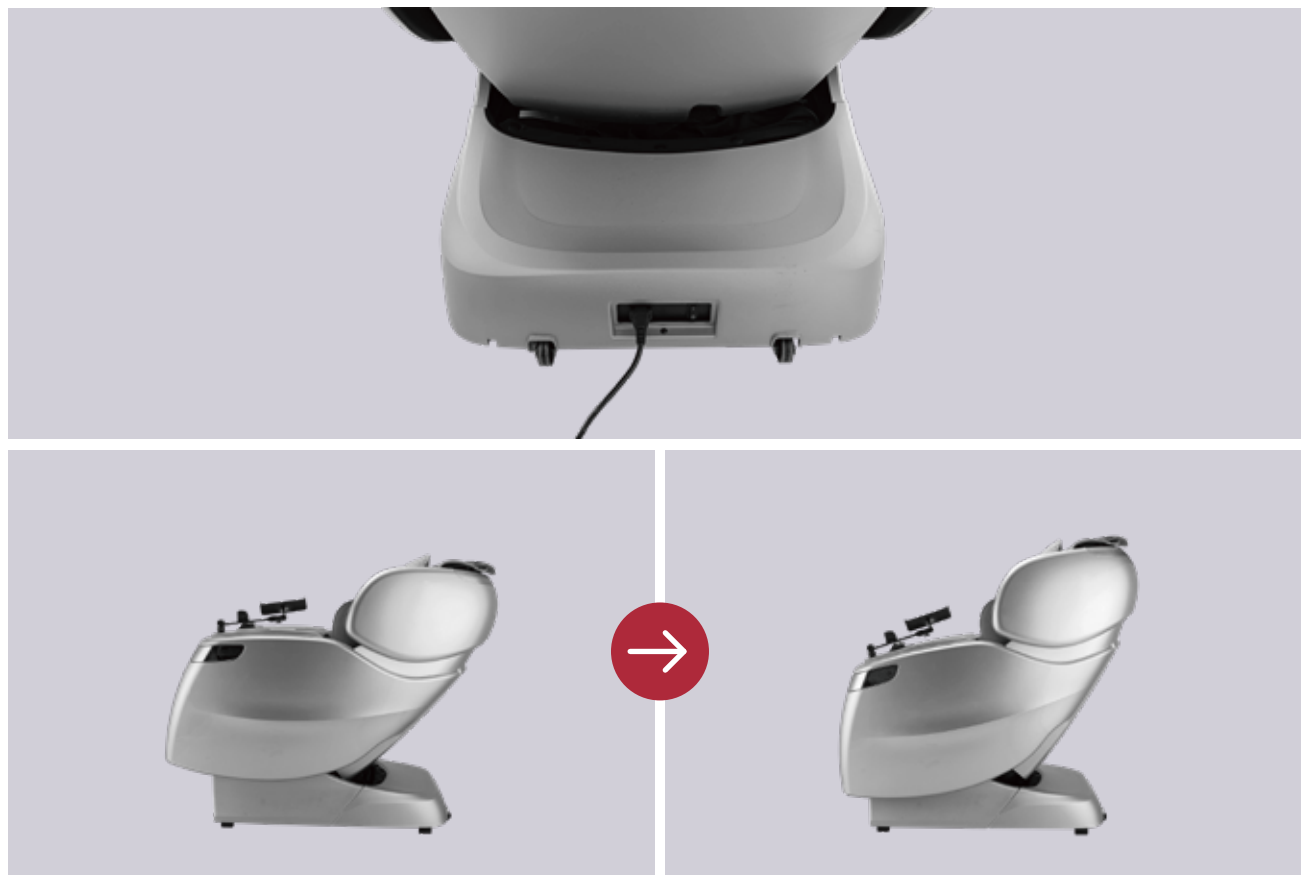

- 3** **Open box 2. Take the footrest out of the box.**
Remove the three screws and take off the plastic cover. Put these three screws and plastic cover aside the chair.



- 4** **Fully connect footrest to the chair.**
A: Detach the two square clips with the screwdriver.
B: Hang the footrest on the bolts of the base. Lock the footrest with the two square clips.
C: Connect the wire and air hose connectors. Set the wire harness into the box.

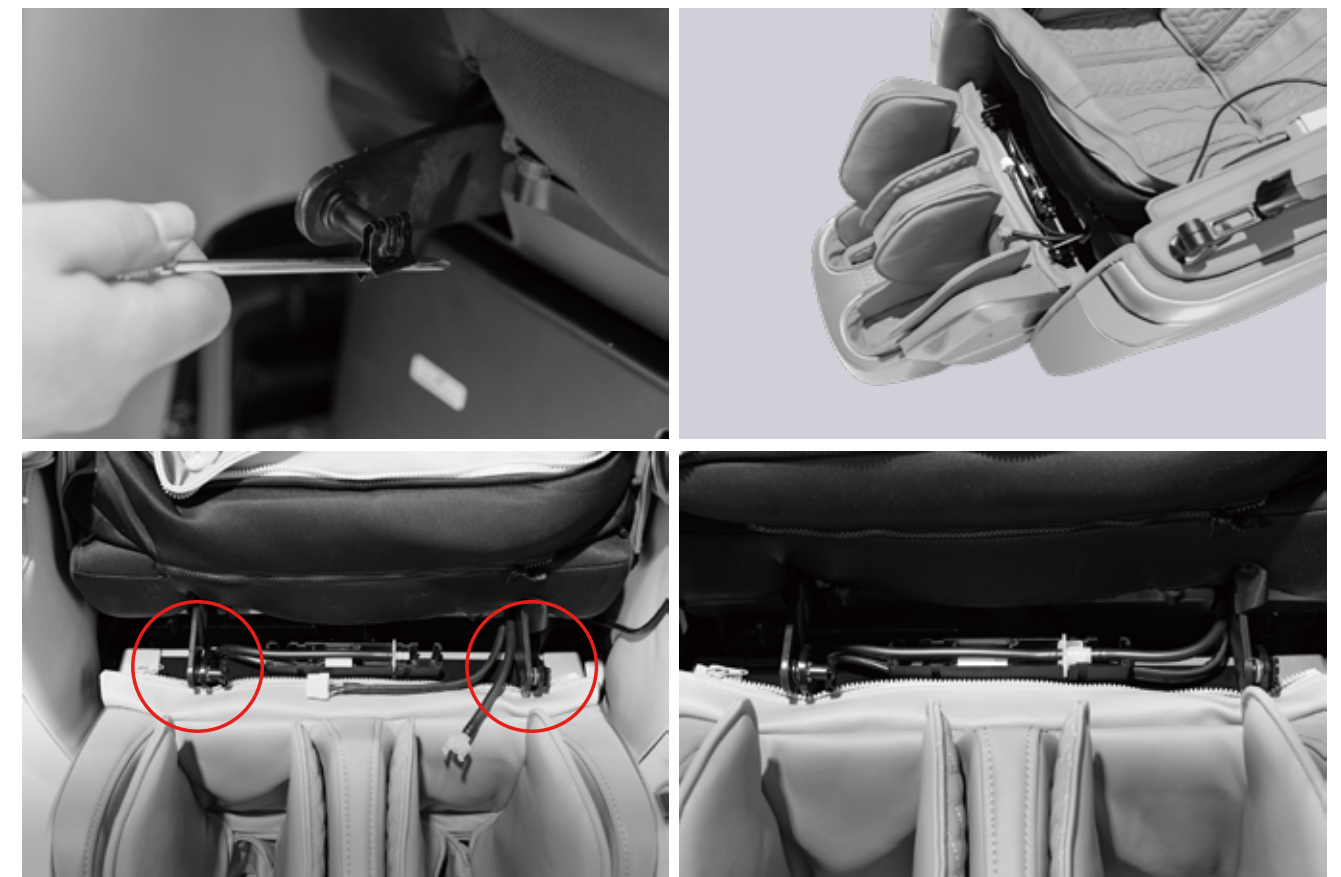

- 5** Fix the plastic cover. Zip the zipper between seat pad cushion and footrest cushion.




6

Attach the tablet and palm sensor to the chair.

A: Locate the tablet and palm sensor inside the left side board.

B: Raise the remote control holder and put the tablet and palm sensor onto it.

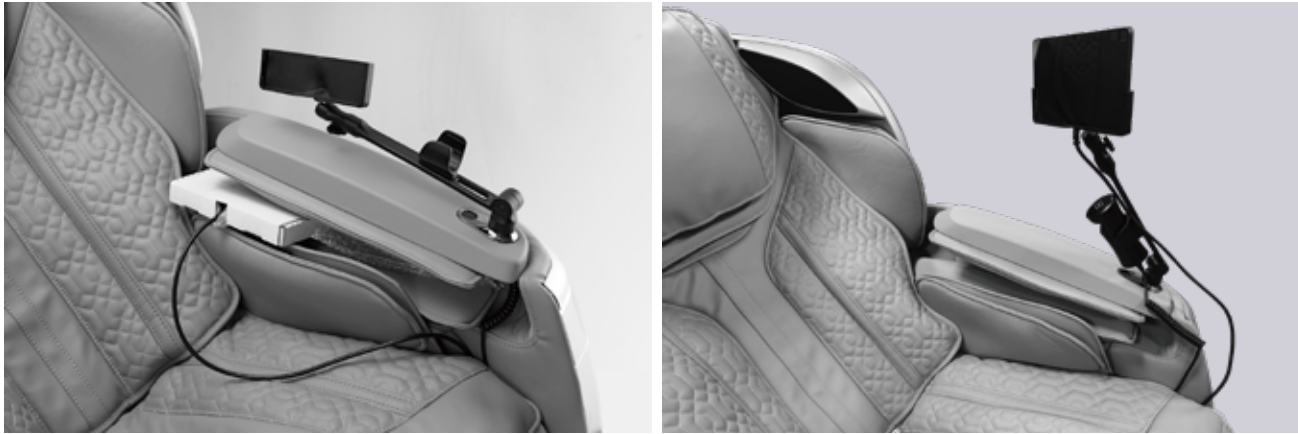

7

Connect the chair to a power supply and turn on the power switch. Now your massage chair is ready to go!

