


RENPHO

USER MANUAL

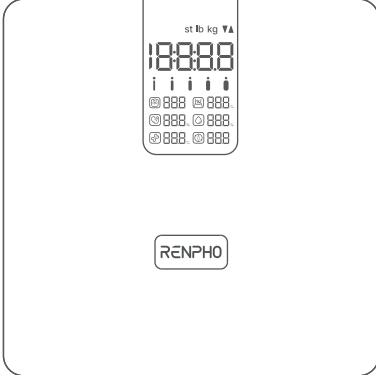

Elis 2X

Model: R-A018

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Children should be supervised to ensure that they do not play with the appliance.

3. The scale is for household use only and not for medical or commercial purposes. It should not be used in diagnosing a disease, disorder or abnormal physical state.

4. Children under 8 or individuals who are pregnant, have osteoporosis, a pacemaker, artificial joints, portable ECG or other metal implants should use the scale for weighing purposes only and make sure to wear shoes to prevent any electric current when stepping onto the scale.

5. All body composition data provided is for reference and should not be used as a substitute for advice from a licensed healthcare professional.

6. Do not overload the scale. (Maximum Capacity: 400lb / 180kg)

7. Inspect the scale for any damage before each use. Do not use a damaged scale to avoid inaccuracy or injury.

8. In case of any malfunction, check the battery power first. If necessary, replace the batteries.

9. To ensure accuracy, use the scale on a hard, flat and dry surface.

10. To avoid interference or danger, do not use the scale in an environment near equipment with strong electromagnetic fields.

11. To prevent injury, do not stand on the edges of the scale, jump on or stomp it.

12. The scale is a delicate and precise measuring device. Handle with care to avoid breakage.

13. The scale is not waterproof. Keep it dry and never submerge it in water. To clean the surface, use a damp cloth or glass cleaner. Do not use soap or chemical cleaning agents.

14. Do not expose the scale to direct sunlight or use it in high temperatures or extremely humid areas. Store the scale in a cool, dry place.

15. Do not attempt to disassemble the scale for any reason, as this may cause damage or void the warranty.

About the battery

1. Do not expose the appliance or battery to excessive temperatures.

01

2. Replace all batteries of a set at the same time.

3. Different types of batteries or new and used batteries are not to be mixed.

4. Exhausted batteries are to be removed from the appliance and safely disposed of.

5. If the appliance is to be stored unused for a long period, the batteries should be removed.

6. Do not use modified or damaged batteries.

7. Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.

8. This appliance contains non-rechargeable batteries, these batteries are not to be recharged.

9. Always insert batteries correctly according to the polarity (+ and -) marked on the battery and scale.

10. Do not heat, short-circuit, force discharge, encapsulate and/or modify the batteries. Do not deform or dismantle the batteries.

11. Keep batteries out of the reach of children.

12. Do not charge the batteries.

13. Do not weld or solder directly to batteries.


14. Do not dispose of batteries in fire.

15. Do not allow children to replace batteries without adult supervision.

16. Store unused batteries in their original packaging away from metal objects. If already unpacked, do not mix or jumble batteries.

02

PRODUCT OVERVIEW

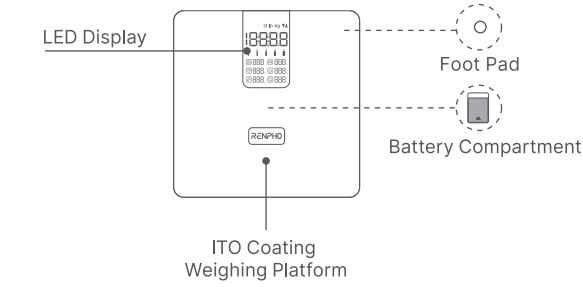

Display

Calibrating

Overloaded

Low Battery

Measuring Body Fat

Weight Measurement

Units

Weight Trend

Calibrate the scale before each use

(Max. 180kg/400lb)


Replace the batteries timely

Switched via the app

03

BATTERY INSTALLATION

Install the provided batteries into the scale before use. Always insert batteries correctly according to the polarity (+ and -) marked on the battery and scale.

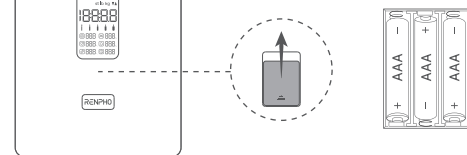

Note:

- Always select the correct size and type of battery most suitable for the intended use. Do not mix new and used batteries or batteries of different types or brands. Do not charge the batteries.
- Clean the battery contacts and also those of the scale prior to battery installation.

04

Weight Level

BMI

Muscle Mass (%)

Bone Mass (%)

Severely thin (only in Asia)

Underweight

Normal weight

Overweight

Obesity

Body Fat (%)

Body Water (%)

Metabolic Age

05

APP GUIDE

1. Download

Scan the QR code below or search for "RENPHO Health" from App Store to download the RENPHO Health App.



Note:
Due to continuous updates and improvements, the "RENPHO Health" App may appear slightly different.

2. Pair

Enable wireless setting on your smartphone before pairing. System requirement: iOS 12.0 or later, Android 7.0 or later

Method 1

a. Open the app and step on the scale with bare and dry feet.

b. Tap "Connect" when a window pops up on the app.




05

Method 2

a. Tap "+" on the top right corner of the "Device" page to pair manually.

b. Tap "Body Fat Scale" and follow the in-the-app instruction.

c. Tap "+".

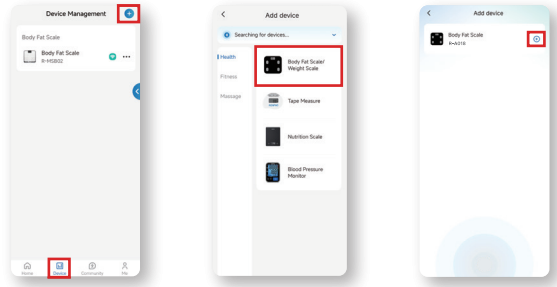


CALIBRATING

Calibrate the scale before each use to ensure accuracy.

1. Place the scale on a flat, hard surface. Avoid any carpeting.

2. Step on the scale with a single foot to activate it and then step off.

3. The display will show "CAL" and then "0.0" or "0.00" to indicate calibrating is complete.

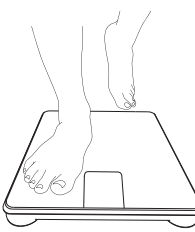

CAL → 00

or

CAL → 000

06

RENPHO

MEASURING


Tip: To directly obtain your data of weight, BMI, body fat, muscle mass, body water, bone mass and metabolic age from the scale's display, you must connect the scale to the RENPHO Health App on the first use for subsequent user identification.

1. Place the scale on a flat, hard surface. Avoid any carpeting.

2. Pair the scale with the RENPHO Health App on the first use.

3. After calibrating the scale, step on the scale with bare and dry feet.

4. Stand and keep still until the weight measurement flashes twice to indicate your final measurement. When "0000" appears on the display, it indicates the scale is detecting the body fat. Once body fat detection is complete and you can view your data of BMI, body fat, muscle mass, body water, bone mass and metabolic age on the display directly.


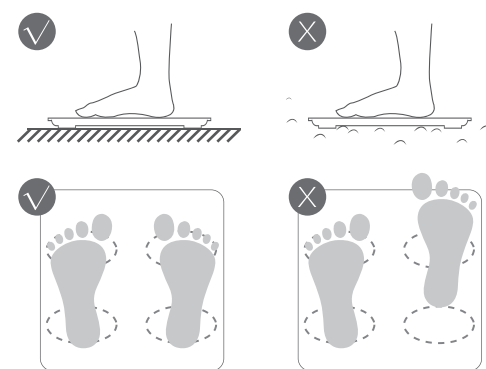


Tip: If the scale is connected to the RENPHO Health App, you can get additional body composition indexes (e.g., subcutaneous fat, fat-free body weight, etc.) on the app once measuring is complete.

07

TROUBLESHOOTING GUIDE

1. Display Issues

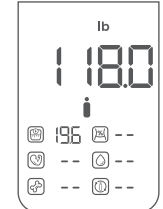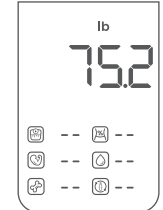Display	Measurement	Cause/Description
	Weight, BMI, body fat, muscle mass, body water, bone mass, metabolic age	Connected to the app on the first use and measure with bare and dry feet.
	Weight, BMI	Connected to the app on first use but wear shoes when measuring.
	Weight only	Measure with bare feet but never connected to the app to use before. Never connected to the app to use before and wear shoes when measuring.

08

2. Other Issues

Problem	Solution
The scale cannot detect body fat and/or other data.	a. Ensure your feet are dry and bare. b. Stand and keep still on the scale for about 10s to finish the weighing process. If still not, try applying moisturizer to your feet and measure again or ask another person to repeat the 2 steps above.
I have already registered an account on the RENPHO website but cannot use it to log in on the RENPHO Health App.	The RENPHO website and RENPHO Health app are two different systems. Create an account on the RENPHO Health App.
I can get my data of BMI, body fat, muscle mass, body water, bone mass and metabolic age from the scale's display, but my family or friends failed.	Your family or friends must log in to the RENPHO Health App with their own account and connect the scale to the app to finish the first measurement, or complete their profile information on your app using the "add a member" function and then connect the scale to the app on the first use.

09

WARRANTY POLICY

Your RENPHO product purchase is covered by a one-year limited manufacturer warranty from the date of delivery.

For warranty terms and conditions, please visit:
<https://renpho.com/pages/warranty-terms-and-conditions>

Note: Product registration is not required for the warranty. If you choose not to register your product, it will not void the product warranty.

CUSTOMER SERVICE

Please feel free to contact us if you have any questions or concerns. RENPHO Customer Service Team guarantees a quick response and hassle-free solutions to any issue you may have within business hours.

Email: support-eu@renpho.com (UK&EU)
support@renpho.com (US&CA)
support-au@renpho.com (AU)

TEL: +44(0)7434 666088 (UK ONLY)
Monday-Friday 9:00AM-5:00PM (GMT)
+1(844) 417 0149 (US&CA)
Monday-Friday 9:00AM-4:30PM
1800 MY RENPHO (1800 69 7367) (AU ONLY)
Monday-Friday 9:00AM-6:00PM (AEST)
+49 40 23969285 (DE ONLY)
Monday-Friday 9:00AM-6:00PM (CET)

* For defective products or the return of items, please contact us with your order number within the specified warranty period. DO NOT dispose of any product parts as they may be required for inspection/repair.

10

FCC Regulatory Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

ISED Regulatory Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1: This device may not cause interference.
2: This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

11

1. Meaning of the crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol means that you are legally obliged to dispose of these appliances separately from unsorted municipal waste, i.e. old appliances must be disposed of separately from household waste. Batteries or rechargeable batteries that are not permanently installed must be removed beforehand and disposed of separately.

2. Options for returning old appliances

Owners of WEEE can return or collect it within the framework of the possibilities set up and available by public waste management authorities to ensure proper disposal.

3. Personal data

All end-users of WEEE are reminded that you are responsible for deleting personal data from the WEEE to be disposed of.

1. The symbol of the crossed-out garbage can on batteries or accumulators indicates that they must not be disposed of in household waste at the end of their life.

2. You are legally obliged to return old batteries and accumulators after use. You can do this free of charge at a collection point in your area. Addresses of suitable collection points can be obtained from your city or local government.

3. Batteries may contain substances that are harmful to the environment and human health. The separate collection and recycling of old batteries and accumulators is intended to avoid negative effects on the environment and human health.

4. Please avoid the generation of waste from old batteries as far as possible, e.g. Please avoid littering public spaces by not carelessly leaving batteries or electrical and electronic equipment containing batteries.

CE

Hereby, Shenzhen Ruiyi Business Technology Co., Ltd. declares that this equipment complies with Directive 2014/53/EU, Directive 2011/65/EU, Radio Equipment Regulations 2017, Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and other relevant provisions. The full text of the Declaration of Conformity can be obtained at the following internet address: <https://renpho.eu/pages/compliance-data>

12