


RENPHO

USER MANUAL

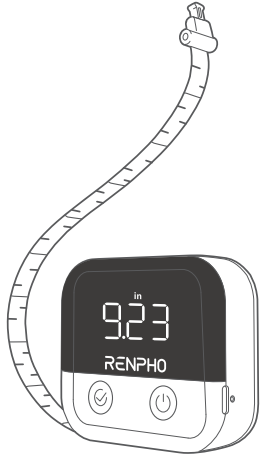

SMART BODY TAPE MEASURE

Model: R-MTX01

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The device is for household use only and not for medical or commercial purposes.
4. DO NOT expose the device to extreme conditions, such as high temperatures, humidity, direct sunlight, or dusty environments.
5. DO NOT use excessive force on the tape or the gear as this may cause permanent damage to the device.
6. DO NOT fold or twist the tape as this may cause permanent damage.
7. DO NOT pull the tape with excessive force beyond the maximum length of 150 cm / 60 inch.
8. Be cautious when retracting the tape to avoid minor injuries.
9. Exercise caution when measuring neck circumference to avoid accidental choking.
10. Children under 10 years old must be supervised by an adult when using the device.



01

About the battery

1. Do not expose the appliance or battery to excessive temperatures.
2. Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
3. This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.
4. Do not dismantle, open or shred battery.
5. Do not subject cells or batteries to mechanical shock.
6. In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
7. Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or product manual for proper charging instructions.
8. Do not leave a battery on prolonged charge when not in use.
9. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.
10. The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 100°C (212°F).


SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX

Smart Body Tape Measure x1
USB-C Charging Cable x1 (For charging only, not for data transfer)
User Manual x1

02


ABOUT YOUR SMART TAPE

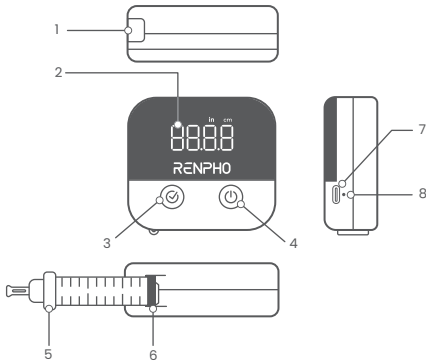

- 1. Retract Button**
Press to retract the tape.
- 2. LED Display**
- 3. Confirm Button**
Press to confirm the measurement.
Press and hold for 3 seconds to zero the measurement.
- 4. Power Button**
Press to turn on / switch the units.
Press and hold for 3 seconds to turn off.
- 5. Locking Pin**
- 6. Tape Receptacle**
- 7. USB-C Charging Port**
- 8. Reset Button**
To reset the device, insert a pin (not included) into the Reset Button, press and release.

03

LED Display

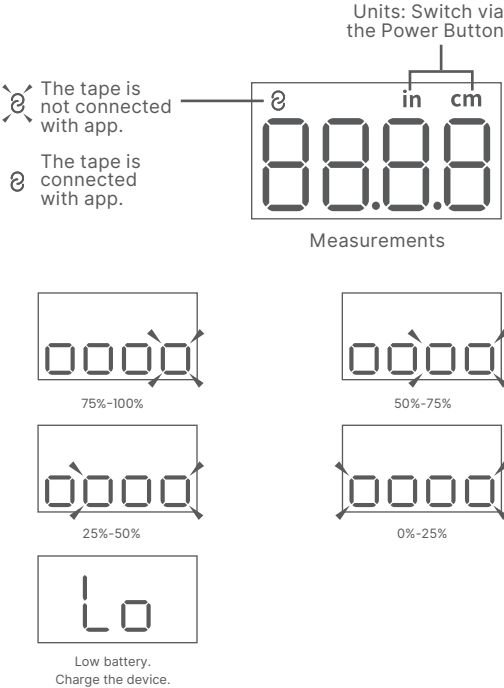


04

RENPHO

Made in China

NA2

CHARGING YOUR SMART TAPE

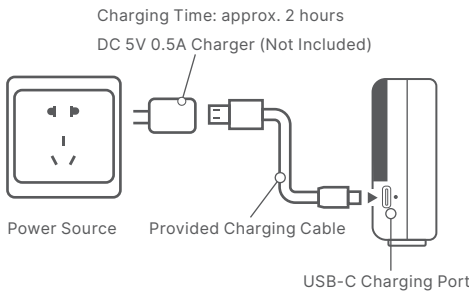

INSTALLING THE APP & PAIRING

1. Download the RENPHO Health App

Scan the QR code below or search for "RENPHO Health" from the App Store or Google Play to download the app.
System requirement: iOS 12.0 or later, Android 7.0 or later



RENPHO Health



Note: Due to continuous updates and improvements, the "RENPHO Health" App may appear slightly different.

05

2. Log in / Sign up

- a. Log in directly with an existing RENPHO App account.
- b. If you do not have any RENPHO App account, tap "Sign up" using your email address and fill in the personal information; this step is required for calculating your health measurements accurately.

Note: You may also log in using Guest Mode if you do not wish to measurement data will not be saved if you log it in on another device.

3. Connect the Tape with the App

- a. Before pairing, enable the wireless setting on your smartphone.
- b. Open the RENPHO Health App and press Power Button.
- c. Tap "+" in the upper-right corner of the "Home" page and select your smart tape from the device list.
- d. Follow the in-app instructions to complete pairing.

06

USING YOUR SMART TAPE

1. Press Power Button to turn on the smart tape. When " " on the smart tape display turns solid, it indicates a successful connection.
2. Press Power Button again to choose the unit (in/cm) you prefer.
3. Once the device is connected, tap the body part name on the App.
4. Press the locking pin until a "click" is heard, pull out the tape and wrap it around your target body part.
5. Insert the locking pin into the receptacle until a "click" is heard.
6. Press Retract Button to tighten the tape and press Confirm Button to get your measurement on the tape display or App.
7. Tap " Save " on the app to save all the measurements.

Note:

1. If the smart tape is turned on and left idle, it will shut off automatically after 20 seconds.
2. After measuring, retract the tape for easy storage and to keep it in good condition.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Nothing appears on the display or the measurement is blurred.	Low battery.	Charge the device.
Erratic display.	Casual malfunction caused by high vibration or strong swing.	Insert a pin into the Reset Button, press and release.
Fail to connect to the app.	Phone is too far away from the device.	Keep phone within 26ft (8m) of the device.

07

TECHNICAL SPECIFICATIONS

Product Name: Smart Tape
Model: R-MTX01
Unit: cm / in
Size: 73.5 x 68 x 27mm / 2.9 x 2.6 x 1in
Measuring Range: 150cm / 60in
Resolution: 1mm, 1/16in
Accuracy: ±3mm, ±3/32in
Working Temperature: 0°C~40°C / 32°F~104°F
Working Humidity: 40%~85%
Battery Capacity: 300mAh 1.11Wh
Input: 5V 0.5A
Rated Power: 2.5W

08

FCC Regulatory Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

ISED Regulatory Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1: This device may not cause interference.
2: This device must accept any interference, including interference that may cause undesired operation of the device.
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

09

WARRANTY POLICY

Your RENPHO product purchase is covered by a one-year limited manufacturer warranty from the date of delivery.

For warranty terms and conditions, please visit:
<https://renpho.com/pages/warranty-terms-and-conditions>

Note: Product registration is not required for the warranty. If you choose not to register your product, it will not void the product warranty.

CUSTOMER SERVICE

Please feel free to contact us if you have any questions or concerns. RENPHO Customer Service Team guarantees a quick response and hassle-free solutions to any issue you may have within business hours.

TEL: +1(844) 417 0149 (US&CA)
Monday-Friday 9:00AM-4:30PM
1800 MY RENPHO (1800 69 7367) (AU ONLY)
Monday-Friday 9:00AM-6:00PM (AEST)
Email: support@renpho.com (US&CA)
support-au@renpho.com (AU)

*For defective products or the return of items, please contact us with your order number within the specified warranty period. DO NOT dispose of any product parts as they may be required for inspection/repair.

10