

Connect Digital Paper to a Windows® computer using Bluetooth® function

To connect the Digital Paper to your computer using Bluetooth function:

- 1st, complete Bluetooth pairing between the Digital Paper and computer.
- 2nd, launch Digital Paper App (DPA).

Note

The Bluetooth pairing process needs to be performed only the first time a Bluetooth connection is established.

[If Bluetooth pairing has already been completed, click here.](#)

If Bluetooth pairing has not yet been completed, follow the steps below.

Checking the Bluetooth icon on the computer

Check that the Bluetooth icon is displayed in the notification area of the task bar on the computer.

Bluetooth icon



[If the Bluetooth icon is displayed, click here.](#)

If the Bluetooth icon is not displayed, follow the steps below.

Displaying the Bluetooth icon in the notification area

Select the link below for the Windows OS version that is installed on your computer.

Note


You may need to log in as administrator.

[For Windows 10 \(Tablet mode is on\)](#)


[For Windows 10 \(Tablet mode is off\), Windows 8.1, Windows 7](#)

For Windows 10 (Tablet mode is on)


- 1 Tap the Windows start button, then the Windows Settings icon > [Devices] > [Bluetooth]. Check that [Bluetooth] is set to [On], and then tap [More Bluetooth options].

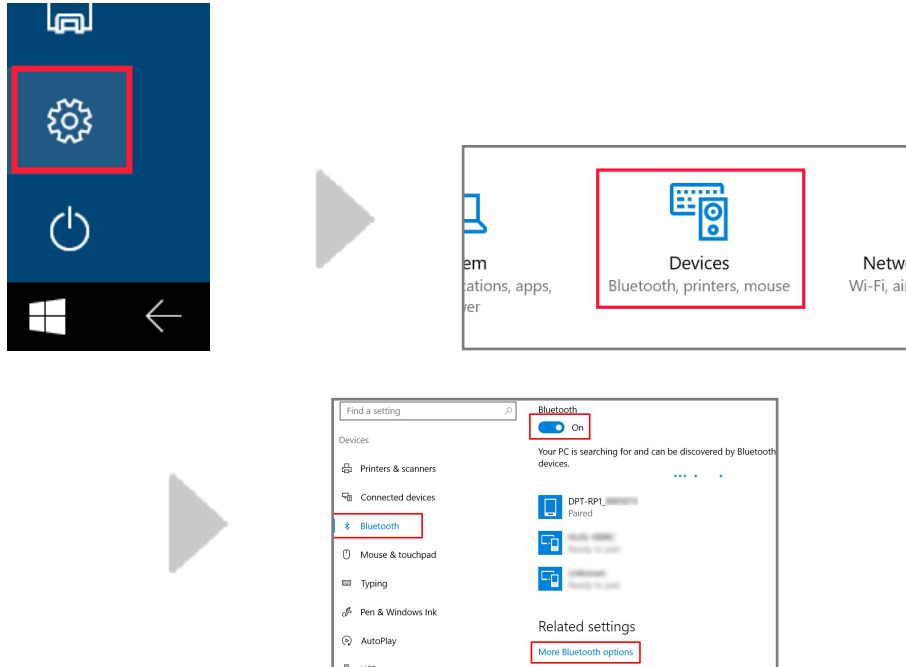

- 2 In the [Options] tab of the Bluetooth Settings screen, tap [Show the Bluetooth icon in the notification area], add the check mark, then tap [Apply].

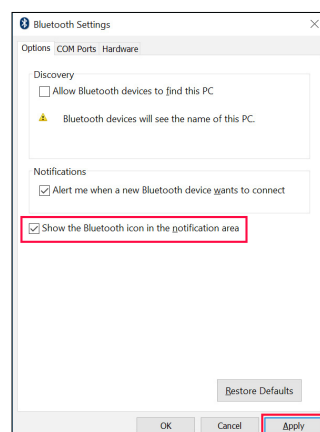


- 3 Check that the Bluetooth icon is displayed in the notification area of the taskbar (system tray).

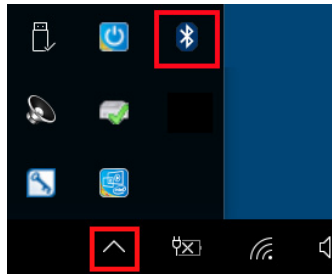


Hint

If the Bluetooth icon is not displayed in the notification area in step 3, long press on the taskbar to confirm that [Show all notifications icons] is checked. Tap the  icon on the notification area to check the Bluetooth icon.

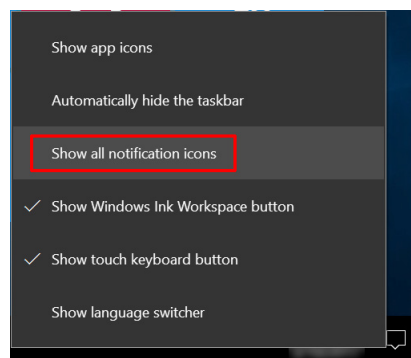

For Windows 10 (Tablet mode is off), Windows 8.1, Windows 7

1 Click [View devices and printers] in the Control Panel.

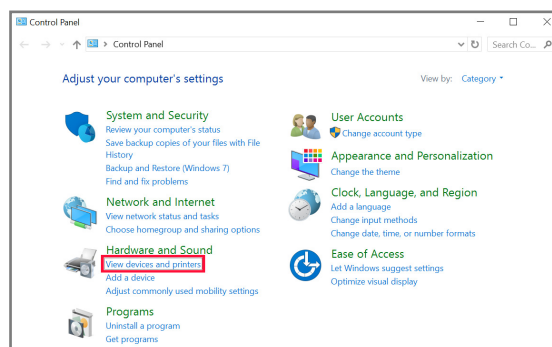


Hint


To display [Control Panel]

- For Windows 10 (Tablet mode is off)
Click the [Start] menu > [Windows System] > [Control Panel].
- For Windows 8.1
Right-click the [Start] button > [Control Panel].
- For Windows 7
Click the [Start] menu > [Control Panel].

- 2 **Right-click on the computer icon which is displayed in [Devices] of the displayed screen, and then click [Bluetooth settings].**

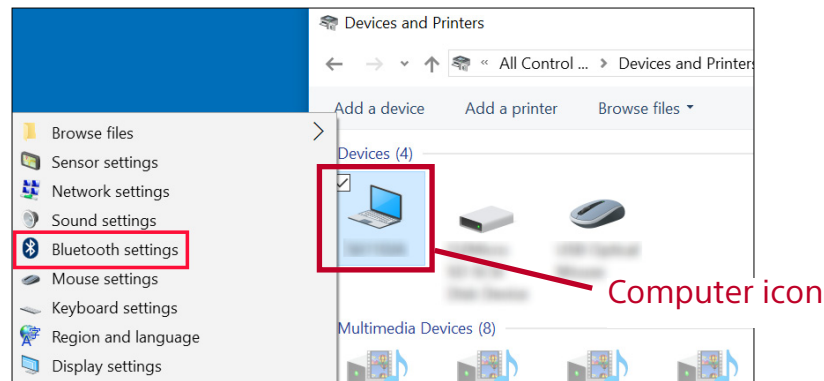

- 3 **In the [Options] tab of the Bluetooth Settings screen, tap [Show the Bluetooth icon in the notification area], add the check mark, then tap [Apply].**

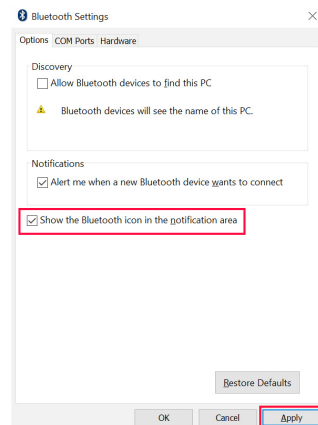

Pairing the computer and the Digital Paper with Bluetooth function

The following steps for Bluetooth pairing are required when using the Bluetooth connection for the first time.


* For step 1 through 3, operate on the Digital Paper.

- 1 **Press the home button on the Digital Paper to display the home menu, and then tap [Settings].**
- 2 **Tap the [Bluetooth] box on the [Settings] screen to add a check mark.**

3 Tap [Bluetooth Settings] on the same screen, and then tap [Bluetooth Pairing].

[Bluetooth Pairing...] is displayed when the Digital Paper is ready for pairing.

[DPT-RP1_XXXXXXX] is displayed as the Bluetooth device name, which will be the device name for the Digital Paper in the following steps.

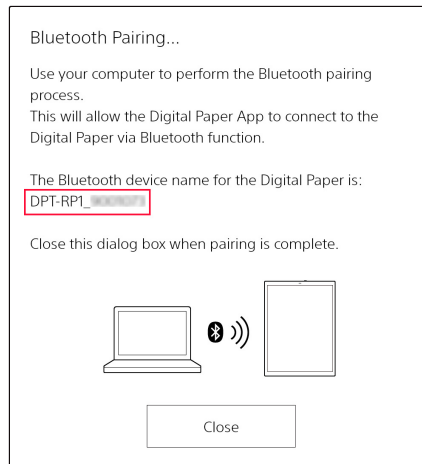


* For step 4 and after, operate on the computer.
Depending on the Windows OS version, the operation will differ.

[For Windows 10, Windows 8.1](#)

[For Windows 7](#)


For Windows 10, Windows 8.1

4 Click the Bluetooth icon in the notification area of the taskbar (system tray), then click [Add a Bluetooth Device].

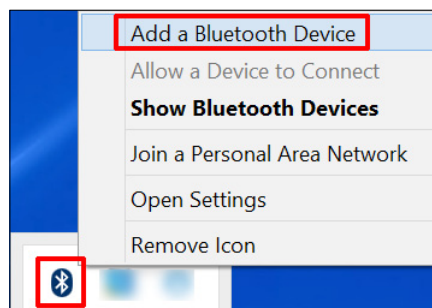


5 Click [Bluetooth] from the menu on the left of the screen. From the Bluetooth device list displayed on the right, select the Digital Paper device name, [DPT-RP1_XXXXXXX], and then click [Pair].

- Windows 10

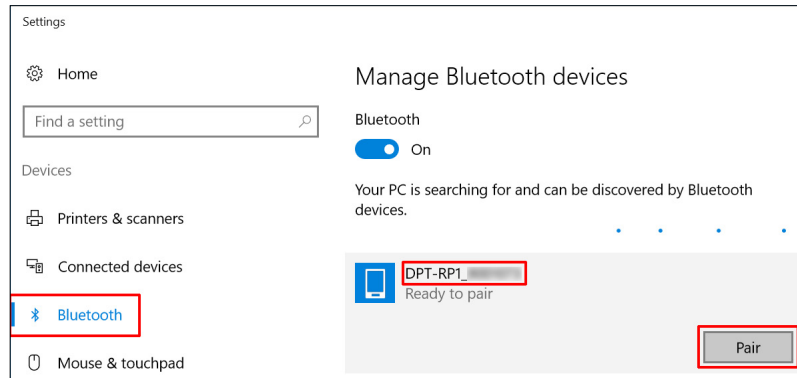

- Windows 8.1

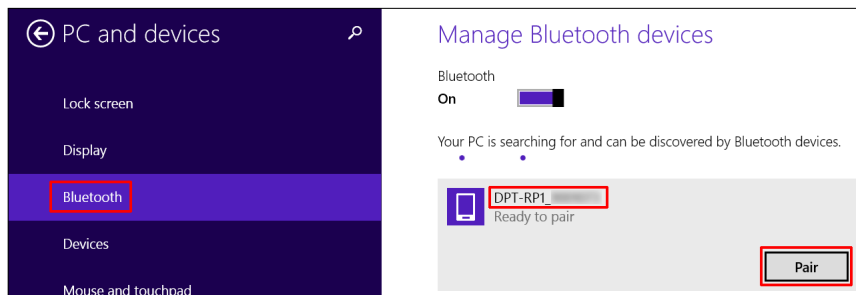


Hint

The Bluetooth device name for the Digital Paper is displayed in the [Bluetooth Pairing...] dialog of the Digital Paper.

Note


It may take time for Digital Paper to be recognized by your computer. If the Digital Paper icon does not appear before the [Bluetooth Pairing...] dialog window on Digital Paper disappears (i.e., times out), repeat step 3.

When [Paired] is displayed, Bluetooth pairing is complete.

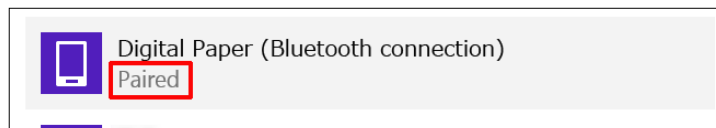


For Windows 7

- 4 Click the **Bluetooth** icon in the notification area, and then click [Add a Device].

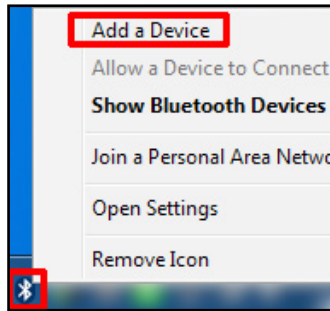

- 5 **Select the Digital Paper device name, [DPT-RP1_XXXXXXX], from the Bluetooth device list on the screen, and then click [Next].**

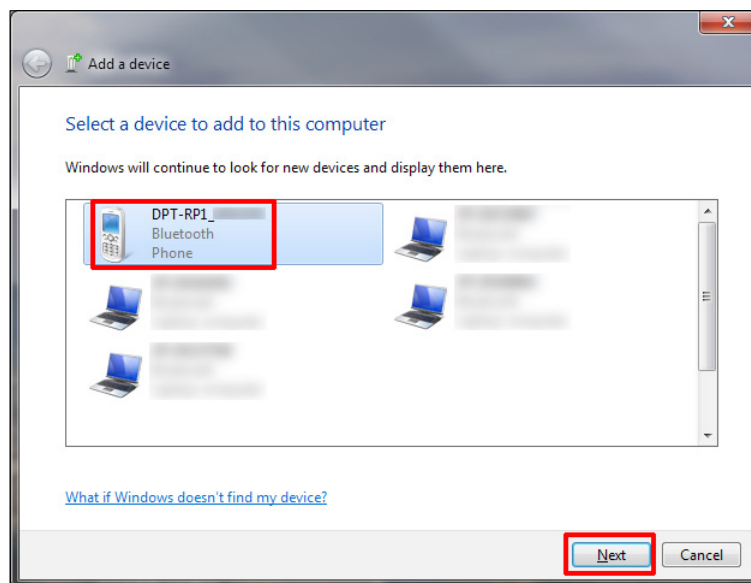


Hint

The Bluetooth device name for the Digital Paper is displayed in the [Bluetooth Pairing...] dialog of the Digital Paper.


Note

It may take time for Digital Paper to be recognized by your computer. If the Digital Paper icon does not appear before the [Bluetooth Pairing...] dialog window on Digital Paper disappears (i.e., times out), repeat step 3.

- 6 **When [Successfully added] is displayed, click [Device and Printers] to check the status of the driver installation.**

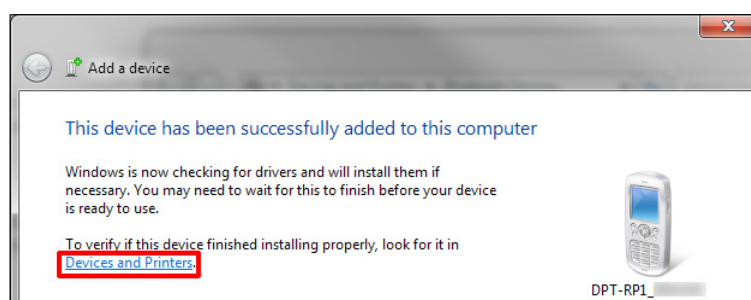


7 Find the icon to check that the driver is installed.

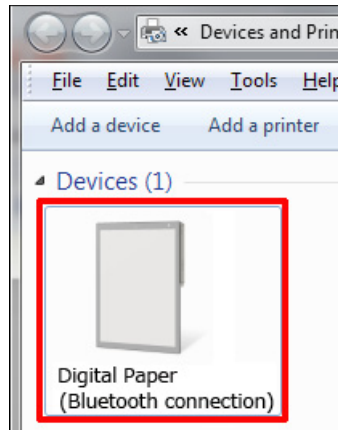

Hint

The following icon appears while the driver is being installed. Wait until the installation is complete.

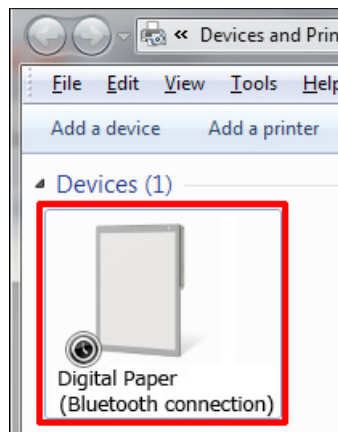

Note

The icon or device name may differ depending on the usage environment of your computer.

When the driver is installed, the operation is complete.


Connecting the computer and the Digital Paper with Bluetooth function

If Bluetooth pairing has been completed between the computer and the Digital Paper, they can be automatically connected wirelessly by launching the Digital Paper App.

Note


This may take up to 60 seconds.

When the connection is successfully completed, [Connected] is displayed on the upper-left corner of the DPA screen.

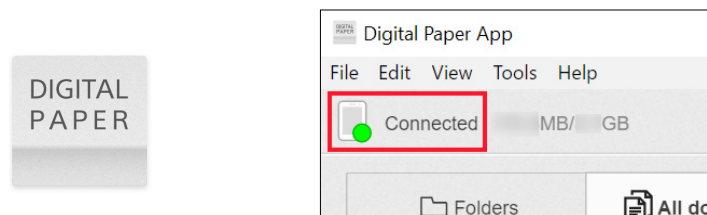


Note

If [Bluetooth automatic connection] is set to [Off] on the Digital Paper App setting, the Digital Paper cannot be connected automatically via Bluetooth function even when launching Digital Paper App. To change the settings of the Digital Paper App, click [Tools] > [Settings] > and set [Bluetooth automatic connection] to [On].

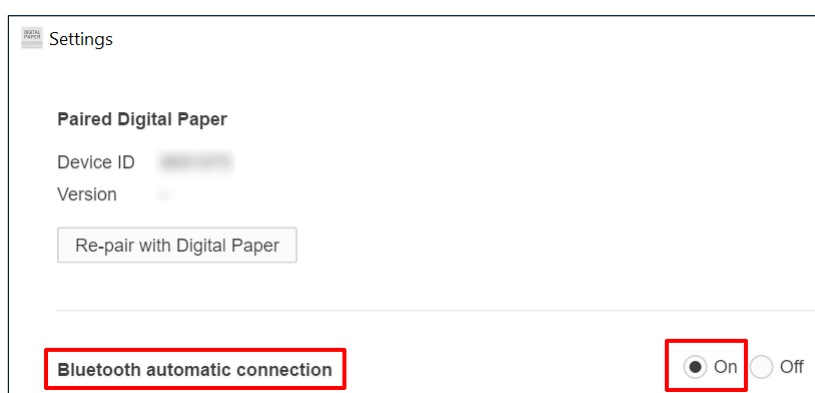

Hint

You can also display the [Settings] screen by clicking [Settings] on the toolbar of Digital Paper App.

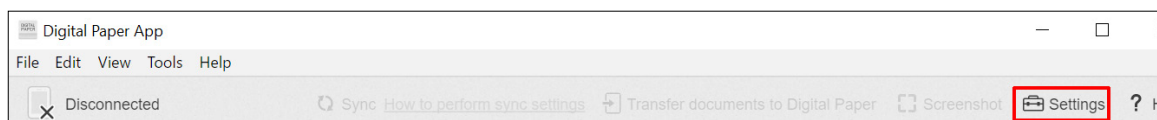

Legal Notice

- The formal name of Windows® is Microsoft® Windows® Operating System.
- Microsoft, Windows, Windows 7, Windows 8.1, and Windows 10 are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Sony Corporation is under license.