


# FLICK WDT<sup>®</sup>


RETRACTABLE WDT TOOL

SCAN TO  
VIEW QUICK  
START GUIDE

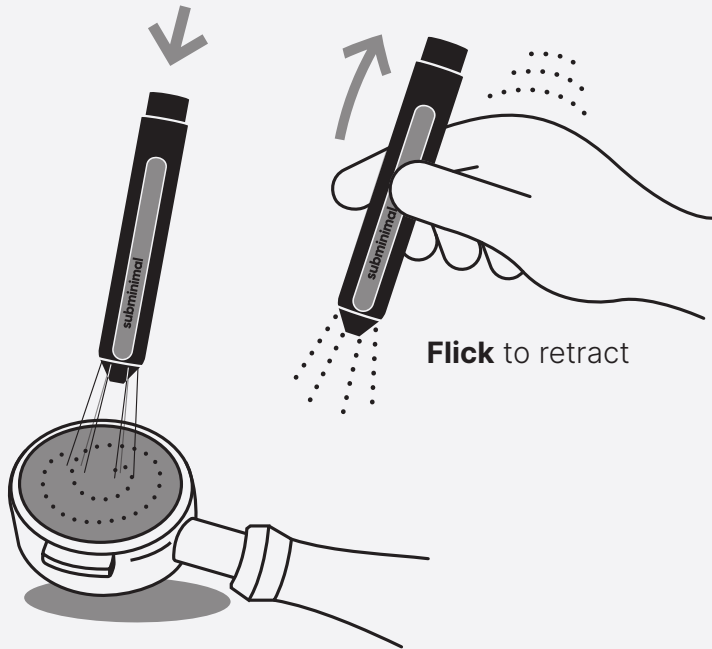

## REPLACE NEEDLES

OPEN & CLOSE VERTICALLY  
WITH NEEDLES OUT

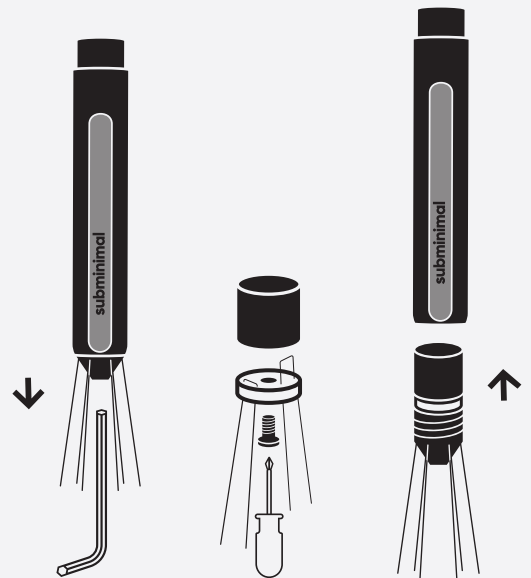

## HOW TO USE

1. Grind your coffee and place the portafilter on a stable surface.
2. Press button to extend the needles.
3. Gently insert the tool into the grounds and stir in a circular motion to break up clumps of coffee.
4. Once the surface is an even consistency and flat, tamp as usual.
5. Flick to retract the needles for storage

## CLEANING

The needles retract cleanly after use, but it's a good idea to wipe them down occasionally.

For a deeper clean, open the cap to remove any built-up coffee residue.

## NEEDLE MAINTENANCE

To replace needles:

Remove the front cap using the included Allen key and unscrew the small fixing screw.

Always make sure needles are extended and the FLICK is held vertically before twisting the cap.

## DUAL STANDS

Use the included aluminium base to stand it upright, or attach it magnetically to your espresso machine or the included wall mount.

## PACKAGE CONTENTS:

- 1x Flick WDT Tool  
(with 0.5 mm needles pre-installed)
- 1x Stand
- 1x Wall Mount
- 3x Set Replacement Needles (0.35mm)
- 1x Allen Key

A heavy impact during transport may buckle a needle or two.  
The spare needles have been provided as replacements in such a case.

## TECH SPECS

|                          |                                      |
|--------------------------|--------------------------------------|
| <b>Weight:</b>           | 48g / 1.3oz                          |
| <b>Needle Thickness:</b> | 0.5mm (installed)<br>0.35mm (spares) |
| <b>Needle Length:</b>    | 42mm                                 |
| <b>Dimensions:</b>       | 110 x 18 x 18 mm                     |

## NEED HELP?

[subminimal.com/pages/help](https://subminimal.com/pages/help)

# subminimal<sup>®</sup>

Subminimal Pte. Ltd.  
14 Robinson Road 08-01A  
Singapore, 048545  
[www.subminimal.com](https://www.subminimal.com)  
[hello@subminimal.com](mailto:hello@subminimal.com)