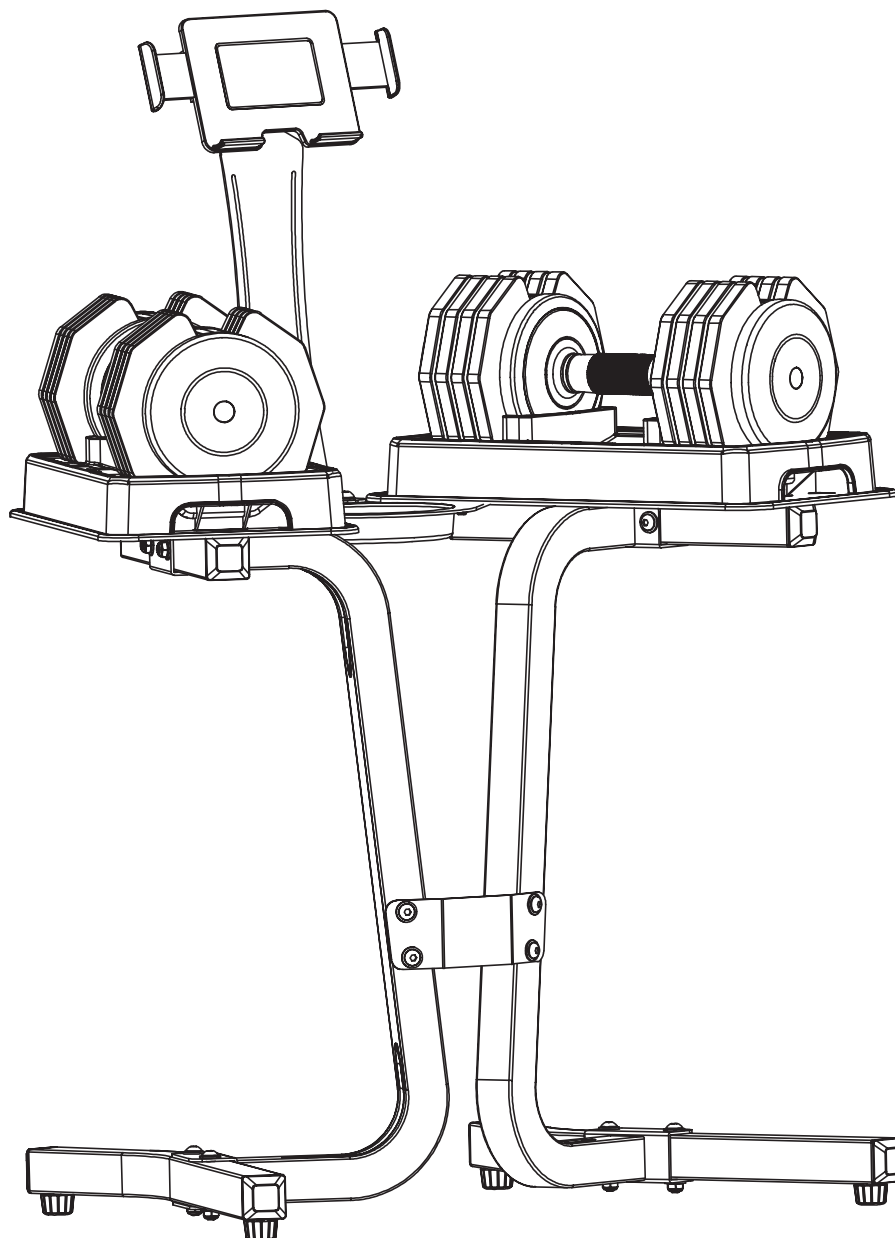


Dumbbell Stand OWNER'S MANUAL

*Dumbbells and cradles are sold separately.

PLEASE CAREFULLY READ THIS ENTIRE MANUAL BEFORE OPERATING YOUR NEW DUMBBELL STAND

Table Of Contents

Product Registration	1
Important Safety Instructions	2
Pack List	3
Dumbbell Stand Assembly	4
Manufacturer's Limited Warranty	9
Exploded View	10
Parts List	12

ATTENTION

THIS DUMBBELL STAND IS INTENDED FOR **RESIDENTIAL USE ONLY** AND IS WARRANTED FOR THIS APPLICATION. ANY OTHER APPLICATION **VOIDS** THIS WARRANTY IN ITS ENTIRETY.



Congratulations On Your New Dumbbell Stand and Welcome to the XTERRA Fitness Family!

Thank you for your purchase of this quality Dumbbell Stand from **XTERRA Fitness**. Your new Dumbbell Stand has been manufactured by one of the leading fitness manufacturers in the world. **XTERRA Fitness** will do all we can to make your ownership experience as pleasant as possible for many years to come. If you have questions, or if parts are missing or damaged, or you require customer service, call (870)336-4286. Please have your model number and serial number handy when you call.

Please take a moment to record where you purchased your equipment, as well as the date of purchase for future reference. We appreciate your confidence in **XTERRA Fitness** and we will always remember that you are the reason that we are in business. Please complete your registration today and enjoy your new Dumbbell Stand.

Yours in Health,
XTERRA Fitness

Purchase Location _____

Purchase Date _____

Product Registration

Register Your Purchase

Go to **www.xterrafitness.com/warranty** to register online.

Important Safety Instructions

Read all instructions before using this appliance.

WARNING - To reduce the risk of injury to persons:

1. This exercise equipment is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never drop or insert any object into any opening.
4. The equipment is intended for household use.
5. Before beginning this or any exercise program, consult a physician. This is especially important for persons over the age of 35 or persons with pre-existing health conditions.
6. Keep hands away from all moving parts.
7. Do not attempt to use your equipment for any purpose other than for the purpose it is intended.
8. Wear proper shoes. High heels, dress shoes, sandals or bare feet are not suitable for use on your equipment. Quality athletic shoes are recommended to avoid leg fatigue.
9. Please use the Dumbbell Stands instructions step by step to avoid unnecessary damage to the product.
10. In the event of nausea, shortness of breath, dizziness, headache, chest distress, or any discomfort, stop exercising immediately.
11. In order to achieve significant exercise results and not to overburden the muscles, the exercise frequency should be administered within a reasonable range. Consult a personal trainer to learn correct posture, technique, methods, and frequency.
12. Inspect the equipment thoroughly before each use. Do not use the product with damaged or work components or parts.
13. If the equipment is found to be worn, loose, or rusted, it should be repaired or replaced in a timely manner to ensure that all components are always in good working condition.
14. Please keep pets and children away from equipment. Do not allow children to play near this equipment or use it for any purpose. The minimum age of use for this equipment is 18 years old. Everyone under the age of 18 must be under parental supervision at all times.
15. Do not press the safety lock or turn the weight selector dial when the dumbbell or handle is lifted from the dumbbell tray.
16. Do not drop the dumbbells freely to the ground as it will cause damage to the product. In some cases, dropping the dumbbell freely may potentially cause a personal injury or death.
17. Do not bump the product against any other object as it will damage the product and may potentially cause a personal injury.
18. Do not take the product apart or disassemble any parts. Tampering with the product may potentially cause a personal injury.
19. This product is very heavy. For the highest level of safety place the dumbbell trays and dumbbells on the floor.
20. Use caution while participating in other activities while using your Dumbbell Stand such as watching television, reading, etc. These distractions may cause you to lose balance, resulting in serious injury.




WARNING: This product can expose you to chemicals including Toluene and Acrylamide which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

Failure to follow all guidelines may compromise the effectiveness of the exercise experience, expose yourself (and possibly others) to injury, and reduce the longevity of the equipment.


SAVE THESE INSTRUCTIONS - THINK SAFETY!

CAUTION!! Please be careful when unpacking the carton.


Dumbbell Stand Pack Checklist




flat washer Ø8*Ø19*1T (26) PCS




Acorn nut M8 (4) PCS

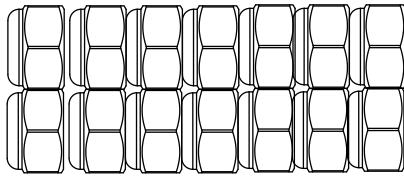


lock nut for M8 (14) PCS

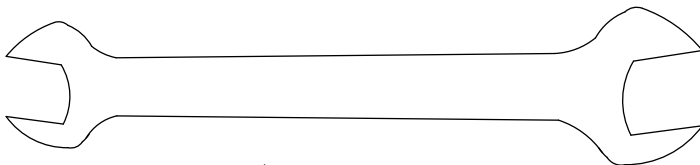


Wrench (1) PCS

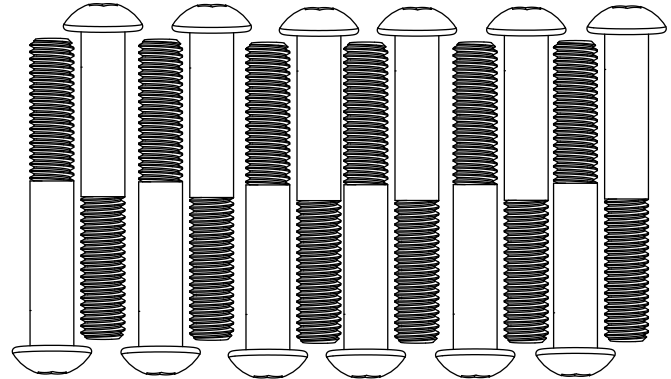

allen bolt M8*55L (12) PCS

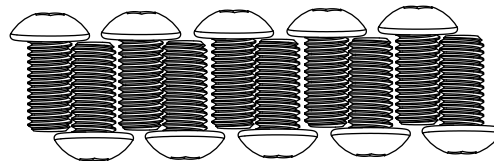

allen bolt M8*16L (10) PCS

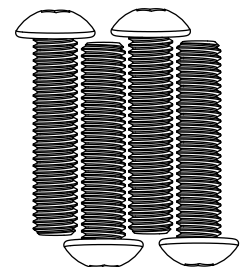



allen bolt M8*35L (4) PCS



Allen Key (1) PCS

Dumbbell Stand Assembly


1

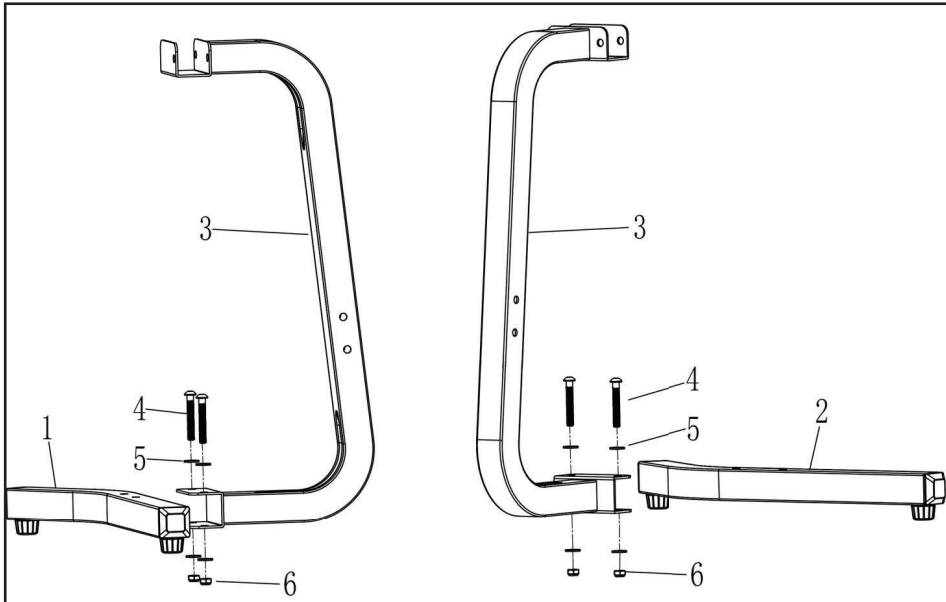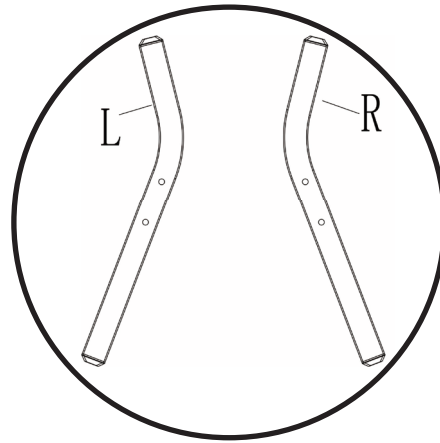

1. Attach the **Stabilizer Left (No.1)** to the **Stand Tubing (No.3)**, securing with 2 **Allen Bolts (No.4)**, 4 **Flat Washers (No.5)** and 2 **Lock Nuts (6)**
2. Repeat for the **Stabilizer Right (No.2)**. Hand tighten the bolts and nuts.

Dumbbell Stand Assembly


2

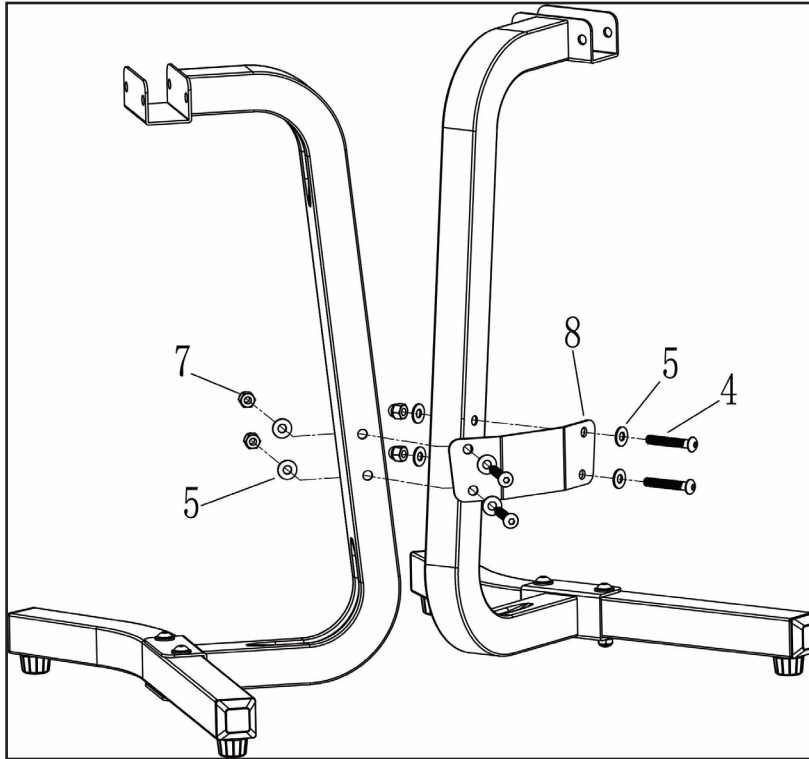

1. Attach the **Stand Tube Connecting Plate (No.8)** to the **Stand Tubing (No.3)**, securing with 4 **Allen Bolts (No.4)**, 8 **Flat Washers (No.5)** and 4 **Acorn Nuts (No.7)**


Dumbbell Stand Assembly

3

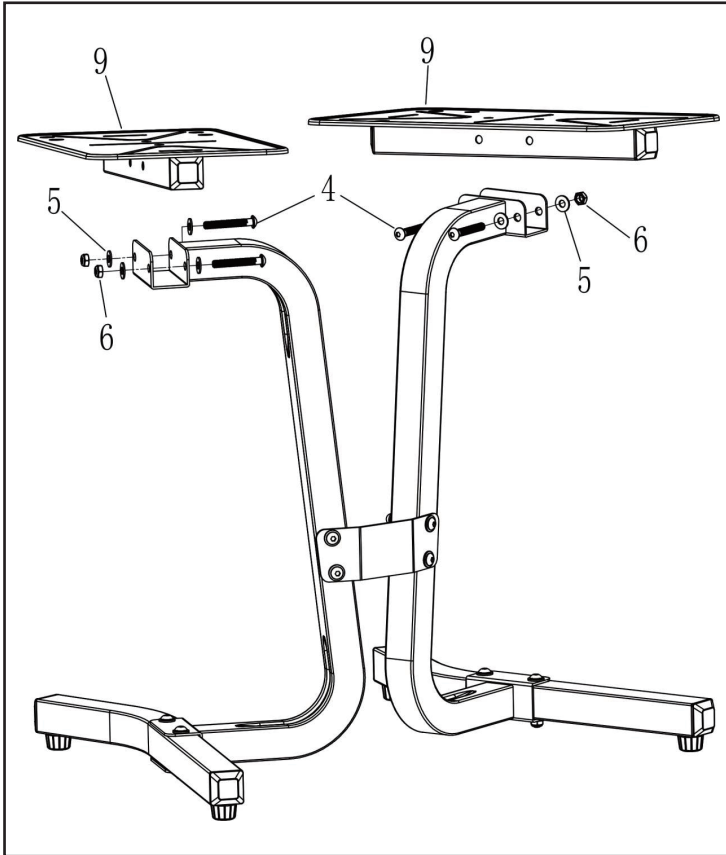

1. Attach the **Dumbbell Brackets (No.9)** to the **Stand Tubing (No.3)**, securing with 4 **Allen Bolts (No.4)**, 8 **Flat Washers (No.5)** and 4 **Lock Nuts (No.6)**


4

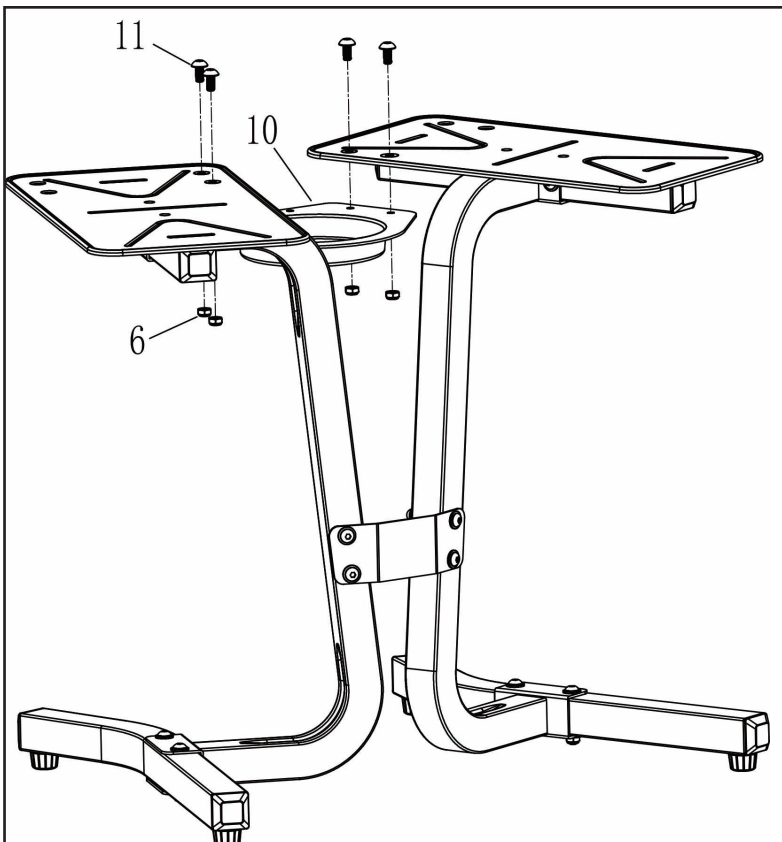

1. Attach the **Storage Tray (No.10)** to the **Dumbbell Brackets (No.9)**, securing with 4 **Allen bolts (No.11)** with 4 **Lock Nuts (No.6)**

Dumbbell Stand Assembly


5

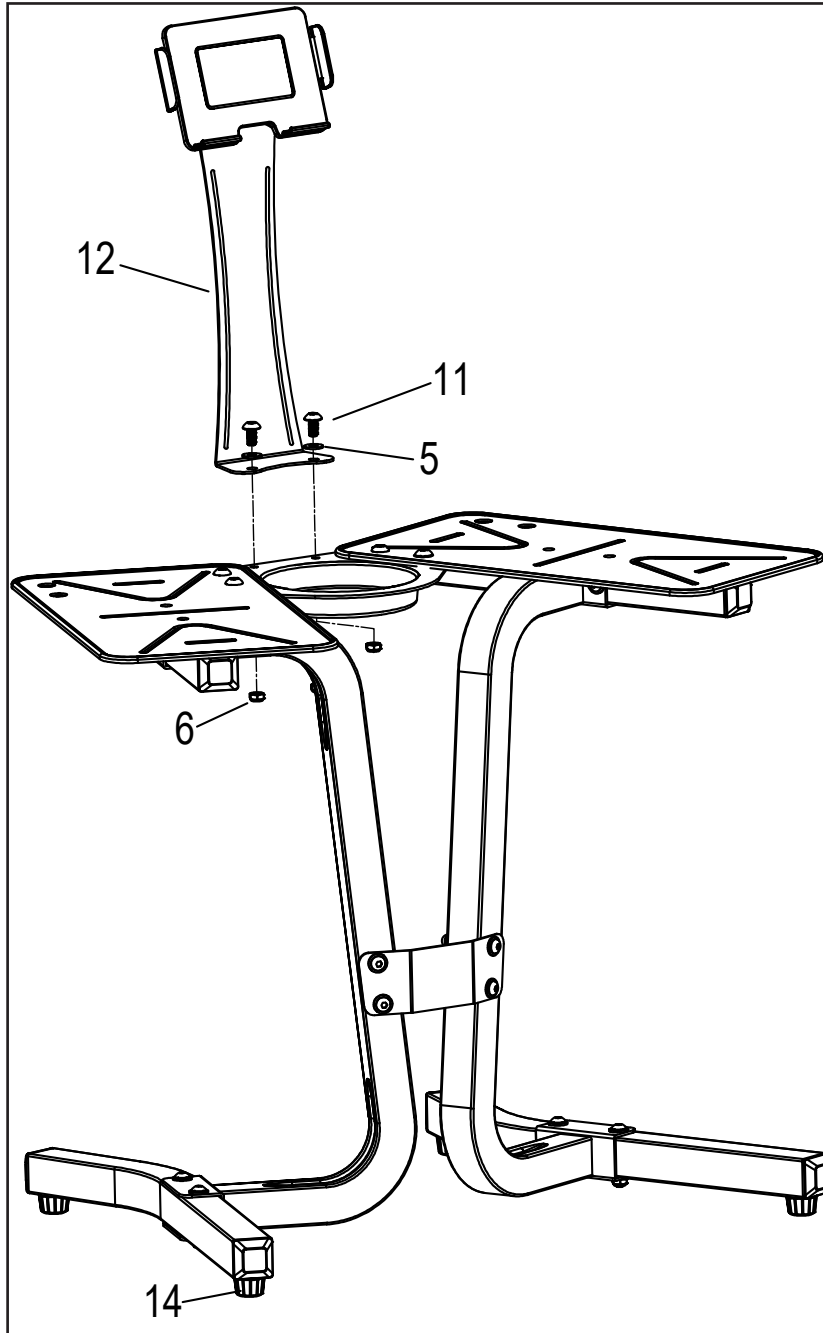

1. Attach the **Tablet Holder (No.12)** to the **Storage Tray (No.10)**, securing with 2 **Allen Bolts (No.11)** and 2 **Flat Washers (No.5)** with 2 **Lock Nuts (No.6)**
2. Adjust the **Leveler Footpads (No.14)** if you find the dumbbell stand is unbalanced before you put the dumbbells on.

Dumbbell Stand Assembly

6

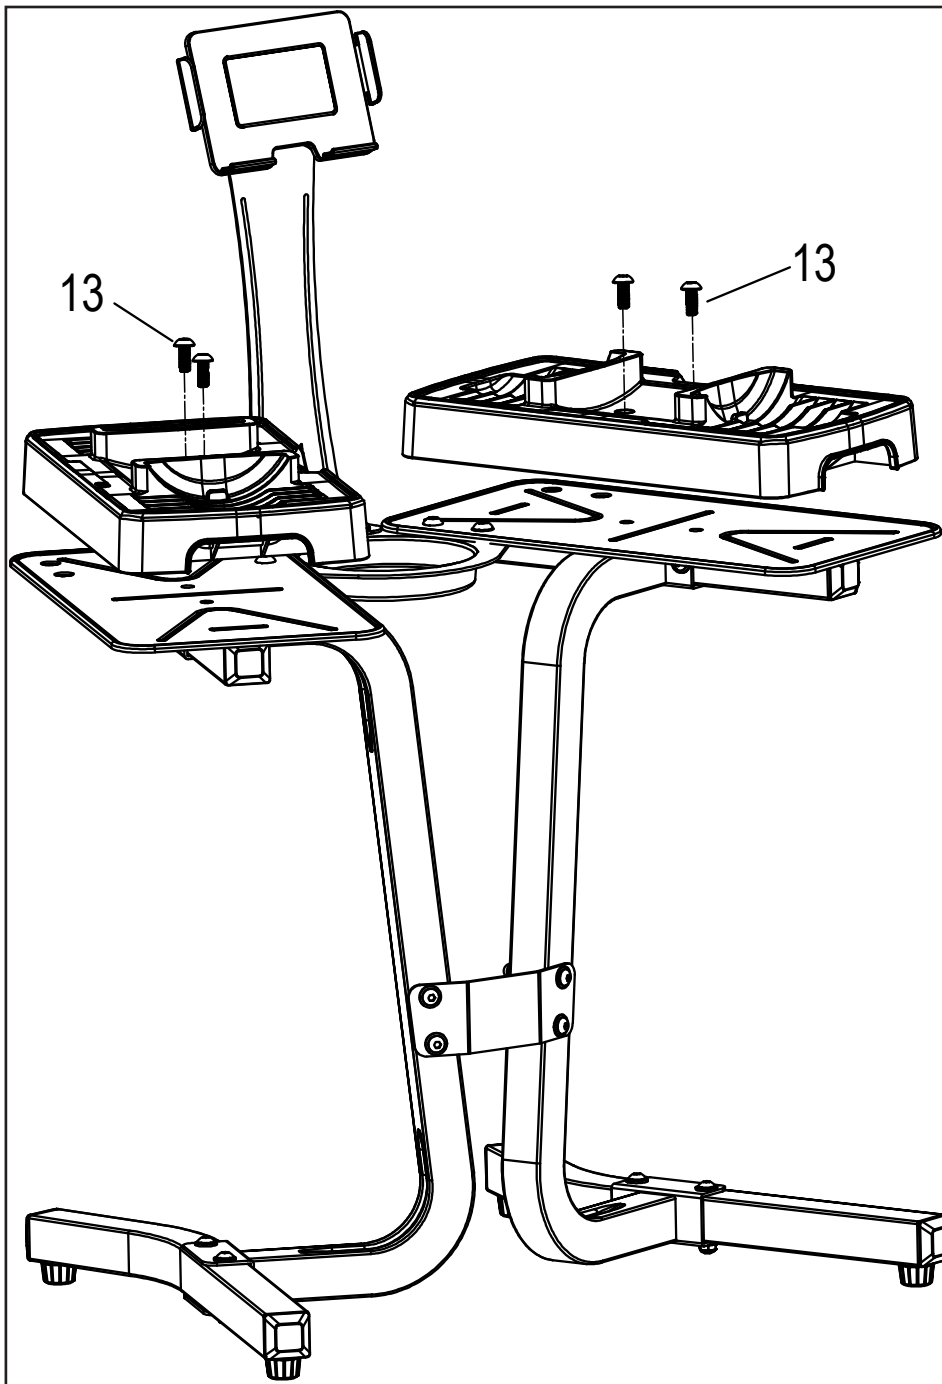

1. Attach the 12.5lb Dumbbell cradles to the **Dumbbell Brackets (No.9)**, securing with 4 **Allen Bolts (No.11)**.
2. Attach the 25lb or 55lb Dumbbell cradles to the **Dumbbell Brackets (No.9)**, securing with 4 **Allen Bolts (No.13)**.

Note: Only XTERRA Adjustable Dumbbell Cradles can be mounted to this stand (Not included.)

Manufacturer's Limited Warranty

Effective June 16, 2022 - Dumbbell Stand LIMITED WARRANTY

XTERRA Fitness Inc. warrants all its home use Dumbbell Stand parts for a period of time listed below, from the date of retail sale, as determined by a sales receipt or in the absence of a sales receipt, eighteen (18) months from the original factory shipping date. XTERRA Fitness' responsibilities include providing new or remanufactured parts, at XTERRA Fitness' option, and technical support to our independent dealers and servicing organizations. In the absence of a dealer or service organization, these warranties will be administered by XTERRA Fitness directly to a consumer. The warranty period applies to the following components:

Home Use Limited Warranty

Parts

1 Year

NORMAL RESPONSIBILITIES OF THE CONSUMER

This warranty applies only to products in ordinary household use. The consumer is responsible for the items listed below:

1. The warranty registration must be completed within 10 days of the original purchase to validate the manufacturer's limited warranty or register online at the XTERRA Fitness website.
2. Proper use of the Dumbbell Stand in accordance with the instructions provided in this manual, including maintenance.
3. Expenses for making the Dumbbell Stand accessible for servicing, including any item that was not part of the Dumbbell Stand at the time it was shipped from the factory.
4. Damages to the Dumbbell Stand finish during shipping, installation or following installation.

EXCLUSIONS

This warranty does not cover the following:

1. CONSEQUENTIAL, COLLATERAL, OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY. Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.
2. Service call reimbursement to the consumer. Service call reimbursement to the dealer that does not involve malfunction or defects in workmanship or material, for units that are beyond the warranty period, for units that are beyond the service call reimbursement period, for Dumbbell Stands not requiring component replacement, or Dumbbell Stands not in ordinary household use.
3. Damages caused by services performed by persons other than authorized XTERRA Fitness service companies, use of parts other than original XTERRA Fitness parts, or external causes such as alterations, modifications, abuse, misuse, accident, improper maintenance, or acts of God.
4. Products with original serial numbers that have been removed or altered.
5. Products that have been; sold, transferred, bartered, or given to a third party.
6. Products that are used as store display models.
7. Products that do not have a warranty registration on file at XTERRA Fitness Inc. XTERRA Fitness reserves the right to request proof of purchase if no warranty record exists for the product.
8. Product use in any environment other than a residential setting.
9. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.


SERVICE


Keep your bill of sale. Twelve (12) months from the date on the bill of sale or eighteen (18) months from the date of factory shipping as determined by the serial number establishes the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by following these steps, in order:

1. Contact your selling authorized XTERRA Fitness dealer. OR
2. Contact your local authorized XTERRA Fitness service organization.
3. If there is a question as to where to obtain service, contact our service department at (870)336-4286.
4. XTERRA Fitness' obligation under this warranty is limited to repairing or replacing, at XTERRA Fitness' option, the product through one of our authorized service centers. All repairs must be preauthorized by XTERRA Fitness. If the product is shipped to a service center freight charges to and from the service center will be the customer's responsibility. For replacement parts shipped while the product is under warranty, the customer will be responsible for shipping and handling charges. For in-home service, the customer will be responsible for a trip charge. There will be an additional trip charge if the customer is located over 100 miles from the nearest service center.
5. The owner is responsible for adequate packaging upon return to XTERRA Fitness. XTERRA Fitness is not responsible for damages in shipping. Make all freight damage claims with the appropriate freight carrier. DO NOT SHIP ANY UNIT TO OUR FACTORY WITHOUT A RETURN AUTHORIZATION NUMBER. All units arriving without a return authorization number will be refused.
6. For any further information, or to contact our service department by mail, send your correspondence to:

XTERRA Fitness, Inc.
P.O. Box 2037
Jonesboro, AR 72402-2037

Product features or specifications as described or illustrated are subject to change without notice. All warranties are made by XTERRA Fitness, Inc. This warranty applies only in the 48 contiguous United States. NOTE: This does not apply to Alaska or Hawaii.

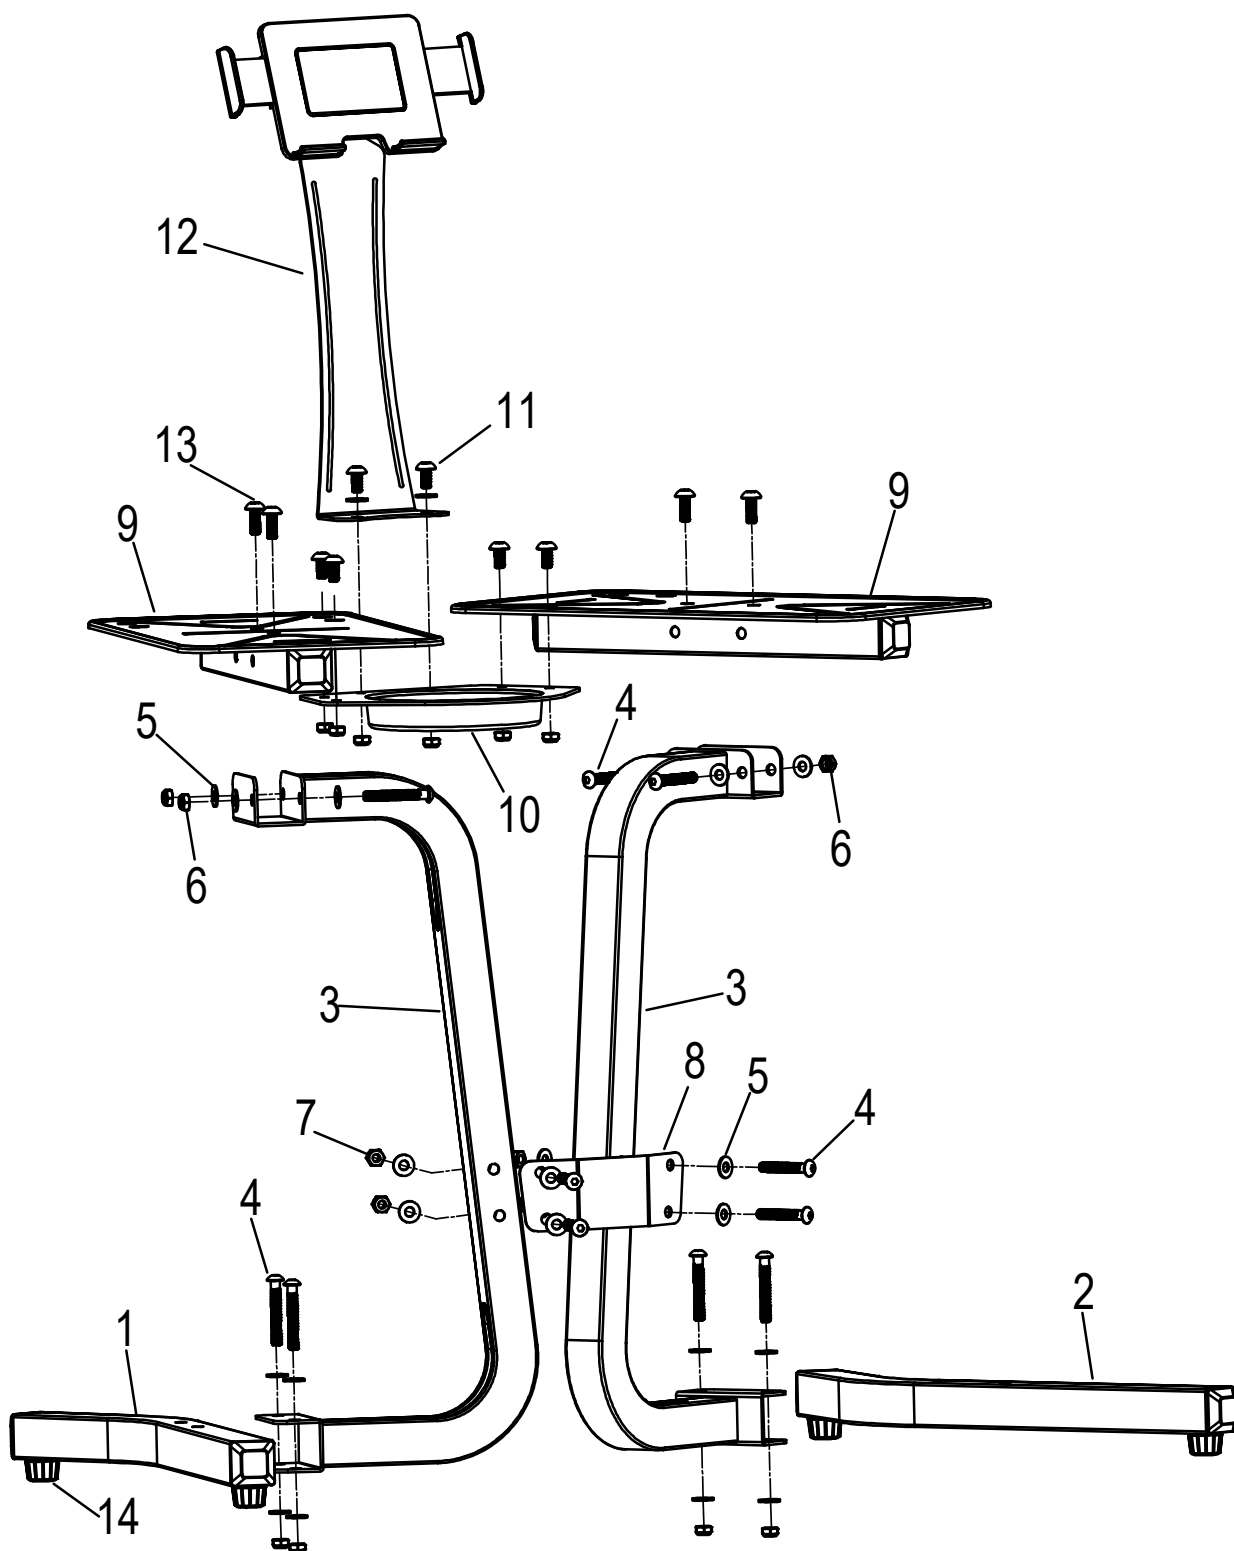

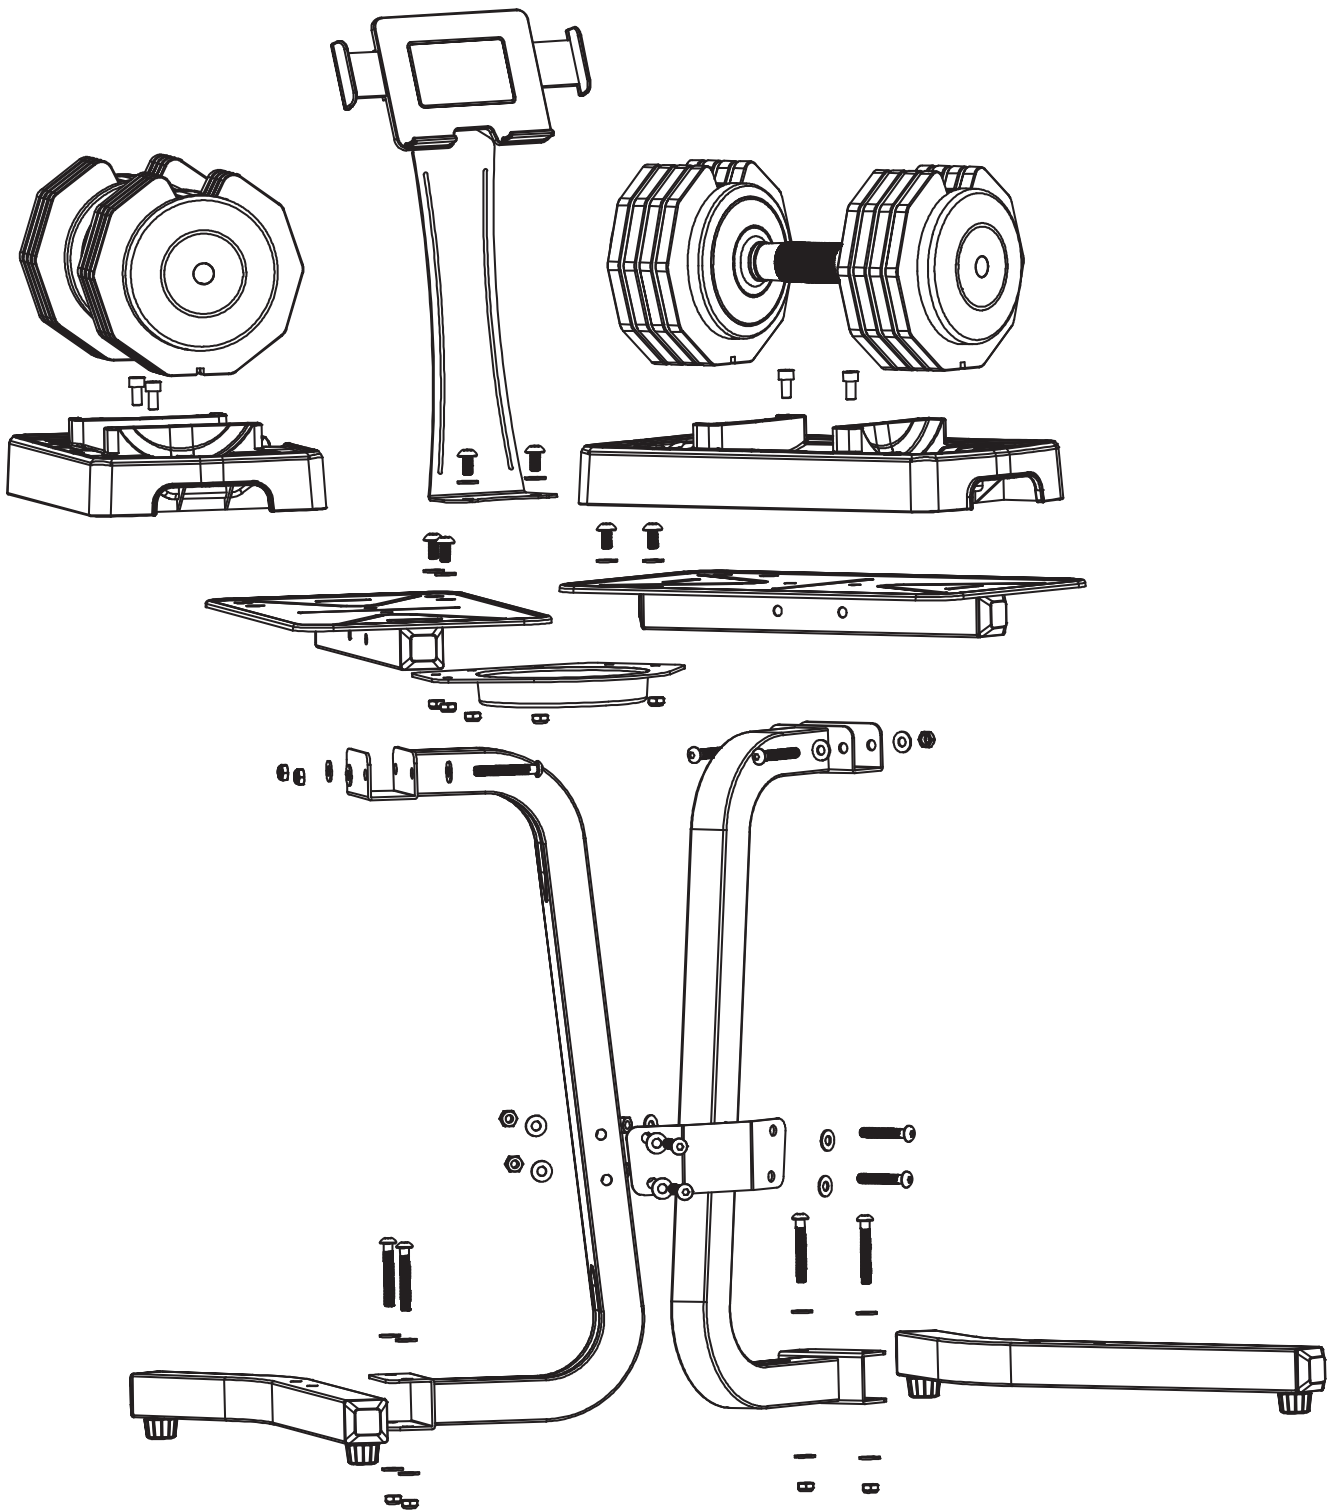

*Dumbbells and cradles are sold separately.

DBSTAND SPARE PARTS LIST			
S/N	DESCRIPTION	SPEC	QTY
1	Stabilizer (Left)	38*38*515	1
2	Stabilizer (Right)	38*38*515	1
3	Stand tubing	38*38*900	2
4	Allen bolt	M8*55	12
5	Flat washer	8*19*1	26
6	Lock nut	M8	14
7	Acorn nut	M8	4
8	Stand tube connecting plate	4T	1
9	Dumbbell bracket		2
10	Storage holder		1
11	Allen bolt	M8*16	10
12	Tablet holder		1
13	Allen bolt	M8*35	4
14	Foot pad	M8	4

3000 Nestle Road Jonesboro, AR 72401 - Phone:870-336-4286 - Fax:870-935-7611