



A M C R E S T

**4MP PTZ Speed Dome IP Camera
User Manual**

Contents

- Welcome..... 3
- Device Overview..... 3
- Installation Guide 3
- Initialization..... 6
- Web User Interface..... 9
- Main Menu..... 12
- Playback..... 13
- AI 19
- Camera..... 39
- Alarm 48
- Maintain..... 53
- Settings 63
- PTZ..... 69
- Storage..... 72
- Log 74

Welcome

Thank you for purchasing an Amcrest camera!

This user manual is designed to be a reference tool for the installation and operation of your AI camera. Here you can find information about the camera's features, functions, and information to aid in troubleshooting.

For access to the quick start guide and other support information visit: <http://amcrest.com/support>

To contact Amcrest support, please do one of the following: visit <http://amcrest.com/contacts>

Important Security Warning

To keep your Amcrest camera secure and prevent unauthorized access, please make sure to follow the steps below:



- Always make sure that your camera has the latest firmware as listed on www.amcrest.com/firmware
- Never use the default password for your camera. Always ensure that your password is at least 810 characters long and contains a combination of lowercase characters, uppercase characters as well as numbers.

Device Overview

This 4MP Outdoor POE+ PTZ AI speed dome camera delivers stunning ultra-high-definition video in 4-megapixel resolution, at 30 frames per second. It features a 5mm – 125mm focal length with a max aperture of F1.6-F3.6 with max horizontal viewing angle of 51.9° - 3.0°. It also features a super wide 25x optical zoom function as well as IR and full color night vision options which can detect objects in total darkness up to 492ft away (IR mode).

The camera requires a PoE+ connection (802.3at) or a DC 12V/3A power adapter that can be used to power the device. Make sure to use the proper POE+ switch when operating. PoE+ switches and devices can supply power to both PoE and PoE+ powered devices, please note, PoE+ devices require a maximum of 25.5W of power to function.

The camera also features on-board motion detection, built-in AI features, such as IVS, which can be used for enhanced perimeter protection, smart motion detection which allows the camera to detect only human and vehicles in the area, as well as construction management and video metadata options. The camera also features flexible storage options to store recordings to a microSD card, FTP, NAS, NVR, or using the Amcrest Cloud (optional). All these features can be accessed and customized using a web browser or even using the Amcrest View Pro or Amcrest View Pro 2 app using a mobile device.

Installation Guide

Wiring Overview

The camera will come attached with several dangle wire connections. These wires are used to power the device (if not using POE+) as well as provide the ability to connect an external microphone, speaker, or alarm. Please refer to the information provided below for more details.

Wire	Purpose
Power Connection	Use these wires to splice the included DC24V, 2.5A switching adapter to camera. Please do not use this connection if you are powering your device using a PoE+ connection.
Ethernet Connection	Use this port to power your device and transmit data using PoE+.
Audio In/Out Connection	Use these wires to splice an external audio device, such as a microphone or speaker to the device.
Alarm Connection	Use these wires to splice an external alarm to the device. Blue: Alarm OUT1 Green: Alarm COM1 Yellow&Green: AlarmGND Red: IN1 Brown: Alarm IN2

Alarm Cable Connection

The below steps are provided as a reference for connecting an external alarm to the camera's alarm cable connections.

Step 1: Alarm Input Connection: Connect your alarm input device to the ALARM_IN1 and ALARM_GND terminals on the user cable.

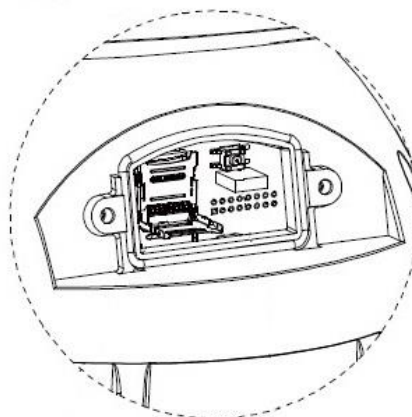
Step 2: Alarm Output Connection: Connect your alarm output device to the ALARM_OUT1 and ALARM_COM1 terminals on the user cable. Note: The alarm output is a relay switch.

Step 3: Web Interface Configuration (Input): Access the web UI for the camera to configure the alarm input settings to correspond with the physical connections made in Step 1. To access the alarm settings, select the Alarm option on the main menu and select **Alarm**. Specify the Normally Open (NO) or Normally Closed (NC) output based on the high/low signal generated by the alarm input device when triggered.

Step 4: Web Interface Configuration (Output): Enable the **Alarm-out Port** option to correspond with the physical connections made in Step 2 then click **Apply**.

MicroSD Card Installation & Factory Reset

The factory reset button and microSD card slot are in the same location on your device. Remove the hatch on your device using a Phillips head screwdriver to locate the microSD card and factory reset button.









A microSD card can be used to store and view local recordings/snapshots. This camera requires a class 10 or above microSD card formatted to FAT32 to function. The camera can handle a max of 512GB of microSD card storage. Open the microSD card latch and insert the card, lower the latch onto the microSD card and lock it into place.

A factory reset will revert your device back to its original factory default settings. To reset your camera to factory default settings, press and hold the factory reset button for 20 – 30 seconds to allow the camera to reset. Allow the camera to reboot and return to factory settings.

Camera Installation

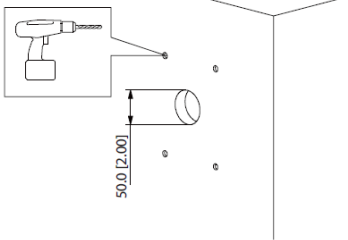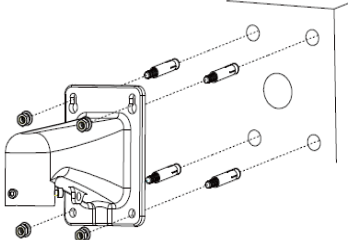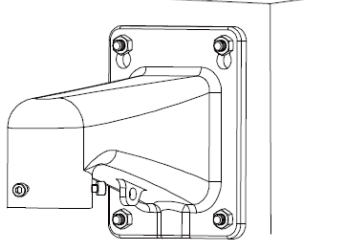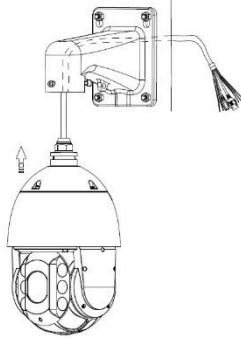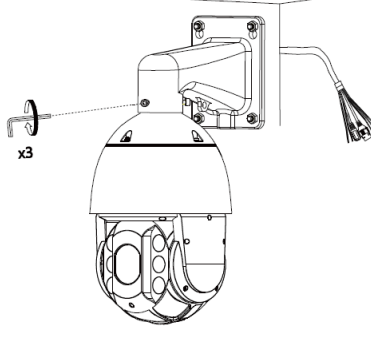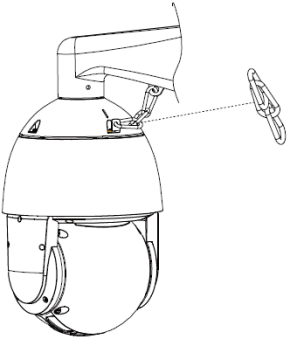The following steps are provided as a reference for the physical installation of your camera. Please make sure the installation surface can support at least 3x the weight of your camera.

		
1. Drill the holes on the installation surface. A paddle bit can be used to drill a hole in the center for wiring.	2. Place the wall mount bracket onto the installation surface and secure it using the included expansion bolts.	3. Make sure the wall mount bracket is secured, and the locking screws are in place.
		
4. Run the wiring of the camera through the wall mount as well as the drilled hole on the installation surface to connect all wiring.	5. Secure the camera to the wall mount bracket using an Allen wrench and locking screws.	6. Secure the camera to the wall mount bracket using the included carabiner chain.

DO NOT APPLY POWER TO THE ADAPTER UNTIL THE CONNECTION HAS BEEN SECURED IF NOT USING POE+.

It is recommended to use gloves during this process. To begin, splice the ground wire (black) to the marked ground wire of the switching adapter and splice the DC24V (+) (red) wire to the power in wire of the switching adapter. Use electrical tape to ensure the connection is secured. Then, connect the power cable to the switching adapter and connect it to a wall outlet. The device will begin to boot. Additional Ethernet weatherproofing connectors can be used for further protection.

Initialization

This camera features the latest JS technology which allows the camera to be accessed both locally and remotely in most main web browsers. The camera can also be accessed on your mobile device using the Amcrest View Pro 2 app, Amcrest Cloud, Blue Iris, etc.

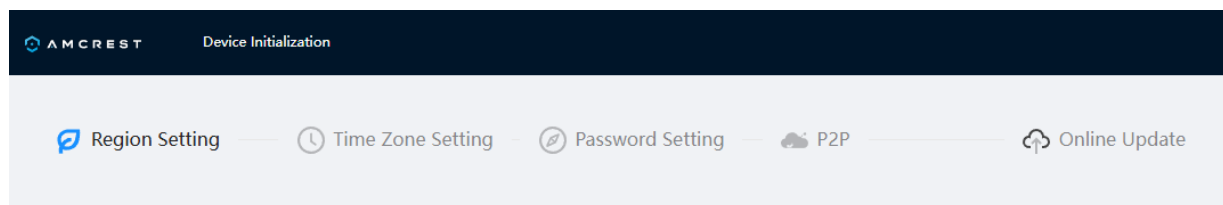
Web User Interface Access

The camera can be accessed in most mainstream web browsers including Chrome, Firefox, Microsoft Edge, etc. using the camera's IP address. Please note, some features may require a .exe plugin and will not be compatible on Mac. To locate the camera's IP address, it is highly recommended to download our free Amcrest IP Config Tool software. The Amcrest IP Config Tool can be downloaded at the following web page: amcrest.com/downloads

In the **All-Downloads** menu, click on **IP Config Software** to begin the free download. Once the download has completed installing, locate the IP address associated with the device into the web browser and press enter to access the web user interface.

Device Initialization

During initialization, please verify the region, language, and video standard of your device, click then click **Next**.



Region	United States
Language	English
Video Standard	NTSC

Next

Verify the time zone settings, date & time format, as well as system time. Tap Sync with PC to sync the camera's date & time settings of your PC to the camera. Tap **Next**.


Device Initialization

✓ Region Setting
⌚ Time Zone Setting
🔑 Password Setting
☁ P2P
🔄 Online Update

Date Format YYYY-MM-DD

Time Zone (UTC-06:00) Central Time (US & Canada)

System Time
11:37:17
Sync with PC

Next

Create a new admin password for your camera. This will be the password to access the device. The password should be between 8 and 32 characters with a combination of letters, numbers, and symbols are recommended when setting up your password. A list of security questions will be provided as well, these questions can be used in the future as a reference to reset your password if it has misplaced or forgotten. Click **Next**.

Username admin

New Password ••••••••

Confirm Password ••••••••
✓

☒ Security Questions

Question1 What's your lucky number?

Answer1 32143

Question2 What is your favorite singer or band?

Answer2 Michael Jackson

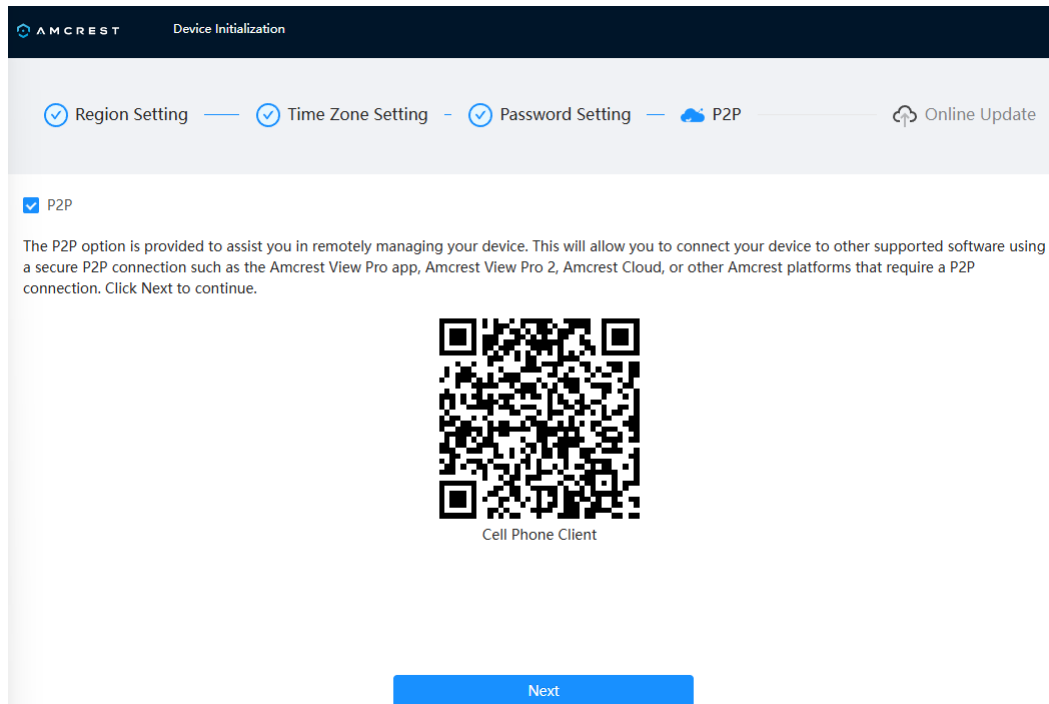
Question3 What was the first thing you learned to cook?

Answer3 Spaghetti

Next


Note: Do not use special symbols like ‘ ‘ ; : &

The P2P option will be enabled by default. This option allows you to connect your camera to your mobile device using the Amcrest View Pro 2 app which is available in the App Store or Google Play store. Scan the “Cell Phone Client QR code for quick access to the mobile apps. **Before adding your camera into the app, please make sure to complete device initialization.** Click **Next**.



The screenshot shows the 'Device Initialization' screen of the Amcrest web interface. At the top, the Amcrest logo and 'Device Initialization' are displayed. Below this is a progress bar with five steps: 'Region Setting', 'Time Zone Setting', 'Password Setting', 'P2P', and 'Online Update'. The 'P2P' step is currently selected and highlighted. Below the progress bar, there is a checkbox labeled 'P2P' which is checked. A paragraph of text explains that the P2P option is for remotely managing the device and allows connection to other supported software using a secure P2P connection. Below the text is a large QR code labeled 'Cell Phone Client'. At the bottom of the screen is a blue button labeled 'Next'.

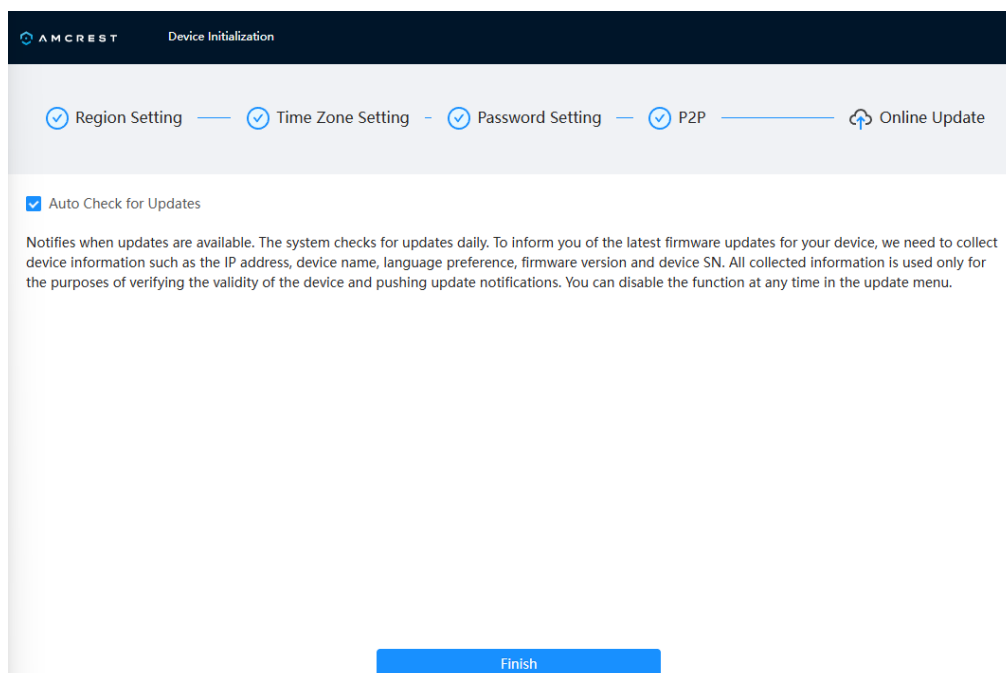The camera will check for automatic updates by default, the option can be enabled or disabled if needed, click **Finish** to complete device initialization.



The screenshot shows the 'Device Initialization' screen of the Amcrest web interface. At the top, the Amcrest logo and 'Device Initialization' are displayed. Below this is a progress bar with five steps: 'Region Setting', 'Time Zone Setting', 'Password Setting', 'P2P', and 'Online Update'. The 'P2P' step is currently selected and highlighted. Below the progress bar, there is a checkbox labeled 'Auto Check for Updates' which is checked. A paragraph of text explains that the system checks for updates daily and that the user can disable the function at any time in the update menu. At the bottom of the screen is a blue button labeled 'Finish'.

Web User Interface

After the device has been initialized you can access the camera in the web browser. The camera can be accessed in most mainstream web browsers such as Chrome, Firefox, etc. However as previously described, some features may require a .exe plugin and are not compatible on Mac browsers. Enter the username and password for your camera and click **Login**.

To install the plugin, select “**Click here to download**” and download the .exe plugin to your computer.

To use this function, please download and install the plug-in. [Click here to download](#)

Install the plugin and allow the browser to refresh. Click **Apply** to grant the plugin access to the device.

Tip

Would you like to grant webplugin access to the device?

Cancel



Apply

Note: If you do not want to install the plugin, click “**Close**”. The banner may reappear in certain menus though if the plugin is not installed.

Live


The live menu allows you to access the panoramic view and features associated with your camera. For more information on the features provided in the live view menu, please refer to the table provided below.

Feature	Description
General Mode	Provides a general view of the live view interface. This will be enabled by default.
Face Mode	For use if using face detection. Provides real time face details and snapshot . Click the settings icon () to filter face attributes. Face Attribute(6/6) Gender Age Expressi... Glasses Face Mask Beard Apply Cancel

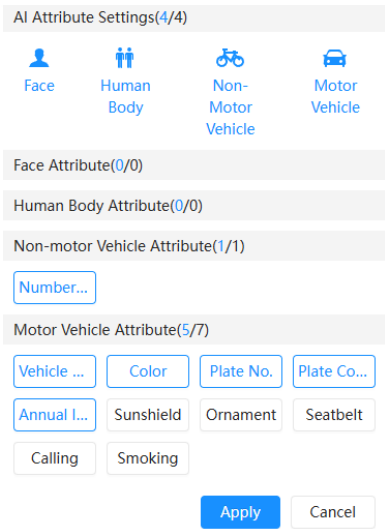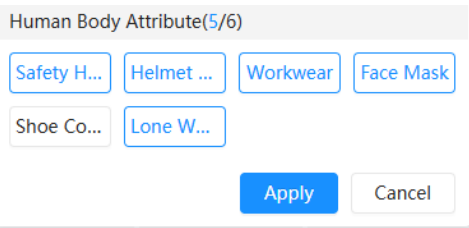Metadata Mode	For use if using video metadata. Provides real time metadata and snapshots to be displayed. Click the settings icon () to filter AI attributes settings. 
Construction Monitoring Mode	For use if using construction monitoring. Provides real time metadata and snapshots to be displayed. Click the settings icon () to filter human body attributes settings. 
Video Stream	Provides access to the view of the mainstream and sub streams of the camera.
PTZ Control	Max speed: Use the slider to adjust the minimum and maximum PTZ speed. Use the directional arrows to pan/tilt the camera. Click the  icon and create an area on the interface to automatically zoom and focus on an area. Use the   icons to zoom in and out. Use the   icons to manually focus the image. Use the   icons to manually control the iris settings. The PTZ Menu  allows you to access camera, PTZ, and System settings using an OSD menu. If using the PTZ menu, use the directional and OK options to navigate the settings. Use the  area focus option to automatically focus on an area. Use the manual track icon  to manually track an object.
PTZ Function	Use this option to call PTZ presets such as tour groups, scans, patterns, etc.
Image Adjustment	Adjust the brightness, contrast, saturation, and hue of the feed. Press the Reset button to return these to default. Default values are typically around 64.
	Adapt/Original Size. Switch between displaying the original size of the stream in its set resolution or adapting to the size of the monitor display the feed is being viewed on.

	W: H: Adjust the width and height of the live view feed between its original size or adaptive size, which removes the gray borders.
	Smoothness Adjustment. Adjust the fluency allows the camera to compensate for any network discrepancies to increase fluency of the stream.
	AI Rule. Enable or disable the AI rule overlays on the live view screen.
	Intelligence Area: Enable or disable the region of interest overlays on the screen.
	Anti-aliasing: helps to reduce jagged edges and aliasing in images. Aliasing is a phenomenon that occurs when a digital image is created from a continuous image, such as a video frame. It can result in jagged edges and other artifacts in the image. Anti-aliasing works by smoothing out the edges of objects in an image. This can be done using a variety of methods, such as averaging the colors of adjacent pixels or using a blur filter.
	Set live view feed to full screen.
	Warning Light: Manually turn on or off the red/blue LED warning lights.
	Siren: Manually turn on or off the on-board siren.
	Force Alarm1. Enable or disable an alarm being sent to an external alarm.
	Digital Zoom. Features 16x zoom. To use digital zoom, select the digital zoom icon, select an area on the live view screen you would like to view and release. (Requires Plugin)
	Snapshot. Click this button to take a manual snapshot of the live view screen.
	Triple Snapshot. Click this button to take 3 simultaneous manual snapshots of the live view screen.
	Record Control. Click this button to manually record a video of the live view screen. Click the button again to stop recording.
	Sound: Click this button to hear audio from the camera.

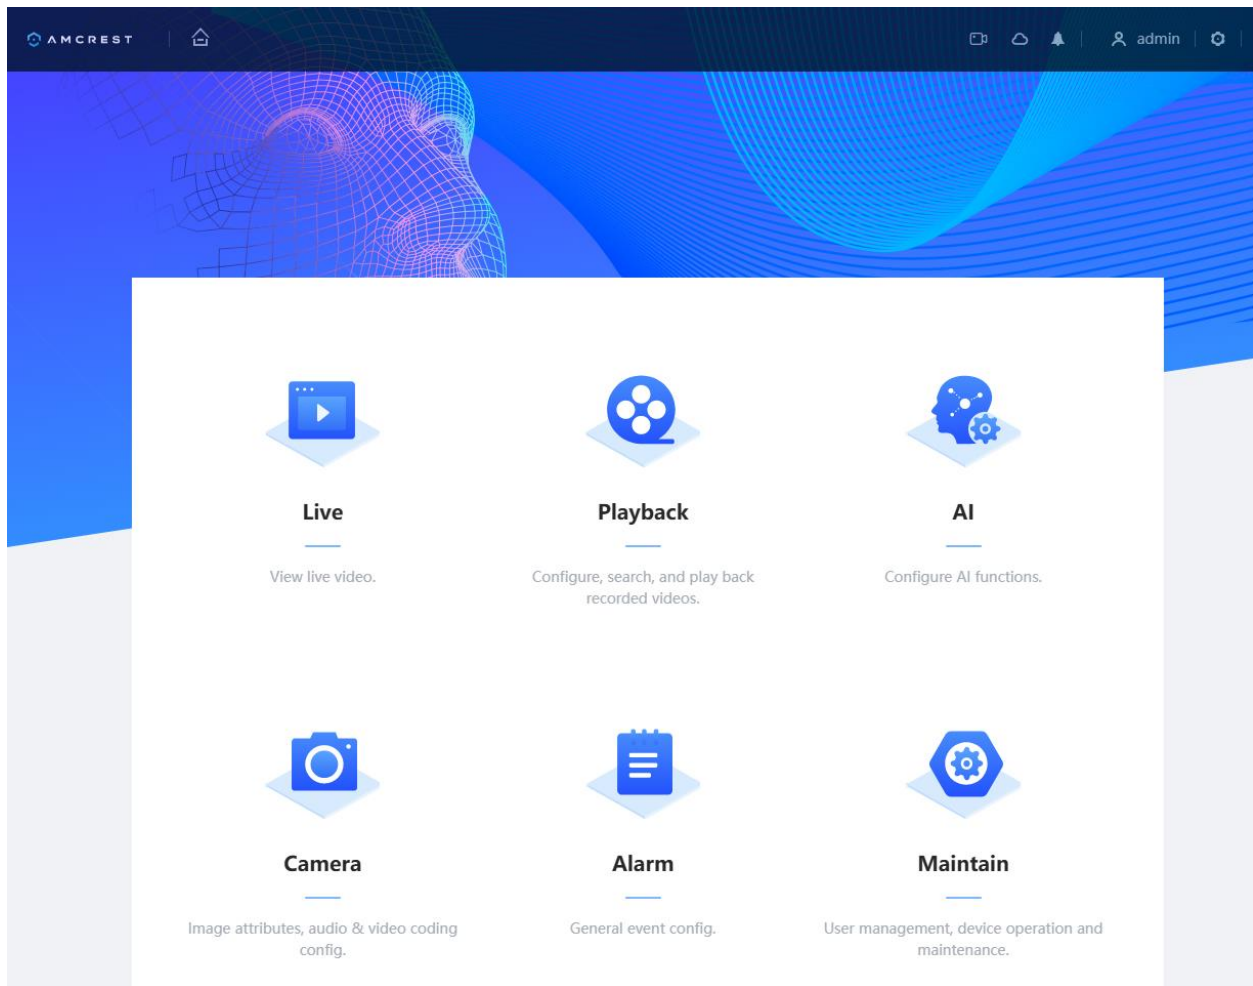Main Menu




The main menu allows for quick access to the features and interfaces associated with your camera. For more information on the main menu options, please refer to the information provided below.

Top Banner

	Home. Return to the main menu from any selected tab or interface.
	Live. Return to the live view screen from any selected tab or interface.
	Cloud. Automatically directs the user to https://amcrestcloud.com
	Alarm. View or clean queued or already executed alarm types.
	Admin. Click to restart the camera or log out of the current user account.
	Setting. View Path, Network, PTZ, Storage, and Log settings
	Full Screen. Click to set the interface to full screen. Press Esc to return to original format.

Playback

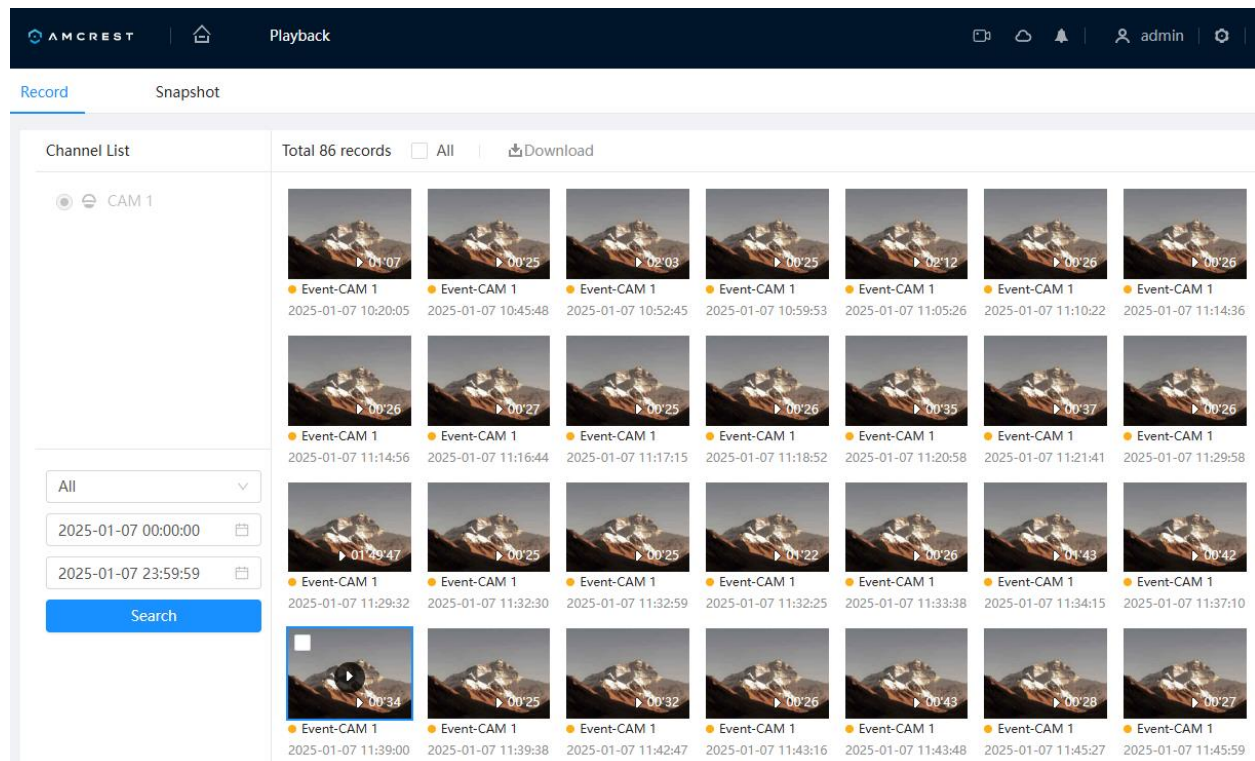The Playback menu allows the user to playback and download recorded video and snapshots that have been saved to a microSD card. Press the Search button to load recordings or snapshots based on a specified date and time.



Viewing a Recording

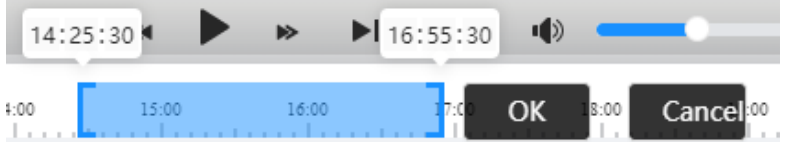
To view a recording, click on the “All” dropdown menu and select which record type you would like to view. There are several event record types that can be selected including a general record type, which will display all continuous recording events, an Event record type which will display all motion detection and other motion activated recordings, as well as an alarm (external alarm) and manual record types.

Select a record type from this menu and click on the start time option. A calendar will appear, choose the start date of the recording you would like to view then click “Select time”. The default start time will be set to 00:00:00, which is midnight, use the scroll-down options to select the exact hour, minute, and even seconds of the start of the event. In this example, we are using 15:05:02, which is 3:05 pm. Click **Ok** to set the start time.

Next, click on the end time option. A calendar will appear, choose the end date of the recording you would like to view and click “select time”. The default end time will be set to 23:59:59 which is roughly 1 second before midnight. Use the scroll down options to select the exact hour, minute, and even seconds for the end of the event. In this example, we are using 17:03 which is 5:03pm. Click **Ok** to set the end time.

Click **Search**. The interface will display the total number of events within the specified time frame.

To view the event, hover your mouse over the selected event and click the play button. The list of events will be displayed in the left panel and the selected recording will start to play. For more information on the options provided in the playback menu, please refer to the information provided below.

	Timeline. Use the timeline to scroll through specific events in a designated time frame.
	Digital Zoom. While the event is playing, click on the digital zoom option to zoom in on a specific area of the recording.
	AI Rule. Use this option to enable or disable AI overlays in the recording.
	Intelligence Rule. Display intelligence rule overlays in the recording.
	Previous. Click to return to a previous recording found in the file list.
	Rewind. Use the rewind option while the recording is playing to rewind either in a 2x, 4x, 8x or 16x.
	Play/Pause. Use these options to start or pause the recording.
	Fast Forward. Use the fast forward option while the recording is playing to fast forward in 2x, 4x, 8x, or 16x.
	Next. Click to move to the next recording in the file list.
	Next Frame. Use this option when the recording is playing to scrub through the recording frame by frame.
	Triple Snapshot. Click this button to take a triple snapshot while the recording is playing.
	Snapshot. Click this button to take a snapshot while the recording is playing.
	Video Clip. User your mouse to set a range in the timeline in which a video clip can be saved. Once the range is set, click OK.  Select a download format, preferably .mp4, as well as a storage path for the clip. Click Start Download to download the clip to your computer.
	Full Screen. Click this button while the recording is playing to view it in full screen mode.

Download a Recording

Events can be downloaded directly from the playback menu to your computer. **Downloading a recording will require the use of a plugin**, please make sure it is installed on your computer before proceeding. The interface allows you to download a single event or multiple events if needed, if you would like to download all events, click on the “All” option located next to the total records field.

To download a recording, select an event ensuring it has a blue checkmark. After selecting the event, click the **Download** button to launch the download interface. The download interface will display the total number of events being downloaded, the event type, the start & end times, the duration of the event as well as the total size (MB) of the event. Click on **Browse** to select a download path and click **Start Download** to download the selected event or events to your computer.

Snapshot

The snapshot tab allows you to search and view snapshots of events, adjust the quality of the snapshot, set snapshot schedules, and set storage paths for snapshots.

Snapshot Query

This is the default menu and allows you to search and view snapshots that have been retained on a microSD card. Similar to viewing recordings, the record types can be located using a start and end date & time and downloaded to your computer.

To view a snapshot, click on the “All” dropdown menu and select which event type you would like to view. There are several event types that can be selected including a general event type, an event type that will display all motion detection snapshots, and other motion-activated event types, such as alarm (external alarm) and manual record types.

Select an event type from this menu and click on the start time option. A calendar will appear, choose a start date of the recording you would like to view then click “Select time”. The default start time will be set to 00:00:00, which is midnight, use the scroll-down options to select the exact hour, minute, and even seconds of the start of the event. In this example, we are using 15:05:02, which is 3:05 pm. Click **Ok** to set the start time.

Next, click on the end time option. A calendar will appear, choose the end date of the event you would like to view and click “select time”. The default end time will be set to 23:59:59 which is roughly 1 second before midnight. Use the scroll down options to select the exact hour, minute, and even seconds for the end of the event. In this example, we are using 17:03 which is 5:03pm. Click **Ok** to set the end time.

Click **Search**. The interface will display the total number of events within the specified time frame.

To view the snapshot, hover your mouse over the selected event and click the play button. The list of snapshots will be displayed in the left panel and the selected snapshot will be displayed in the interface. If you would like a slide show of each snapshot in the left panel played, click the Slide Show icon () at the bottom of the interface.

Downloading a Snapshot

Snapshots can be downloaded directly from the snapshot interface to your computer. The snapshots will be saved in jpg format. The interface allows you to download a single or multiple snapshots if needed, if you would like to download all the snapshots, click on the “All” option located next to the total records field.

To download a snapshot, select an event ensuring it has a blue checkmark next to the event. After selecting the event, click the **Download** button to launch the download interface.

The download interface will display the total number of snapshots being downloaded, the format type, the start time of the event, as well as the total size (MB) of the snapshot. Click on **Browse** to select a download path for the snapshots and click **Start Download** to download them to your computer.

Snapshot

This tab provides additional details pertaining to snapshots including the size, quality, and interface in which the snapshots will be retained. For a brief description of the features in this menu, please refer to the table below.

Type	Scheduled: Set settings for scheduled snapshot events only. Event: Set settings for motion activated snapshot events only.
Size	The resolution of the snapshot when it is viewed or downloaded.
Quality	The overall quality of the snapshot, the lower the quality the less clear the image will become. The default is 5 however can be modified from 1 – 6.
Interval	The amount of time in which snapshots will be retained. This can range from 1 – 7 seconds or can be customized between 1-50000 seconds.

Schedule

The schedule menu allows you to set a snapshot schedule which will provide the camera with a way to only retain snapshots during specific days or times.

Channel 1 Holiday

Event Type: General Event Alarm
Clear Delete

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Sun

Mon

Tue

Wed

Thu

Fri

Sat

Copy

Copy

Copy

Copy

Copy

Copy

Apply Refresh Default

Below is an explanation of the fields on the Snapshot Schedule settings tab:

Record Type: These checkboxes allow the user to select which snapshot type they want to configure on the schedule. There are 3 types of snapshots:

General: General means that the camera will take snapshots during the specified time period. General recording is represented by the color green.

Motion: Motion Detection means that the camera only takes snapshots when the motion detection alarm is activated. Motion recording is represented by the color yellow.

Alarm: Alarm means that the camera only takes snapshots when an alarm is activated. Alarm recording is represented by the color red.

Snapshot Schedule: To specify a snapshot range, first select the type of snapshot desired, then click and drag on time bar for the desired date. To edit multiple days at once, drag the cursor further up or down to cover the other days.

Copy: Clicking this button opens a screen that allows for snapshot periods to be set for each day and for each snapshot type. There are a total of 6 periods that can be set.

Holiday: Provides a way to specify which days the schedule will not apply. To set a holiday, click the Holiday button and select Enable. On the calendar, select the dates in which the schedule will not apply and click OK. A separate holiday schedule can be applied, if a schedule is needed use your mouse to set the time & specified rule types. Click **Apply**.

Snapshot Control

This menu allows you to set a storage location to which snapshots will be sent. This can be set to local storage, which will send the snapshots to a microSD card (if installed) or via network storage which allows the snapshots to be sent using FTP or to an SFTP server.

Below is an explanation of the fields listed in this menu.

Event Type: These checkboxes allow the user to select which snapshot type they want to be sent to the storage method selected.

General: Pertains to 24/7, or continuous snapshot events.

Motion: Pertains to motion detection only snapshot events.

Siren: Pertains to only if a siren is activated

Disk Full: Allows the camera to overwrite or stop recording if the storage method is detected as full.

Storage Method: Choose the method in which snapshots are retained.

Local Storage: Snapshots will be stored in a microSD card (if installed).

Network Storage: Snapshots will be stored in a network storage option such as an FTP, NAS, or SFTP server.

Sending Snapshots Using Network Storage.

To send snapshots to an FTP server or NAS, select the network storage option from the storage method dropdown menu. Then select either FTP or NAS from the dropdown menu.

FTP

If using FTP, the recommended storage method would be SFTP. Please make sure a designated SFTP server is active before using this method. If SFTP is not set up, please use FTP and set it accordingly. Below is a description of the options provided in the SFTP or FTP mode menus.

Mode: Select between SFTP(Recommended) or FTP protocols.

Enable: Enables the SFTP or FTP protocol.

Sever IP: Enter the server IP of the SFTP or FTP server.

Port: Enter the port number associated with your SFTP or FTP server. Please note, if using SFTP, use port 22, if using FTP use port 21.

Username: Enter the username associated with the SFTP or FTP server.

Password: Enter the password associated with the SFTP or FTP server.

Storage Path: Enter the destination folder or path in which the events will be retained in the SFTP or FTP server.

Urgently store to local: If the SFTP or FTP server is unreachable, the files will be sent to local storage if a microSD card is installed.

Click **Apply** to set the SFTP or FTP settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**. After all credentials are entered, click **Test** to test the connection.

NAS

If using NAS, the protocol types are NFS or SMB. Please make sure a designated NAS is active before using this method. Below is a description of the options provided in the NAS interface of the camera.

Protocol Type: Select between NFS or SMB protocol types.

Enable: Use this toggle switch to enable the NAS feature.

Server IP: Enter the server IP address of your NAS system.

Storage Path: Enter the destination folder or path in which the events will be retained in the NAS.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Auto Upload


This option allows you to automatically upload images to a server. The upload mode is HTTP by default. To use this feature, click the Enable option and **Add** to configure the IP/domain name, port, HTTPS, path, authentication and event type. This feature supports adding up to two servers. If **HTTPS** is enabled, you must download the CA certificate and upload it to the server. To download the CA cert, navigate to **Network>>HTTPS>>Certificate Management**, download the device certificate and upload it to the server.

No.	IP/Domain Name	Port	HTTPS	Path	Authentication	Event Type	Test	Delete
1	192.168.1.109	37779	☒	Path		All	<button>Test</button>	

Click **Apply**, then the **Test** button to verify the server is running successfully.

AI

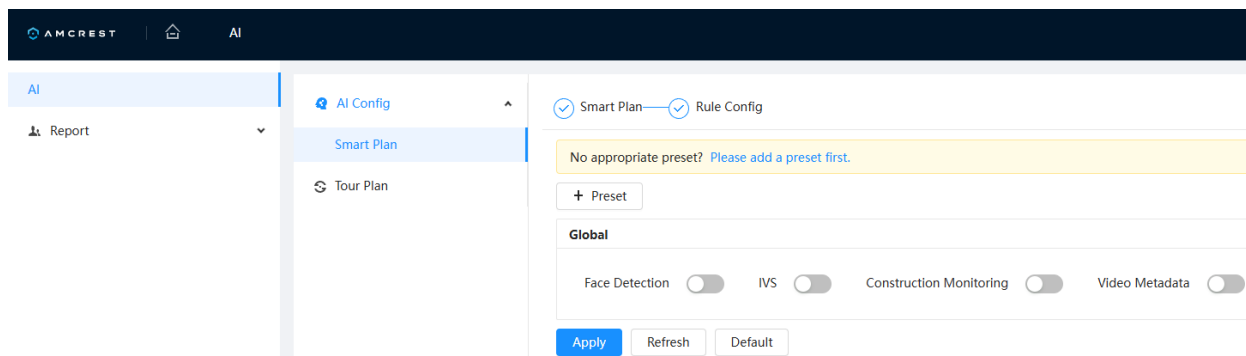
The AI menu allows the user to configure the built-in AI features of your camera. This camera supports face detection, IVS, as well as construction monitoring, and video metadata modes. These rules can be applied to a global preset, however, it is highly recommended to add your own presets. Click the **Please add a preset first** option to add a preset.



Click **Add Preset**, name the preset, and use the PTZ directional options to set any direction tours or PTZ functions if needed for the preset. Click the save icon  under **Apply** and click **OK** to set the preset.

Note: To set additional presets click the settings icon  and select PTZ. Click **Add Preset**, name the preset, use the directional PTZ options (if needed), and click the save icon to apply the preset.

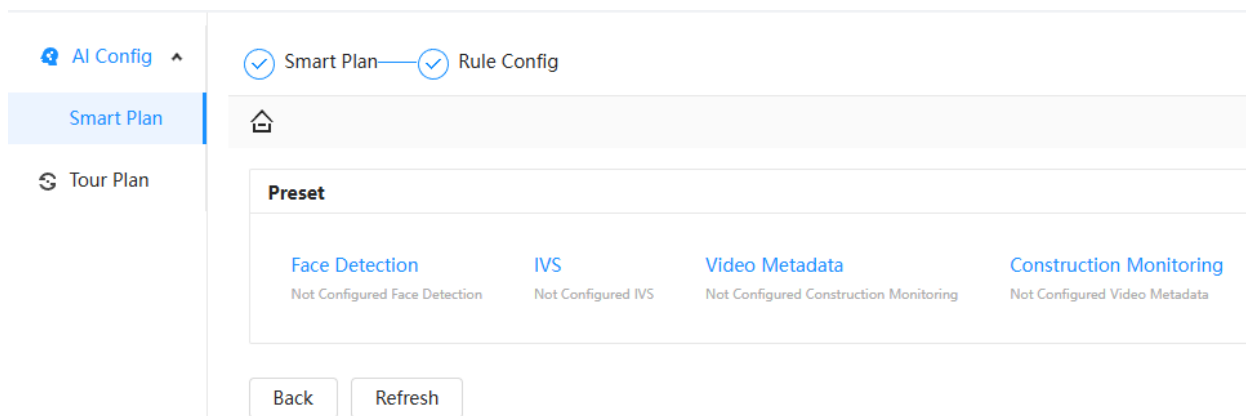Click **+Preset** to add the preset into the **Smart Plan** menu. Enable the smart plans you would like to configure and click **Next**. Select the preset from the **Rule Config** menu.



Face Detection

Face Detection is used to detect face events and receive facial image snapshots. To enable face detection, navigate to the rule config menu, click Next and select **Face Detection**.

Note: Ensure the face detection option is enabled before proceeding. The detection area will be set to full screen, however, use your mouse to modify the detection area if needed.

Rule	Description
	Rule: Used to customize a detection area on the interface.
	Exclusion Area: Used to create an area on the screen that will not exclude detection.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.


Parameter	Description
Enable	Used to enable or disable the face detection rule.
OSD Info	Allows quick access to the Face Statistics overlay menu. (Recommend enabling).
Face Enhancement	Used to improve the quality of facial images captured by the camera to help reduce noise, sharpen the image, enhance contrast, and automatically adjust white balance.
Face Cutout	Format facial image to a one-inch photo or facial image only.
Snapshot Mode	Sets image priority based on image quality. Real-time: lowest quality with quicker respond time. Quality Priority: Sets highest quality with slowest up time.
Property	Used to set performance priority for face detection events.
Face Beautifying	Used to enhance the visual appearance of detected faces.
Schedule	Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days. It will be set to detect full time by default.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10-300 seconds.
Record	Allow the user to store the recording locally and playback using a microSD card.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10-300 seconds.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.
Advanced	Use this dropdown menu to set quality threshold and optimize duration.
Quality Threshold	Use this slider to adjust the overall image quality of the facial image detected.
Optimized Duration	The amount of time the camera has in between face events to capture the clearest image once it recognizes a face.

For more information on face detection, please visit amcrest.com/support.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

IVS

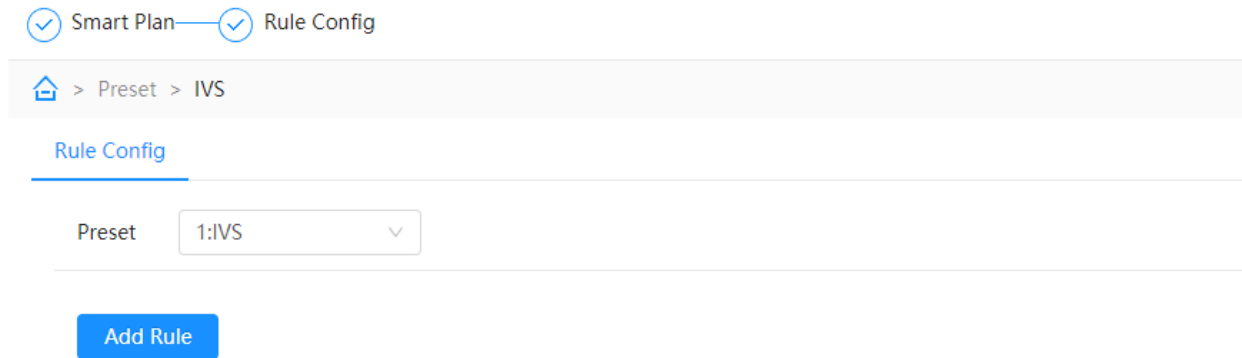The camera supports multiple IVS functions including tripwire, intrusion, abandoned object, fast moving, parking detection, crowd gathering, missing object, and loitering detection for enhanced perimeter protection. To begin, click **Add Rule** and select an IVS rule from the provided menu.



Tripwire

Tripwire allows the camera to trigger an event if an object, such as a human or vehicle, crosses a set tripwire line. After adding the rule, the interface will show the rule as enabled, use your mouse to draw a detection line on the interface.

For a brief description of the features listed in this interface, please refer to the table below.

Rule	Description
	Rule: Used to begin drawing a detection line on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.

Direction	Allows the user to set which direction the object will be going for the tripwire to be triggered. It can be set left, right, or in both directions (A<->B)
Auto Tracking	Allows the camera to automatically follow a moving object within its field of view.
Tracking Duration	The amount of time the target will be tracked, default is 15 seconds.
Effective Target	Enable human or vehicle detection options.
Object Filter	Enables human and vehicle effective object detection
Human	Enable human detection (only trigger when a human is detected).
Vehicle	Enable vehicle detection (only trigger when a vehicle is detected).
Auto Patrol	Allows the camera to automatically move between a set of multiple predefined positions, or "presets," in a continuous loop. This creates a virtual patrol route, enabling the camera to monitor a wider area than a fixed camera.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Intrusion

Intrusion allows the camera to trigger an event if an object, such as a human or vehicle, appears or crosses a set intrusion area set by the user. After adding the rule, the interface will display the rule as enabled, use your mouse to draw a detection area on the interface.

For a brief description of the features listed in this interface, please refer to the table below.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.
Action	Allows the user to choose a parameter filter that will activate a trigger if an object were to cross or appear in the set intrusion area. Appear: The rule will trigger when a target appears inside the area. Cross: The rule will trigger when a target enters or exits the area. Inside: The rule will trigger when a target is sedentary inside the area.
Direction	Allows the user to choose whether the rule will be triggered if an object enters, exits, or enters & exits a set line or area. *Used with the "Cross" action.
Auto Tracking	Allows the camera to automatically follow a moving object within its field of view.
Tracking Duration	The amount of time the target will be tracked, default is 15 seconds.
Effective Target	Enable human or vehicle detection options.
Object Filter	Enables human and vehicle effective object detection
Human	Enable human detection (only trigger when a human is detected).
Vehicle	Enable vehicle detection (only trigger when a vehicle is detected).
Auto Patrol	Allows the camera to automatically move between a set of multiple predefined positions, or "presets," in a continuous loop. This creates a virtual patrol route, enabling the camera to monitor a wider area than a fixed camera.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.

Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Abandoned Object

The abandoned object rule allows the camera to trigger an event if an object is placed in a set area for a specified amount of time. These can be items such as luggage, bag, box, etc., or other objects such as a non-motor vehicle. Use your mouse to draw a detection area on the interface.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.
Duration	The amount of time the object will remain in the detection area before the rule is triggered.
Auto Tracking	Allows the camera to automatically follow a moving object within its field of view.

Tracking Duration	The amount of time the target will be tracked, default is 15 seconds.
Auto Patrol	Allows the camera to automatically move between a set of multiple predefined positions, or "presets," in a continuous loop. This creates a virtual patrol route, enabling the camera to monitor a wider area than a fixed camera.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30. .
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Fast Moving

Fast-Moving allows the camera to trigger an event if an object, such as a human or vehicle, quickly moves in an area set by the user. After adding the rule, the interface will display the rule as enabled, use your mouse to draw a detection area on the interface.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.

	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.
Sensitivity	Use the provided slider to adjust the sensitivity of this rule. The higher the sensitivity the slower the speed necessary to trigger the rule.
Auto Tracking	Allows the camera to automatically follow a moving object within its field of view.
Tracking Duration	The amount of time the target will be tracked, default is 15 seconds.
Effective Target	Enable human or vehicle detection options.
Object Filter	Enables human and vehicle effective object detection
Human	Enable human detection (only trigger when a human is detected).
Vehicle	Enable vehicle detection (only trigger when a vehicle is detected).
Auto Patrol	Allows the camera to automatically move between a set of multiple predefined positions, or "presets," in a continuous loop. This creates a virtual patrol route, enabling the camera to monitor a wider area than a fixed camera.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Parking Detection

Parking Detection allows the camera to trigger an event if an object, such as a motor vehicle, is parked in a set area for a specified amount of time. After adding the rule, the interface will display the rule as enabled, use your mouse to draw a detection area on the interface.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.
Duration	The amount of time the object will remain in the detection area before the rule is triggered.
Auto Tracking	Allows the camera to automatically follow a moving object within its field of view.
Tracking Duration	The amount of time the target will be tracked, default is 15 seconds.
Auto Patrol	Allows the camera to automatically move between a set of multiple predefined positions, or "presets," in a continuous loop. This creates a virtual patrol route, enabling the camera to monitor a wider area than a fixed camera.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.

Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Crowd Gathering

Crowd Gathering is used to detect a group of people that enter or exit a specific area set by the user on the live view screen. After adding the rule, the interface will display the rule as enabled, use your mouse to draw a detection area on the interface.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.
Duration	The amount of time the object will remain in the detection area before the rule is triggered.

Sensitivity	Use the provided slider to adjust the sensitivity of this rule. The higher the sensitivity the slower the speed necessary to trigger the rule.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Missing Object

Missing Object allows the user to set a region around an object and if the object is moved or missing from the set region an alarm will be triggered. These can be items such as luggage, bag, box, etc., or other objects such as a non-motor vehicle. Use your mouse to draw a detection area around the object.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.

	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.	
Parameter	Description	
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.	
Duration	The amount of time the object will remain in the detection area before the rule is triggered.	
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.	
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.	
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.	
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.	
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.	
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.	
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high). Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.	
Send Email	Enables the camera to send an email notification when an event is triggered	
Snapshot	Allows a snapshot of the event to be sent in an email notification.	

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Loitering Detection

Loitering Detection is used to detect if a person or group are loitering in a specific area set by the user. After adding the rule, the interface will display the rule as enabled, use your mouse to draw a detection area on the interface.

Rule	Description
	Rule: Used to begin drawing a detection area on the interface.
	Pixel: Used to measure and set the number of pixels in the target area on the live monitoring screen.
	Min. Size: Used to determine the minimum size in which a target can be detected.

	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon  to apply the preset to the rule.
	Unlock/Lock: Unlock or lock the rule, the setting will automatically lock after 180 seconds.

Parameter	Description
Tracking Target Size Ratio	A setting that controls how large the object you want to track needs to be in the frame before the camera starts tracking it. The default value is 25%, which means that the object must be at least 25% of the size of the frame to be tracked. You can adjust this value up or down, depending on the size of the object you want to track and the field of view of the camera.
Duration	The amount of time the object will remain in the detection area before the rule is triggered.
Auto Tracking	Allows the camera to automatically follow a moving object within its field of view.
Tracking Duration	The amount of time the target will be tracked, default is 15 seconds.
Auto Patrol	Allows the camera to automatically move between a set of multiple predefined positions, or "presets," in a continuous loop. This creates a virtual patrol route, enabling the camera to monitor a wider area than a fixed camera.
Schedule	Allows the user to set a schedule in which the IVS rule will be triggered. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once an object has been detected. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Construction Monitoring

Construction Monitoring is designed to provide comprehensive surveillance and management capabilities specifically for construction sites. It goes beyond basic security monitoring by offering tools to help with site management, safety, and progress tracking.

Area Config

If using a global preset, the detection area will be set to full screen, however, if using a custom preset for a construction monitoring feature, the detection area will have to be manually drawn on the interface.

Parameter	Description
Draw Area	Allows the user to draw a detection area.
Redraw Area	Removes the original drawn detection area to redraw another.
Area List	Displays the name of the area, type, and the ability to delete the detection area

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Rule Config

This menu allows you to configure rules such as PPE detection, absence detection, and lone worker detection. To begin configuring these options, click **Add Rule** and select a feature.

PPE Detection

This feature uses AI to automatically detect whether individuals in the camera's view are wearing the required Personal Protective Equipment (PPE). This includes attributes such as hats (safety helmets, caps), workwear, face masks, or shoe covers.

Preset

3:Construct... ▾



Regi...

OM-1 ▾

Add Rule

No.	Rule Type	On	Attribute Settings	Delete
1	PPE Detection	☒		

Parameter	Description
No.	The number of rules configured in the interface.
Rule Type	The type of rule that is being configured.
On	Enable or disable the function.

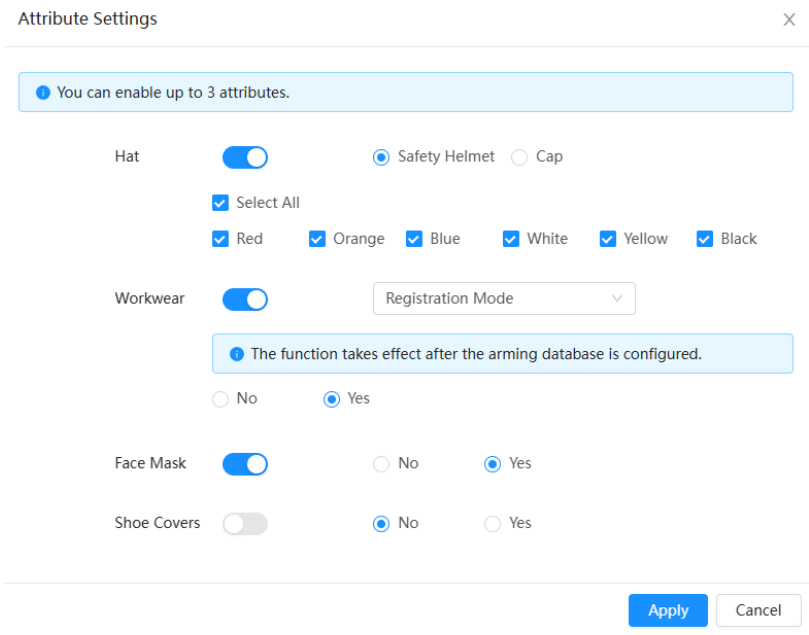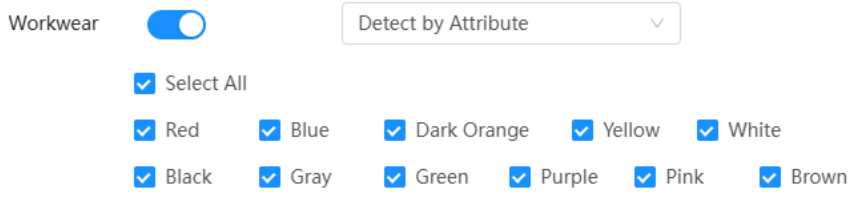Attribute Settings	Click the settings icon to configure different PPE attributes. A selected attribute will trigger an event if the object detected is not wearing the selected attribute.  The camera can support up to 3 attributes. Safety Helmet: Detects whether a person is not wearing a hard hat in a specific area. It can detect by specific colors or all colors if needed. Cap: Detects whether a person is wearing a baseball cap or not. Work Wear: There are 2 separate modes, registration mode and detect by attribute. Registration Mode: Detect work wear that is registered in the system. Click the Arming Database option to arm the database. Detect by Attribute: Detect work wear by a specific color.  Face Mask: Detect whether a person is wearing a face mask or not in a detection area. Shoe Covers: Detect whether a person is wearing shoe covers or not in a detection area.
Delete	Click the trash can icon to remove the rule from the rule config menu.
	Used to customize the pixel size of a certain area within the detection area.
	Delete the customized pixel size.
Arming Database	Arms the work wear database for specified work wear attributes. To use this feature, click Add, name the database, and select an optimal plan (full body or half body detection). Click the Arming Alarm icon () and click Arm to arm the database. Click the Details icon () to register images. Click Import and select an image, an image must be .jpg, less than 3MB, and in 1080p to register, once imported, click Back to exit.

	Navigate back to the attribute settings menu, ensure registration mode is selected for work wear and click Apply .
Min. Duration	An alarm is triggered if a rule violation, such as improper PPE use, is detected continuously for longer than the specified minimum duration.
Repeat Alarm Time	The alarm will repeat at the configured interval if the triggering condition persists.
Schedule	Allows the user to set a schedule for the selected feature. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once the rule is triggered. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once a rule has been triggered. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Absence Detection

This feature is used as an analytics function to trigger an event if no personnel are detected in the detection area for a specified amount of time.

Parameter	Description
No.	The number of rules configured in the interface.
Rule Type	The type of rule that is being configured.
On	Enable or disable the function.
Delete	Click the trash can icon to remove the rule from the rule config menu.
	Used to customize the pixel size of a certain area within the detection area.
	Delete the customized pixel size.
Min. Duration	An alarm is triggered if a rule violation is detected continuously for longer than the specified minimum duration.
Repeat Alarm Time	The alarm will repeat at the configured interval if the triggering condition persists.
Schedule	Allows the user to set a schedule for the selected feature. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.

Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once the rule is triggered. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once a rule has been triggered. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Lone Working Detection

This feature is designed to monitor individuals working alone in potentially hazardous environments. It uses video analytics to detect if a person has been stationary or has fallen for a certain amount of time, triggering an alarm.

Parameter	Description
No.	The number of rules configured in the interface.
Rule Type	The type of rule that is being configured.
On	Enable or disable the function.
Delete	Click the trash can icon to remove the rule from the rule config menu.
	Used to customize the pixel size of a certain area within the detection area.
	Delete the customized pixel size.
Min. Duration	An alarm is triggered if a rule violation is detected continuously for longer than the specified minimum duration.
Repeat Alarm Time	The alarm will repeat at the configured interval if the triggering condition persists.
Schedule	Allows the user to set a schedule for the selected feature. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.
Alarm-out Port	If a local alarm is configured, enable this option to trigger the alarm if an event is triggered.
Post Alarm	The delay in between IVS events. The default is 10 seconds however this can be modified between 10~300 seconds.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.

Siren	Allows the user to enable the camera to trigger an audible siren once the rule is triggered. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once a rule has been triggered. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Video Metadata

Video metadata is used to detect and retain specified object types such as people, non-motor vehicles, and motor vehicles. Video metadata is typically used in conjunction with the video metadata option in the live view menu and other various metadata options such as structured statistic overlays and video metadata reports.

Video metadata can be set up using either a global or manual preset, however, it is highly recommended to enable a manual preset and smart plan. Select the video metadata smart plan and click **Next** and select the preset.

Rule Config

This menu allows you to configure rules associated with video metadata options. To begin configuring these options, click **Add Rule** and select the attribute (People Detection, non-motor vehicle detection, and motor vehicles).

 > Preset > Video Metadata

Rule Config
Global Config

Preset

4:Video Metadata ▼

Add Rule

No.	Name	Type	On	Picture	Delete
1	VM-1	People Detection	☒		
2	VM-2	Non-motor Vehicle Detection	☒		
3	VM-3	Motor Vehicle Detection	☒		

Parameter	Description
No.	The number of rules configured in the interface.
Name	The name of the video metadata attribute.
Type	The video metadata type that is being configured in the system.
On	Enable or disable the function.
Picture	Allows the user to customize descriptions for different video metadata types. This includes overlays as well as black edge locations. Click the settings option (⚙️) next to the attribute type to customize any of these options if needed.
Delete	Click the trash can icon to remove the attribute from the rule config menu.
	Detection Area: Used to customize the detection area overlay.
	Exclusion Area: Used to customize areas that will not be detected.
	Min. Size: Used to determine the minimum size in which a target can be detected.
	Max. Size: Used to determine the maximum size in which a target can be detected.
	Delete: Used to delete a parameter graphic on the interface.
	PTZ Control: Used to set an additional PTZ preset for the specified rule. This will activate once the rule is triggered. Use the PTZ directional arrows and other options to set the preset, click the save icon (💾) to apply the preset to the rule.
People Flow Statistics	Enable or disable the people detection option (People Detection only).
Traffic Flow Statistics	Enable or disable vehicle detection (this includes non-motor vehicle and motor vehicle detection.)
OSD Info	Provides quick access to the target statistics overlay menu. This allows you to set video metadata overlays on live view, keeping an accurate count of all events detected by the camera for each enabled attribute. Enable  Statistics Type ☒ Motor Vehicle ☒ Non-Motor Vehicle ☒ People
Snapshot Mode	People detection includes face or whole body (Human) detection. Non-motor Vehicle includes faces to be detected in snapshots. Motor Vehicle Detection provides an optimized mode which uses the whole detection area or a tripwire which uses a detection line.
Report Head and Shoulders	This option is used for non-motor vehicle detection to detect objects even if only the head and shoulders are detected by the camera.
Vehicle Filter	This option is used for motor vehicle detection to detect any unlicensed vehicles or vehicles with invalid plates.
Schedule	Allows the user to set a schedule for the selected feature. Click Add Schedule and use your mouse to set a schedule. Click Copy to apply the schedule to multiple days.

AI Config

Smart Plan

Tour Plan

Enable

Tour Mod...

Scene Priority

Idle Inter...

10

sec (10-3600)

Clear

Delete

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Sun

Setting Copy

Mon

Setting Copy

Tue

Setting Copy

Wed

Setting Copy

Thu

Setting Copy

Fri

Setting Copy

Sat

Setting Copy

Apply

Refresh

Camera

This menu allows the user to update or modify camera settings such as video, audio, or to manage image profiles.

Image

The image menu allows the user to configure image profiles as well as adjust the image, exposure, backlight, white balance, and other features associated with the camera. For more information, please refer to the information provided below.

Profile Management

A profile allows the user to set when the image settings will be applied. The profile management section allows you to select between a general (24/7 profile option), schedule, or day/night profile type. Please note, if using a schedule profile type, use the Schedule option to set which months and days will apply to the selected profile.

Scheduling a Profile

To schedule a profile, select the Schedule button under profile management, then select the Schedule option at the bottom of the interface to begin setting a schedule. Use your mouse to select a profile type (color-coded options) and click and drag the timelines next to the specified month to select the month and hours in which the profile will apply.

Profile: This dropdown box allows the user to select which profile to apply. There are several profiles to choose between.

Day: Select this profile if surveillance will be outdoors in the sunlight. This will be the default profile.

Night: Select this profile if surveillance will be outdoors at nighttime.

General: Select this option to have the camera automatically switch between day/night profiles.

Front Light: Select this option if the camera is installed in an area with a light detected in the front area of the camera.

Back Light: Select this option if the camera is installed in an area with a light detected in the back area of the camera.

Strong Backlight: Select this profile if a strong backlight is detected by the camera.

Low Illuminance: Select this profile if the camera is in an area without a lot of light in the area.

Custom1: Set a custom profile in which the settings will apply.

Custom2: Set a custom profile in which the settings will apply.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Image

The image tab allows the user to configure image settings such as brightness, contrast, saturation, etc.

Style: Select between a standard, vivid, or soft image style. A soft style will display the actual color of the image. A standard style, which is the default style of the camera, will show a weaker hue with an increase in contrast. A vivid style will show the feed with greater hue and saturation.

Brightness: This slider is used to adjust playback and record video window brightness. The value ranges from 0 to 100. The default value is 50. The larger the number, the brighter the video is. When you input the value here, the bright section and the dark section of the video will be adjusted accordingly. You can use this function when the whole video is too dark or too bright. Please note the video may become hazy if the value is too high. The recommended value ranges from 40 to 60.

Contrast: This slider is used to adjust playback and recorded video window contrast. The value ranges from 0 to 100. The default value is 50. The larger the number is, the higher the contrast is. You can use this function when the whole video brightness is OK, but the contrast is not correct. Please note the video may become hazy if the value is too low. If this value is too high, the dark section may lack brightness while the bright section may overexpose. The recommended value ranges from 40 to 60.

Saturation: This slider is used to adjust playback and record video window saturation. The value ranges from 0 to 100. The default value is 50. The larger the number, the stronger the color is. This value has no effect on the general brightness of the whole video. The video color may become too strong if the value is too high. For the grey part of the video, distortion may occur if the white balance is not accurate. Please note the video may not be clear if the value is too low. The recommended value ranges from 40 to 60.

Chroma Gain Suppression: Helps to reduce noise in the chrominance (color) channels of an image. It does this by reducing the gain of the chrominance channels, which means that the colors in the image will be less saturated. Chroma gain suppression is typically used in low-light conditions, where noise is more likely to be a problem. It can also be used to improve the quality of images that have been compressed, as compression can also introduce noise.

Sharpness: This slider is used to adjust the sharpness of the video. The value ranges from 0 to 100. The larger the value is, the clearer the edges are and vice versa. Note: The higher the value, the higher likelihood of picture noise occurring. The default value is 50 and the recommended value ranges from 40 to 60.

Sharpness Suppression: Helps to reduce image noise and improve image quality. It does this by blurring the edges of objects in the image, which can help to reduce the appearance of noise. Use the slider to adjust the sensitivity.

Gamma: This slider is used to adjust the gamma of the video. The larger the number, the brighter the video is. The default value is 50 and the recommended value ranges from 40 to 60.

Flip: Flips the image 0°, 180°.

EIS: Electronic Image Stabilization. Helps to reduce blur caused by camera shake. It does this by compensating for the movement of the camera by adjusting the image sensor or lens.

Image Freeze: Freezes the current image on the screen. This can be useful for capturing a specific moment or for viewing an image in more detail.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Exposure

The exposure tab allows the user to configure exposure settings such as anti-flicker, exposure contrast, noise reduction settings, etc.

Anti-Flicker: These radio buttons allow the user to select what type of anti-flicker technology should be used for the video feed. The three options are 50 Hz, 60 Hz, and Outdoor. The desired option should offset any flickering effect caused by the electrical current used in the specific area.

Mode: This dropdown menu allows the user to modify certain exposure settings related to the device such as, iris priority, gain priority, shutter priority or setting a manual gain setting.

Auto- This setting lets you select your shutter speed and have the gain adjust automatically. Selecting customized range will let you both the shutter speed and adjust the gain manually.

Iris Priority - Prioritizes the iris setting over the shutter speed. This means that the camera will try to adjust the iris first to get the correct exposure, and only then adjust the shutter speed.

Shutter Priority- This setting will maximize the fastest shutter speed and will sacrifice the gain in return.

Gain Priority - This setting will maximize the gain for the ideal exposure. Low Noise Basically turns up the ISO to the best setting without sacrificing exposure timing.

Manual – This setting allows the user to manually adjust shutter and gain values, the recommended shutter value is 0-33.33ms and the recommended gain value is 0-50.

Exposure Compensation: Use this slider to control the brightness of the exposure. Please note, the higher the value is, the brighter the image will be, 50 will be the most compensation that can be used on this device.

AE Recovery: Auto Exposure Recovery. Controls how quickly the camera's exposure returns to normal after a sudden change in lighting conditions.

2D NR: Enable or disable 2D noise reduction.

Level: This slider allows the user to specify the 2D Noise Reduction level. 2D noise reduction will be active if 3D NR.

3D NR: Enable or disable 3D noise reduction.

Level: This slider allows the user to specify the 3D Noise Reduction level. The value ranges from 1-100. is disabled. The value ranges from 0 to 100.

Advanced NR: Simultaneously adjust 2D and 3D noise reduction.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Backlight

The backlight tab allows the user to modify and configure backlight settings associated with the camera including BLC, HLC, and WDR.

Mode: Use this dropdown menu to select between different backlight compensation modes.

Off: Disables the backlight modes.

BLC: Backlight compensation: Default will use the whole image to balance the lighting settings, and Customized will allow you to balance the lighting settings from the target area.

HLC: Highlight compensation is a feature that came out of necessity due to overexposure from strong light sources like headlights or spotlights.

WDR: Wide Dynamic Range makes multiple scans of a scene to provide one balanced and unwashed image that is clear for the user.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

WB

The WB tab allows the user to modify and configure white balance settings. White balance is used to adjust colors to match the color of the light source so that white objects appear white. Please note, objects may be lit by several different light sources, including sunlight, incandescent bulbs, and fluorescent lighting.

Mode: Use this dropdown menu to select between different white balance modes.

Auto: Automatically determine proper white balance of a specified area.

Indoor: Preset mode for indoor settings in natural or artificial light.

Outdoor: Preset mode for outdoor settings in natural or artificial light.

ATW: Auto Tracking White Balance. Automatically adjusts the white balance of the image to compensate for changes in the ambient lighting.

Manual: Manually adjust the red and blue values of the feed.

Sodium Lamp: designed to improve the image quality of images captured under sodium lamp lighting. Sodium lamps are a type of artificial light that emits yellow light. This can cause problems with white balance, as the camera may try to compensate for the yellow light by making the image too blue.

Natural Preset mode for areas with large amounts of lights.

Street Lamp: Preset mode for darker areas to ensure color precision.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Day/Night

The day/night tab allows the user to set the camera to switch between color and black and white modes according to the environmental conditions.

Mode: Use this dropdown menu to select between different day/night modes.

Type: Switch between electronic or ICR.

Electronic: This setting allows the camera to automatically switch between color and black-and-white mode depending on the amount of light available. In color mode, the camera uses the full spectrum of light to produce an image, while in black-and-white mode, it only uses the infrared part of the spectrum. This allows the camera to produce clear images in low-light and nighttime conditions.

ICR (Infrared Cut-Remove Filter): The ICR filter is a physical filter that blocks the infrared part of the spectrum from reaching the camera's sensor. This is done to improve the image quality in color mode by preventing the infrared light from interfering with the other colors.

Color: The camera will display a color image only.

B/W: The camera will display a black and white image only.

Sensitivity: Adjust the sensitivity of the day/night settings between low, medium, and high.

Delay: The number of seconds that the camera will wait before switching between day and night mode.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Focus & Zoom

The focus & zoom menu allows you to adjust the focus and optical zoom of the camera lens. This can be useful for getting a clear image of a specific object or area, or for zooming in on a distant object.

Digital Zoom: Allows the user to zoom in on an image without affecting the optical zoom of the camera lens. This is done by cropping the image and then enlarging the cropped pixels.

Zoom Speed: Use the provided slider to adjust the optical zoom speed of the camera.

Focus Mode: Allows the user to select how the camera will focus. There are three focus modes available:

Semi Auto: The camera will automatically adjust the focus after a zoom operation.

Auto: The camera will automatically adjust the focus based on the scene. This is the default setting.

Manual: You can manually adjust the focus using the slider control in the Focus & Zoom menu.

Near Focus: Allows the user to specify the minimum distance that the camera can focus on. This setting can be useful for getting a clear image of objects that are close to the camera, such as a person's face, barcode, etc. This will be enabled to auto by default however can range from 10cm – 200m+.

Sensitivity: Adjust the sensitivity of the zoom & focus options from low, medium, or high. Please note, “Default” is medium.

PFA (Predictive Focus Algorithm): Allows the camera to automatically adjust the focus during the zooming process. This results in clear and steady video even when zooming in or out. PFA is especially useful in surveillance applications where it is important to be able to quickly zoom in on a specific object or area without losing focus. It is also useful in low-light conditions where traditional autofocus systems may not be able to perform reliably.

Expert Mode: Relates to how the camera handles focus adjustments, particularly in conjunction with zoom. When enabled, it dictates when the camera automatically will adjust its focus.

Lens Initialization: Resets the lens to its default position. This can be useful if the lens has been manually adjusted and is no longer functioning properly, or if the camera has been moved to a new location and the lens needs to be re-calibrated.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Night Vision

The night vision tab allows the user to enable or disable night vision settings.

Fill Light: Allows the user to select different illuminator settings.

IR Mode: Activate the IR LEDs for black and white night vision.

White Light: Activate the white light LEDs for color night vision.

Smart Illumination: Activate the IR LEDs, however, trigger the white light LEDs when an event occurs.

Mode: Allows the user to modify and set illuminator settings.

Auto: Allows the user to automatically set the camera's LEDs to on and off positions based on Day & Night conditions.

ZoomPriority: Allows the user to adjust correction settings for night vision functionality for white light and IR mode.

Illuminator Delay: The amount of time the IR or white light LEDs will illuminate after it has been automatically switched due to ambient light thresholds or active deterrents are triggered.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Defog

The defog tab allows the user to set the image quality to improve if being used in foggy or hazy conditions. This feature will be off by default however can be set to automatically be enabled if the conditions change.

Mode: Use this dropdown menu to select between different defog modes.

Auto: Automatically set to improve image quality in hazy or foggy conditions.

Manual: Will automatically switch between defog modes, however, the user can manually adjust the intensity of the defog mode between high, medium, and low.

Off: Disables defog mode.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Encode

This menu allows the user to change video settings for the camera's video feed including video overlays.

Compression: The camera supports H.264, H.264H, and H.265 compression types.

Encoding Strategy: Choose between a general, smart, or AI codec to improve video compressibility and reduce storage space. Please note, it is recommended to keep this as default (General).

Resolution: Change the mainstream resolution of the camera.

Frame Rate (FPS): Change the mainstream fps (frames per second) of the camera.

Bit Rate Type: The camera supports two-bit rate types: CBR (constant) and VBR (variable). If using a variable bit rate type, the video quality of the camera can be adjusted.

Reference Bit Rate: This is the recommended bit rate value according to the resolution and frame rate.

Bit Rate: This dropdown box allows the user to select a bit rate or create a custom bit rate.

I Frame Interval: This field allows the user to set the P frame amount between two I frames. The value ranges from 30 to 150 seconds. The default value is 60.

Smooth Stream: This slider allows the user to adjust the smoothness and clarity of the stream. The clearer the stream, the less smooth the stream will become.

Watermark: Enable or disable the watermark string.

Watermark String: Enter custom watermark text.

Sub Stream is a lower quality stream that allows the feed to take up less resources and bandwidth when streaming. The Mainstream and the Sub Stream have the same fields. Sub Stream can be enabled by checking the box next to Enable.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Overlay

The overlay menu allows the user to set and configure overlay details associated with the camera. This includes privacy masking, channel titles, font properties, logo overlays, etc. The PTZ control options can be applied in this menu as well if needed when adjusting overlay settings.

Privacy Masking

Privacy masking allows the user to set up to 4 distinct blocks on the live feed to block certain objects or areas on the screen. By default, 4 areas will already be set, use your mouse to adjust the area size and location of the privacy masking blocks. To clear the overlays, click “clear”.

Enable: Enable privacy mask settings and add a color block. Use the provided options to draw a privacy masking block in the detection area.

No.	Name	Type	Color	Shielding Ratio	Draw	Delete
1	Privacy Masking1	Color Block		1.0		

Add: Add additional privacy masking blocks to the feed. Four is the max.

Clear: Clear all overlays from the feed. To delete a specific privacy mask overlay, click on the trash can icon next to the overlay selection in the interface.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Channel Title

The channel title menu allows the user to change the input text and text alignment found on the interface. The camera can support up to 2 channel titles, to add an additional channel title, click the “+” symbol found on the interface and enter the text into the provided field. Use your mouse to adjust the location of the channel title on the interface.

Enable: Enable the channel title overlay

Input Text: Input and edit channel title text. Use the “+” icon to enter additional input text.

Text Alignment: Align the channel title text to the left or right of the editable banner.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Time Title

The time title menu allows the user to enable or disable the time stamp overlay found on the live feed. The day of the week can be displayed as well using the “week display”.

Enable: Enable or disable the time stamp overlay found on the live feed.

Week Display: Display the day of the week on the time stamp overlay.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

OSD Info

The OSD info menu allows the user to show information about the camera's settings and status.

Preset: Allows the user to view and execute PTZ presets. PTZ presets are saved camera positions, zoom levels, and focus settings that can be quickly recalled and used. Use the dropdown menu to select a preset setting.

PTZ Coordinate: Displays the current pan, tilt, and zoom (PTZ) coordinates of the camera. These coordinates can be used to accurately position the camera to a specific point in the scene.

Zoom: Allows the user to view the camera's current zoom level and to adjust the zoom level manually.

Pattern: Allows the user to view and execute PTZ patterns. PTZ patterns are pre-defined sequences of PTZ movements that can be used to automatically move the camera to specific points in the scene.

Temperature: Displays the current temperature of the camera's internal components. This information can be useful for troubleshooting camera problems and for ensuring that the camera is operating within a safe temperature range.

North: Allows the user to view the camera's north direction. This is important for ensuring that the camera's PTZ coordinates are accurate.

Location: Allows the user to set a custom location for the camera. Use the **Input Text** option to enter the location. Use the Text Alignment options to align the text left or right.

Input Text: Input and edit OSD text. Use the "+" icon to enter additional input text.

Text Alignment: Align the OSD text to the left or right of the editable banner.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Font Properties

allows you to change the font, size, color, and transparency of the text that is displayed on the camera's on-screen display.

Font Size: Select the size of the font. General will be default however the size can be adjusted to 16*16, 32*32, 48*48, or 64*64 pixels.

Color: Change the color of the font.

Line Spacing: Adjust the distance between lines of the text.

Minimum Distance to Video Boundary:

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Logo Overlay

The logo overlay menu allows the user to enable or disable the Amcrest logo found on the interface.

Enable: Enable or disable the Amcrest logo overlay.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Custom Title

The Custom Title menu allows the user to enter and set a custom text overlay in live feed. The camera can support up to 2 additional custom titles, to add an additional custom title, click the “+” symbol found on the interface and enter the text into the provided field. Use your mouse to adjust the location of the custom title on the interface.

Enable: Enable the custom title overlay.

Input Text: Input and edit the custom title text. Use the “+” icon to enter additional input text.

Text Alignment: Align the custom title text to the left or right of the editable banner.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Exception Overlay

This overlay is used to display exception information on the video stream. This information can include things like motion detection alerts, tampering alerts, etc.

Enable: Enable or disable the exception overlay.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Target Statistics

This overlay is used to provide an overlay on the live view menu to display the amount of selected video metadata objects detected by the camera. This includes motor vehicles, non-motor vehicles, and people detected.

Enable: Enable or disable the video metadata overlay.

Statistics Type: Enable which objects will be counted (motor vehicle, non-motor vehicle, people).

Text Alignment: Align the custom title text to the left or right of the editable banner.

Preset List: Displays a list of all applicable presets related to this overlay.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Face Statistics

This overlay is used to display the number of faces detected by the camera. It is recommended to enable this option if using face detection.

Enable: Enable or disable the face statistics overlay.

Reset: Reset the number of faces detected in the overlay.

Text Alignment: Align the custom title text to the left or right of the editable banner.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Audio

The Audio menu allows the user to modify audio settings for the camera. Audio can be modified on both the mainstream and sub stream if needed. There are no built-in audio devices for this camera. All audio will be controlled externally using the frayed audio in and out wires on the dongle connection.

Audio Input Type: Default will be Line In only.

Enable: Enable or disable audio on the main or sub stream.

Audio Encoding: This dropdown allows the user to modify audio sampling options. The default will be set to AAC however, other options can be selected as well if needed.

Sampling Rate: This dropdown box allows the user to select a sampling frequency for the audio. Audio sampling allows for higher or lower sound quality.

Noise Filter: This option allows the user to enable or disable the noise filter. A noise filter helps provide a cleaner audio quality.

NR Level: Use this slider to adjust the amount of noise reduction in the audio.

Microphone Volume: Use this slider to adjust the audio of an external microphone.

Speaker Volume: Use this slider to adjust the audio out function of the speakers.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Alarm

The alarm menu allows the user to set motion detection, audio detection, alarm, and abnormality settings. Motion detection will be enabled by default in this menu.

Motion Detection

This tab allows the user to enable or disable motion detection settings. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable the feature.
Schedule	Allows the user to set a schedule in which the rule will be triggered. Motion detection will be set to trigger 24/7. However, to set a motion detection schedule, click Add Schedule. Use your mouse to set a schedule, per hour, per day if needed click Apply to set the setting.
Anti-dither	The time in which the camera will not capture any movement. After this end, the feature would inform the camera to begin recording the footage again.
	Allows the user to set regions in which motion detection will not be detected. The camera can set up to 4 different, color-coded regions. Use your mouse to adjust the area. This option also allows you to control the sensitivity and threshold of the detection area. Sensitivity is the amount of change required to increase the motion detected by a percentage. The lower the sensitivity, the more movement is required to trigger an alarm. Threshold is the level that the motion detection needs to reach to trigger an alarm. The lower the threshold, the more likely that motion will trigger an alarm.

Region	To designate a zone, click and drag the mouse over the area desired. When a colored box is displayed over the live feed, that area is now enabled for motion detection. After the motion detection zone is set, click the enter button to exit the motion detection screen. Remember to click the save button on the motion detection settings screen, otherwise the motion detection zones will not go into effect. Clicking the cancel button to leave the motion detection zone and will not save the zone setup.
PTZ	Allow the camera to PTZ based on a set preset (if needed).
Alarm-out Port	Enable or disable motion detection to trigger an external alarm (if applicable).
Post-alarm	The amount of time the event will end after it is triggered.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post-Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
PTZ	Motion detection PTZ linkage is a feature that allows a PTZ camera to be automatically controlled by a fixed camera when motion is detected in the fixed camera's field of view. This can be used to track moving objects, zoom in on suspicious activity, or simply to pan and tilt the PTZ camera to get a better view of the area.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Warning Light	Allows the user to enable the camera to trigger the deterrent LEDs to turn on once a rule has been triggered. Mode: Default flicker mode for active red/blue deterrent lights. Flicker Frequency: The speed of the deterrent LED flash (low, middle, or high) Stay Time: How long the flash will last. The default is 10 seconds, however, can range between 5 and 30.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification. Use the 1,3, and 5 snapshot options to choose whether 1, 3, or 5 images of the alert will be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Video Tampering

This option allows the camera to trigger an event if the camera's lens is covered or if the video output becomes insufficient. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable the feature.
Schedule	Allows the user to set a schedule in which the feature will be triggered. Tampering will be set to trigger 24/7 however, to set a motion detection schedule, click Add Schedule. Use your mouse to set a schedule, per hour, per day if needed click Apply to set the setting.
Alarm-out Port	Enable or disable tampering to trigger an external alarm (if applicable).

Post-alarm	The amount of time the event will end after it is triggered.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post-Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
PTZ	PTZ linkage is a feature that allows a PTZ camera to be automatically controlled by a fixed camera when motion is detected in the fixed camera's field of view. This can be used to track moving objects, zoom in on suspicious activity, or simply to pan and tilt the PTZ camera to get a better view of the area.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Smart Motion Detection

Smart Motion Detection uses an advanced algorithm to differentiate between human and motor vehicle shapes within a scene and send alarms only when a person or vehicle is detected. This helps to reduce false alerts from objects such as leaves blowing on a tree, animals, or other unwanted objects.

Motion Detection

Video Tampering

Smart Motion Detection

Enable

☒

Effective Object

☒ Human

☒ Motor Vehicle

Sensitivity

Medium

▼

Apply

Refresh

Default

This option works alongside basic motion detection, so any options enabled in the motion detection menu will apply to smart motion detection as well. To use this option, click the Enable option, select an effective target filter (human or vehicle), set the sensitivity (medium is recommended), then click **Apply**.

Audio Detection

This option allows the user to set event triggers based on audio thresholds such as a vague voice, tone changes, or any other sound intensity is detected. Please note, this will only work if an external microphone is attached to the camera and audio settings for the microphone are enabled.

Parameter	Description
Audio Exception	Enable or disable the feature.

Intensity Change	Allows the alarm to trigger if the sound intensity is higher than the sensitivity and threshold settings. Intensity levels will be displayed in the graph below the sensitivity and threshold options.
Sensitivity	The amount of change required to increase the motion detected by a percentage. The lower the sensitivity, the more movement is required to trigger an alarm.
Threshold	The level that motion detection needs to reach to trigger an alarm. The lower the threshold, the more likely that motion will trigger an alarm.
Schedule	Allows the user to set a schedule in which the feature will be triggered. Audio detection will be set to trigger 24/7 however, to set a motion detection schedule, click Add Schedule. Use your mouse to set a schedule, per hour, per day if needed click Apply to set the setting.
Anti-dither	The time in which the camera will not capture any movement. After this end, the feature would inform the camera to begin recording the footage again.
Alarm-out Port	Enable or disable audio detection to trigger an external alarm (if applicable).
Post-alarm	The amount of time the event will end after it is triggered.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post-Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Send Email	Enables the camera to send an email notification when an event is triggered
Snapshot	Allows a snapshot of the event to be sent in an email notification.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Alarm

The alarm menu allows the user to set alarm configurations if an external alarm is connected to the device. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable the feature.
Alarm-in Port	Allows the alarm to trigger if the sound intensity is higher than the sensitivity and threshold settings. Intensity levels will be displayed in the graph below the sensitivity and threshold options.
Schedule	Allows the user to set a schedule in which the feature will be triggered. Audio detection will be set to trigger 24/7 however, to set a motion detection schedule, click Add Schedule. Use your mouse to set a schedule, per hour, per day if needed click Apply to set the setting.
Anti-dither	The time in which the camera will not capture any movement. After this end, the feature would inform the camera to begin recording the footage again.
Sensor Type	NO (Normally Open) – This will allow the alarm to stay active until triggered. NC (Normally Closed) – This will allow the alarm to stay closed until triggered.
Alarm-out Port	Enable or disable audio detection to trigger an external alarm.
Post-alarm	The amount of time the event will end after it is triggered.

Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post-Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.
Siren	Allows the user to enable the camera to trigger an audible siren once motion is detected. Use the Play Count and File options to select how many times the siren will sound as well as the sound file used.
Snapshot	A snapshot notification is sent via email if email notifications are enabled.
Post-alarm	The amount of time the event will end after it is triggered.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Abnormality

This menu allows the user to adjust and set error configurations which will trigger a notification if an abnormality is detected.

SD Card Exception

This option allows the user to choose which errors will occur if the camera detects an abnormality with an inserted microSD card.

Parameter	Description
No SD card	Enable this option to trigger an event if no microSD card is inserted or detected.
Low SD card space	Enable this option to trigger an event if the space on the microSD card is low.
SD card error	Enable this

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Network Exception

This option allows the user to choose which errors will occur if the camera detects or determines a network or connection abnormality such as if the camera is offline or is experiencing an IP conflict.

Offline

This abnormality will be triggered if the camera is detected offline in the network.

Parameter	Description
Alarm-out Port	Enable or disable an alarm to trigger an external alarm (if applicable).
Alarm Channel	Choose alarm channel 1 or alarm channel 2 to be triggered.
Post-alarm	The amount of time the event will end after it is triggered.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post-Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.

IP Conflict


This abnormality will be triggered if the camera detects an IP conflict between the network and the camera if set to DHCP.

Parameter	Description
Alarm-out Port	Enable or disable an alarm to trigger an external alarm (if applicable).
Alarm Channel	Choose alarm channel 1 or alarm channel 2 to be triggered.
Post-alarm	The amount of time the event will end after it is triggered.
Record	Allow the user to store the recording locally and playback if a microSD card is inserted.
Post-Record	The delay in which events will be recorded. The default is 10 seconds however this can be modified between 10~300 seconds.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Auto Upload

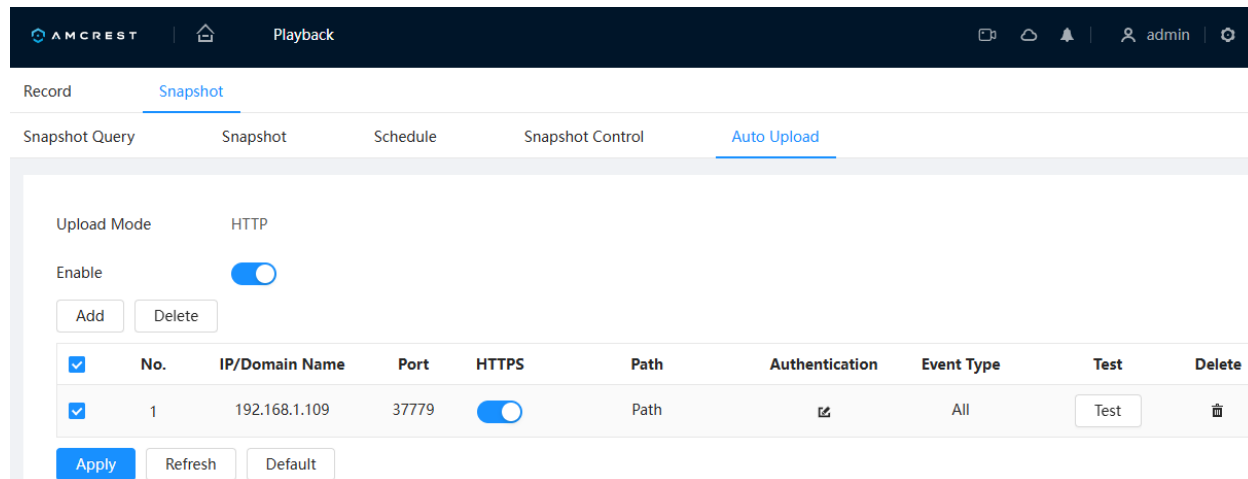This option allows you to automatically upload images to a server. The upload mode is HTTP by default. To use this feature, click the Enable option and **Add** to configure the IP/domain name, port, HTTPS, path, authentication and event type. This feature supports adding up to two servers. If **HTTPS** is enabled, you must download the CA certificate and upload it to the server. To download the CA cert, navigate to **Network>>HTTPS>>Certificate Management**, download the device certificate and upload it to the server.



No.	IP/Domain Name	Port	HTTPS	Path	Authentication	Event Type	Test	Delete
1	192.168.1.109	37779	☒	Path		All	Test	

Click **Apply**, then the **Test** button to verify the server is running successfully.

Maintain

The maintain menu allows the user to set user management options, device operation, and maintenance options.

General

The **Basic** menu allows you to view basic camera information such as the device name (serial number) as well as set different video standards such as NTSC and PAL.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Date & Time

The date & time tab allows you to set and view date and time information as well as provides an option to sync the device to your current computer's date & time. Below is a description of the features provided in this menu.

Parameter	Description
Time	Allows the user to switch between setting a custom time or connecting to an NTP server.
System Time	Allows the user to manually set the date and time using a provided calendar.
Sync with PC	Allows the user to sync the device to the local PC's current date & time
Time Format	Allows the user to choose which format the date and time will be displayed. Please note, time can be displayed in 24-hour or 12-hour format.
Time Zone	Allows the user to choose a specific time zone which the camera is located.
DST	Allows the user to enable Daylight Savings Time options.
Enable	Enable DST settings.
Type	Select between date and week DST settings.
Start Time	The date in which DST will start (March 2 nd)
End Time	The date in which DST will end (November 1 st)

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

System Info

The information menu displays the serial number, current ONVIF, system, web, and algorithm version, that is currently being applied to the camera. Use the Online User tab to see who is currently accessing the camera.

Version

This menu provides an oversight of the current ONVIF, system (firmware), web, and algorithm version that is currently applied to the camera.

Online User

This menu will display a list of all users that are currently accessing or actively using the camera. To refresh the interface, click the **Refresh** button.

Status

This menu allows the user to view the total working time and update times of the camera.

Account

The account menu allows users to add or modify shared users, set user groups, as well as add an ONVIF user.

User

The user tab allows the user to add or modify a shared user to the camera. This will allow another user the ability to access the camera based on specific limitations or permissions provided by the admin account. Below is a description of the features provided in this menu.

Parameter	Description
Add	Click the add button to add a shared user.
Delete	Select a user from the interface and click Delete to remove the user.
Anonymous Login	Allows admin to login using the IP address instead of a username and password. Please note, anonymous users only have preview authorities. If signed in as an anonymous user, click Logout to login with other usernames.
Interface	Displays the number of users, the username, group, password strength, remarks, restricted login details, and operation (edit/delete). Editing user details allows you to update the current password for a shared user as well as set account permissions related to the system, live view, or search options available.
Password Reset	Enable or disable the ability to perform a password reset.
Password Expires in	The number of days the password will expire for a selected user.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Group

The group tab allows the user to set or modify group details. Users can be assigned to specific groups within the interface if multiple users are applied. Please note, there will be two groups assigned by default, an admin group and a user group. Below is a description of the features provided in this menu.

Parameter	Description
Add	Click the add button to add a new user group. Enter a name for the group as well as any remarks pertaining to the group. Select which permissions will apply to this new group, this can be system, live, or search options. Click apply to set these permissions to the specific user group.
Delete	Select the group from the interface and click delete to remove it from the camera.
Operation	Used to edit or delete a user group. Click the edit button to edit the group's name, remarks, or system permissions. Click OK when finished.
Interface	Displays the group name, remarks pertaining to the group, as well as edit and delete options. Use the edit button to update the group name, remarks, or system permissions. Click OK when finished.

ONVIF User

The ONVIF user tab allows the user to set or modify any ONVIF user details related to the camera. This allows you to add, delete, or change the password of an ONVIF user. Below is a description of the features provided in this menu.

Parameter	Description
	Click the add button to add a new user group.

Add	Add Username user Password •••••••• Confirm Password •••••••• Group admin Apply Cancel
	Enter a username and password for the ONVIF user, then use the group dropdown
	Delete
	Operation
Interface	Displays the ONVIF user's name, which group they are in, password strength, as well as edit and delete options. Click the edit option next to the ONVIF user to change the username or update the password for an existing ONVIF user.

Manager

The manager menu allows the user to set maintenance, import/export, and default settings to the camera. These options are available in separate tabs within the system.

Maintenance

The camera provides a few maintenance options such as the ability to automatically restart the camera as well as the ability to automatically delete old files if a microSD card is inserted. Below is a description of the features provided in this menu.

Restart System

Set the camera to automatically restart at a scheduled time.

Parameter	Description
Auto Restart	Enable or disable the camera from automatically restarting
Restart Time	Use the dropdown menu to select a day in which the camera will restart, then enter a time.

Delete Old Files

Set the camera to automatically delete old files based on the set number of days it has been stored on a microSD card. Please note, once files are deleted, they cannot be restored.

Parameter	Description
Auto Delete	Enable or disable the camera to delete old files.
Delete File	Once enabled, enter the number of days in which the camera keeps these files before they are deleted.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Import/Export

This menu allows you to export or import a current configuration file for the camera. This option is useful if you need to perform a factory reset and would like to keep your current configuration. Below is a description of the features provided in this menu.

Parameter	Description
Export Configuration File	Click this option to download a configuration backup file to your computer.
File	Allows the user to select and import a configuration file to the camera. To import a config file, click Select File and load the config file to the interface. Click Import File to apply the configuration to the camera.

Default Settings

This menu allows you to reset your camera to its original default settings or factory reset the camera completed. Please note, performing a factory reset will revert all configurations to factory settings, this includes the admin's username and password. The default password for the camera is **admin**. Below is a description of the features provided in this menu.

Parameter	Description
Default	Click the Default option to restore all settings back to default.
Factory Defaults	Click the Factory Defaults option to restore all parameters, including admin username and password to factory settings.

Security

This menu allows the user to perform a security scan as well as the current security status of the camera. If security is compromised, click the Details icon to provide optimization options. Below is a description of the features provided in this menu.

Parameter	Description
Security Status	Click the Rescan icon to perform a security scan of the camera. This will scan all security parameters and provide the current security status of the device.
Login Authentication	Detect whether the current login authentication mode conforms to the recommendation.
User Status	Detect whether a user password is as complicated as required.
Configuration Security	Detect whether the current Email, FTP, SFTP, HTTPS, etc. configuration conforms to the recommendation.
Audio/Video Transmission Encryption	Encrypt real-time live view and playback video streams during network transmission.
Trusted Protection	Based on trusted protection technology, ensure that the device runs in a trusted safe environment. • Trusted Update: Verify the upgrade firmware integrity and validity based on digital signature technology.

	• Trusted Boot: During start, make signature verification of firmware data, and ensure operating code and data is valid and effective. • Trusted Execute: Monitor real-time operating status, recognize, and reject execution of malicious programs, and protect the device from virus.
Security Warning	Immediately after detecting security abnormal behaviors, the device sends a security warning to remind the user timely.
Attack Defense	Monitor cyber-attacks in real-time and take effective defending measures to protect device network security.
Firmware Encryption	The officially released firmware is encrypted. After upgrade, it is encrypted for storage in system partition.
802.1x	Based on 802.1x technology and build network access control system to effectively block unauthorized hosts from accessing the protected private network. Please note, this should be disabled by default and may not be available in most devices.
Secure Shell	Based on mutual authentication by device administrator and third-party service, provide multi-factor authentication to prevent background terminal from malicious operation.
Configuration Files Security	Encrypt the device configuration file with a safe key and export it in an encrypted way. • Encrypted Storage of Configuration: The device makes encrypted storage of background configuration data to protect data security. • Encrypted Exporting of Configuration: The device can export configuration backup in an encrypted way by default.
CA Certificate	Centralized management of CA certificate helps you to use the certificate more normatively.
Log Security	Support recording logs by levels to ensure traceability of system operations and events.
Session Security	Monitor session interaction process in real-time, and recognize validity, authenticity, and security of session credentials. • Auto Logout after Timeout: If the client has no operation for a long time, the device will log out of this session automatically to avoid any security threats. • Brute-force Access Prevention: When the device detects continuous attempted access with wrong session credentials, the follow-up access of this host will be blocked to avoid session leakage. • Anti-hijacking: The device recognizes the binding between session credential and client host, rejects unmatched session requests and avoids session leakage.
Physical Backup	Based on physical backup, in case of physical damage, the device switches to backup device, and thus effectively improves operation continuity and robustness. System Partition Backup: If device firmware upgrading failed accidentally, when it is restarted, the device will automatically restore previous firmware data from backup partition, so that the device restores normal operation.

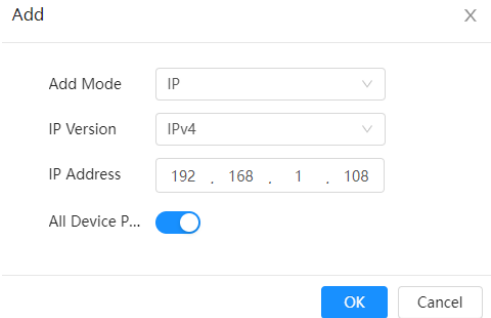
Attack Defense

This menu allows you to set IP filters, account lockout details, as well as anti-DoS attack options which help to provide an added layer of security to your device.

IP Filter

The IP Filter menu allows users to whitelist and blacklist specific IP addresses. This feature helps make the camera more secure by limiting remote access to only approved users. Please note, that only source hosts whose IP/MAC are provided in the interface will be allowed to access the corresponding ports of the camera.

Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable IP filtering
Mode	Select between an allowlist (whitelist) or blacklist (blacklist)
Add	Add an IP address to the interface. Enter the mode, IP version, and IP address and click OK. 
Delete	Select an IP from the interface and click delete to remove it the interface.
Interface	Displays the host IP/MAC, port number, and operation. Click the edit icon to edit a selected IP. Click the trashcan icon to remove the IP from the interface.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Account Lockout

The account lockout menu allows the user to set how many attempts can be used before the user's account is locked as well as the duration of how long it will be locked for, please note, default will be 5 attempts, with a duration of 5 minutes. Click **Apply** to save the account lockout settings.

ONVIF users can also set their account login attempts separately as well. The default for an ONVIF user will be 30 times with a duration of 5 minutes. Click **Apply** to save the account lockout settings.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Anti-DoS Attack

This menu provides additional tools such as SYN Flood Attack Defense and ICMP Flood Attack Defense to defend the device against DoS attacks. Below is a description of the features provided in this menu.

Parameter	Description
SYN Flood Attack Defense	Use the Enable/Disable toggle switch to enable or disable this feature.

	Note: An attacker might send out repeated SYN messages to the device, leaving many half-open TCP connections on the device, which will make the device crash. When hit by an SYN flood attack, the device will defend itself by discarding the first message.
ICMP Flood Attack Defense	Use the Enable/Disable toggle switch to enable or disable this feature. Note: An attacker might send out an abnormally large number of ICMP packets to the device, which will use up all computing resources and thus make the device crash. When hit by an ICMP flood attack, the device will defend itself by using the ICMP message filtering tactic.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

CA Certificate

This menu allows the user to create or upload an unauthenticated certificate so you can log into the web browser through HTTPS with your PC. Please note that a device certificate is proof of the device's legal status. For example, when the user is visiting the device using HTTPS, the device certificate shall be verified.

There will be a device certificate installed by default, if you wish to upload your own HTTPS cert, click Install Device Certificate, and follow the provided prompts, please note, that not all third-party HTTPS certs will be applicable for this process. To use the default HTTPS cert, please refer to the information provided below.

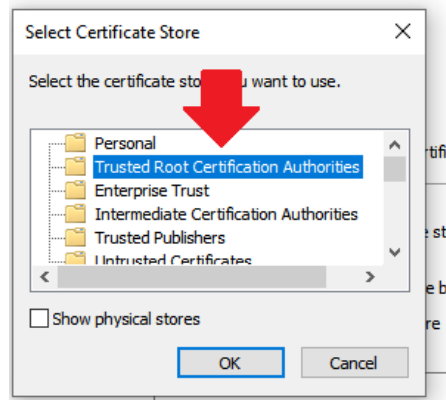
Step 1: Click **Download** to download the default HTTPS cert and save it to your computer.

Step 2: Left click on the cert and click **Install Certificate**.

Step 3: Click **Local Machine** and click **Next**.

Step 4: Click the **Place all certificates in the following store** option and select **Browse**.

Step 5: Select the **Trusted Root Certification Authorities** folder and click **OK**. Click Next.



Step 6: Click **Finish**.

Step 7: In the web user interface of the camera, go to **Network** and access the **HTTPS** menu and **Enable** the function. Click **Apply**. The browser will automatically reset, and you will now be accessing the IP using HTTPS.

Trusted CA Certificates

A trusted CA certificate is used to verify the legal status of a host. For example, a switch CA certificate shall be installed for 802.1x authentication. If you would like to use these sources, click download and follow the same installation process as previously provided for device certifications.

A/V Encryption

The device supports audio and video encryption. This option will be disabled by default however is recommended as the stream can be transmitted by using a private protocol. An RTSP stream can also be encrypted using a TLS tunnel before transmission. Please note, before enabling these features that the device or software you are using to view the stream supports video decryption.

Encrypted Transmission

Private Protocol

Enable ☒

Stream transmission is encrypted by using private protocol.

*Please make sure that the corresponding device or software supports video decryption.

Encryption Type: AES256-OFB

Update Period of Secret Key: 12 hr (0-720)

RTSP over TLS

Enable ☐

RTSP stream is encrypted by using TLS tunnel before transmission.

*Please make sure that the corresponding device or software supports video decryption.

*Select a device certificate

No.	Custom Name	Certificate Serial Number	Validity Period	User	Issued by	Used by
1		39633865636433363562623431363730303031323432	2052-11-25 17:14:02	7K06723YAG0DFC1	General Device IPC CA	HTTPS, RTSP over TLS

Apply Refresh Default

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Security Warning

The security warning menu allows the user to detect device security statuses in real-time. This helps keep the user informed of any security exception events immediately to avoid any later security risks that may occur. Please note, if email alerts are set up, email notification of the event may be sent using the Event Linkage option and selecting Send Email. Alerts can also be sent using an external alarm output port.

Parameter	Description						
Enable	Enable or disable the security feature. Once enabled, choose the specific event monitoring options you would like to apply. Enable ☒ Event Monitoring <table> <tr> <td>☒ Invalid executable programs attempting to run</td><td>☒ Session ID bruteforcing</td></tr> <tr> <td>☒ Web directory bruteforcing</td><td>☒ Login not in the specified time range.</td></tr> <tr> <td>☒ Number of session connections exceeds limit</td><td>☒ Brute force attack of the account.</td></tr> </table> Note: Security warning can detect device security status in real time, and keep you informed of the security exception events immediately, so that you can deal with them timely and avoid security risks.	☒ Invalid executable programs attempting to run	☒ Session ID bruteforcing	☒ Web directory bruteforcing	☒ Login not in the specified time range.	☒ Number of session connections exceeds limit	☒ Brute force attack of the account.
☒ Invalid executable programs attempting to run	☒ Session ID bruteforcing						
☒ Web directory bruteforcing	☒ Login not in the specified time range.						
☒ Number of session connections exceeds limit	☒ Brute force attack of the account.						
Event Linkage	Use this option to enable an email to be sent if the feature is triggered.						
Alarm-out Port	Enable or disable an alarm to trigger an external alarm (if applicable).						

Alarm Channel	Choose alarm channel 1 or alarm channel 2 to be triggered.
Post-alarm	The amount of time the event will be end after it is triggered.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Security Authentication

Controls the method used to verify user credentials when accessing the camera's interface or features. It's a crucial security setting that determines how your username and password are handled during the authentication process. The options provided in this menu should not be modified unless authorized by a security professional.

Digest Algorithm for Authentication

Digest Algorithm for User Authentication

☒ MD5
☐ SHA256

Digest Algorithm for ONVIF User Authentication

☒ MD5
☐ SHA256

Apply

Refresh

Default

MD5 and SHA256 are both cryptographic hash functions used for authentication, SHA256 is considered much more secure. However, SHA256 requires more computational resources than MD5 and could cause issues if enabled.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Update

The update menu allows you to manually upgrade firmware directly into the interface. The latest firmware for your device can be found at amcrest.com/firmware.

File Update

Path

Browse

Update

To update firmware, download the .bin file from the amcrest firmware downloads page. Click Browse and locate the .bin file. Click Update and allow the firmware to upgrade. The browser will restart after the upgrade is complete.

Settings

To access additional settings, click on the settings  icon. In this menu you can access the record path, network, storage, and log menus.

Path

The path menu allows the user to set a storage path for both recording and snapshot events. Below is a description of the features provided in this menu. **Requires a plugin to function.**

Parameter	Description
Live Record	Click Browser to set a storage path for manual live view recordings.
Playback Download	Click Browse to set a storage path for recordings downloaded from playback.
Video Clip	Click Browse to set a storage path for clipped videos.
Live Snapshot	Click Browse to set a storage path for manual snapshots from live view.
Playback Snapshot	Click Browse to set a storage path for snapshots stored in the playback menu.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Network

The network menu allows the user to modify and configure network settings associated with the camera. These settings include TCP/IP settings, P2P, DDNS, Email, HTTPS, etc.

TCP/IP

The TCP/IP menu allows the user to set a static IP, view P2P status, as well as configure RTMP if needed. Below is a description of the features provided in this menu.

Parameter	Description
Host Name	The default name of the device is IPC, however, can be modified.
ARP/Ping	Allows the IP address of the camera to be configured using ARP/ping commands.
NIC	Network Interface Card: Wired (Default) – Ethernet connection
Mode	Static vs DHCP: These radio buttons allow the user to choose between a static IP address, and a dynamic IP address. DHCP stands for Dynamic Host Configuration Protocol, and this enables the camera to automatically obtain an IP address from another network device such as a server or more commonly, a router. When the DHCP function is enabled, the user cannot modify the IP address, Subnet Mask, or Default Gateway, as these values are obtained from the DHCP function. To view the current IP address, DHCP needs to be disabled
Mac Address	Displays the MAC address of the device.
IP Version	Switch between IPv4 and IPv6 IP versions.
IP Address	The current IP address of the camera.
Sub Mask	Displays the current sub mask of the gateway.
Default Gateway	Displays the current address format of the current gateway.

Preferred DNS	IP address of the preferred DNS.
Alternate DNS	IP address of the alternate DNS.
MTU	Refers to the size of the largest data packet that can be transmitted over the network. Note: If IPv6 is enabled, the range will be 1280 - 1500

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

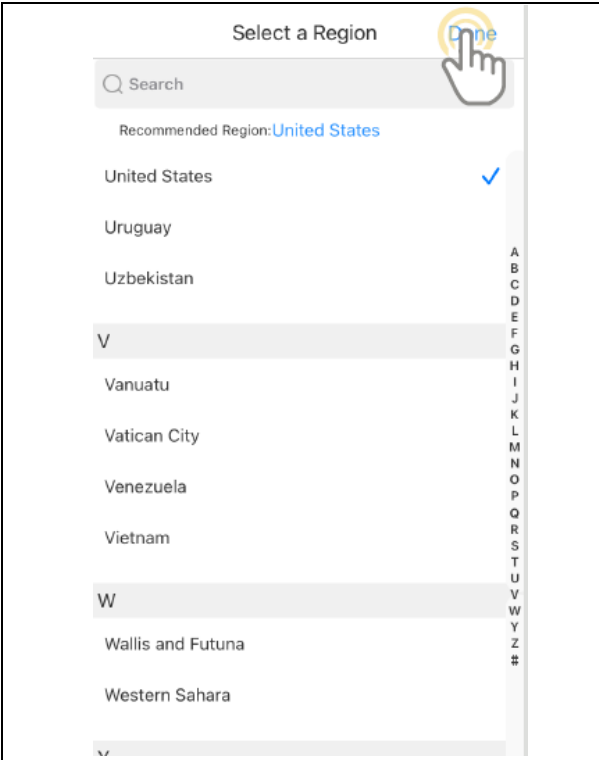
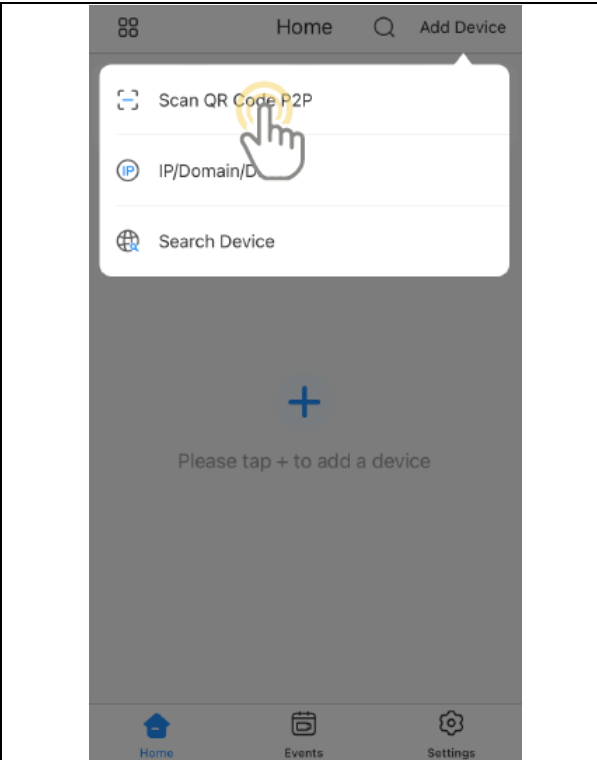
P2P





This feature will be enabled by default, use the provided QR code to add your camera to the Amcrest View Pro, Amcrest View Pro 2 app, Amcrest Cloud, etc. If the QR code is unable to be used, the camera's serial number can be used to connect the device using P2P. Please note, this option will be enabled by default. After enabling the function and connecting to the Internet, we will collect device information such as IP address, MAC address, name, and serial number. The collected information is only used for remote access to the device. If you do not agree to enable the function, please cancel the selection of the check box.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Amcrest View Pro 2

It is recommended to use the latest Amcrest mobile app for your device. Currently, Amcrest view pro 2 is available for both iOS and Android. Please make sure your camera is initialized and on the same network as your phone.

	
Select a Region. Click Done.	Tap Add Device and select Scan QR Code P2P.

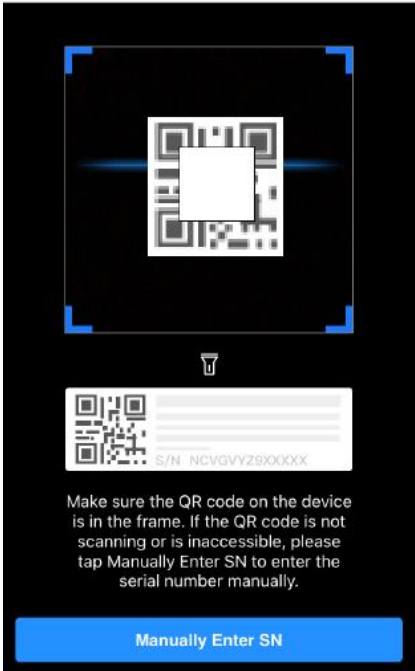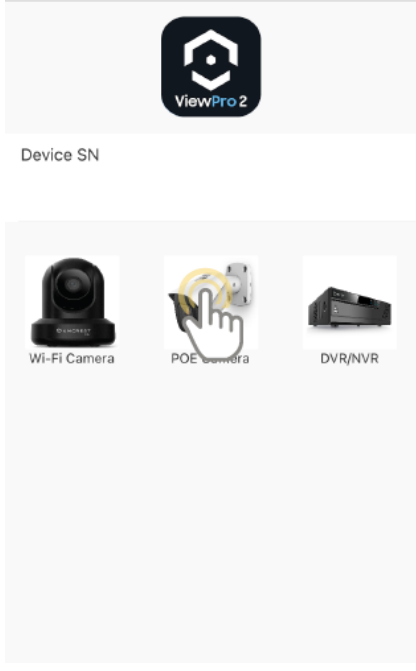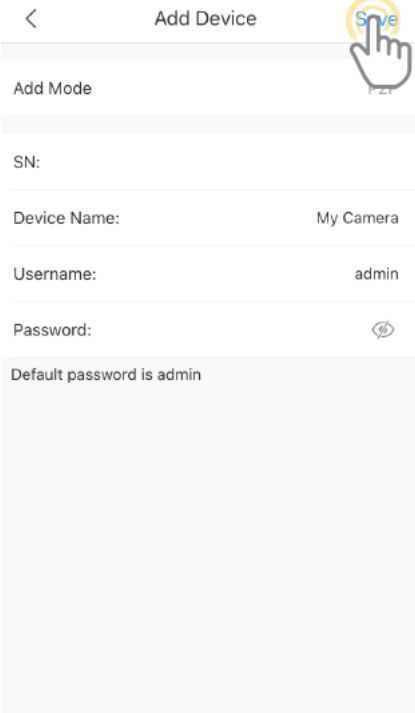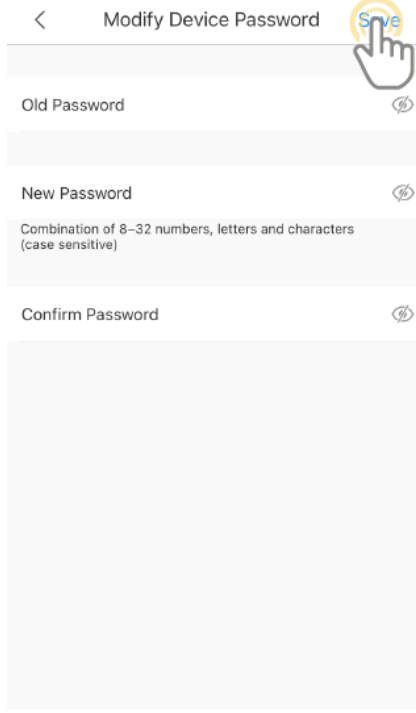	
Scan the QR code on the camera or manually enter the device's serial number into the Enter camera S/N (serial number) field.	Tap POE Camera.
	
Enter the name for the device in the Device Name field. Enter the default password for the camera in the Password field. The default password will be admin. Tap Save.	Enter the default password into the Old Password field, enter a new password in the New Password field and confirm. Tap Save to view the device.

Connection

The connection menu allows users to configure port connections associated with the camera. Below is a description of the features provided in this menu.

Parameter	Description
Max Connection	Allows the user to specify the maximum number of users that can be connected to the camera at the same time. The maximum number of users the camera can support at one time is 20.
TCP Port	This field designates the Transmission Control Protocol (TCP) port number. The default value is 37777.
UDP Port	This field designates the User Datagram Protocol (UDP) port number. The default value is 37778.
HTTP Port	This field designates the Hypertext Transfer Protocol (HTTP) port number. The default value is 80.
RTSP Port	This field designates the Real Time Streaming Protocol (RTSP) port number. The default value is 554.
HTTPS Port	This field designates the Hypertext Transfer Protocol Secure (HTTPS) port number. The default value is 443.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

RTMP

The RTMP menu allows the user to stream live video to platforms such as YouTube which support RTMP streaming. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable RTMP streaming
Stream Type	Choose to stream the mainstream, sub stream1, and sub stream2
Address Type	Choose between a non-custom or custom RTMP address.
Encryption	Enable or disable RTMP stream encryption.
IP Address	Enter a RTMP IP address (if applicable).
Port	RTMP port number (default port number is 1935).
Custom address	Enter a custom address if using a custom address type. For example, if streaming to YouTube a custom address would be, "Stream URL/Stream key".

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

DDNS

DDNS stands for Dynamic Domain Name Server. This technology is used to automatically update name servers in real time to help the camera maintain a persistent address despite changes in location or configuration. What this means is that even when the camera is restarted, moved, or reconfigured, it can keep the same IP address, thus

allowing remote users uninterrupted access to the camera, rather than having to request a new IP address to use for remote access anytime a change is made.

To use this feature, users will need to set up an account with a DDNS service. The camera supports a variety of DDNS services such as AMCRESTDDNS, NO-IP DDNS, and DynDNS DDNS. Based on which service is selected, different options may show on this screen. For the purposes of this guide, AmcrestDDNS will be used.

AmcrestDDNS is a free DDNS service provided by Amcrest, and it must be renewed every year.

Parameter	Description
Type	Use the dropdown menu to select a DDNS protocol. (NO-IP DDNS, AmcrestDDNS, DynDNS DDNS).
Server Address	The DDNS server's IP address format.
Domain Name	Enter a domain name for the DDNS address. Click Test to make sure it is available
Username	Enter the username of the DDNS server.
Password	Enter the password of the DDNS server.
Interval	The update cycle of the connection between the device and the DDNS server.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Email

This menu allows the user to configure email settings to allow email notifications to be sent once a rule or feature that supports email alerts is triggered. Below is a description of the features provided in this menu.

Parameter	Description
Email Provider	Select an Email provider (Gmail will be the default provider).
Enable	Enable or disable email notifications
SMTP Server	The SMTP server protocol (smtp.gmail.com will be default).
Encryption Type	Choose between TLS or SSL encryption types.
Port	The port number of the encryption type used (TLS (587), SSL (465)).
Anonymous	Enable or disable anonymous login.
Username	The email address that is being used to send email notifications.
Password	The password or generated app password. Please note, if using Gmail a generated password will be needed to allow email alerts to come through to your account. Please ensure 2 factor authentication is enabled on your email account and enter a generated password.
Sender	The email address of the sender should be the same as the email address used in the username field.
Subject	The subject line of the email notification. Click on the "+" icon to choose whether this will display the device name, IP address, or event type. Click the Attachment icon to allow snapshots.
Receiver	The email address that will be used to receive the email notifications.
Health Mail	Allows the camera to send a test email to check the connectivity of the device.
Sending Interval	The amount of time in which a health email will be sent. The default is 60 minutes, however, can be modified from 30 – 1440 minutes.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

UPnP

UPnP stands for Universal Plug and Play, is a protocol that establishes mapping relations between a local area and wide area networks. This function enables the user to access a local area device through a wide area IP address. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable UPnP.
Enable Device Discovery	Enable or disable the ability to automatically discover the device on the network.
Router Status	Displays the current status of the mapping process.
Mode	Use the dropdown menu to select between a custom or default mapping mode.
Interface	Displays the HTTP, TCP, UDP, RTSP, HTTPS internal and external port status. Use the enable/disable toggle switch to enable or disable a specific protocol. Use the modify icon to edit the external port of a selected protocol.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Basic Services

This menu allows the user to enable or disable IP hosts (devices with IP addresses) that are allowed to access the device. The options available in this menu are used to enhance network and data security. Please note, that only trusted site hosts will be allowed to access or log into the device's web interface.

Parameter	Description
Multicast/Broadcast Search	Enable or disable this function if multiple users are viewing the device simultaneously through the network using a multicast/broadcast protocol.
CGI, ONVIF, or Genetec	Enable or disable these functions to provide access to these protocols.
Mobile Push Notifications	Enable or disable push notifications from the device to occur.
Private Protocol	Enable or disable private protocol authentication.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

HTTPS

This menu allows the user to create or upload an authenticated certificate to allow the user to log into the device through a secure HTTPS IP address. For more information on how to set up HTTPS please refer to the Device Certificate section of this document. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable HTTPS service. Please note that HTTPS is a service entry based on Transport Layer Security (TLS). HTTPS provides web service, ONVIF access service, and RTSP access service.

Auto Redirect to HTTPS	After the page is refreshed the browser will auto direct to HTTPS.
Interface	Displays all current certificates associated with this device. Please note that it is recommended to use the default HTTPS cert provided in the device.
Certificate Management	Provides quick access to the Device Certificate menu. This allows you to edit and manage all certs related to HTTPS on this device.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**. Click **Download Root Certificate** to store the root certificate on your computer. For more information how to set your camera to HTTPS, please visit amcrest.com/support

PTZ

The PTZ menu allows the user to access PTZ presets, set tour groups, scans, patterns, etc. Please note, PTZ presets are used to set AI smart plans and rules if needed.

Preset

The preset menu allows the user to set PTZ presets for AI rules and smart plans.

Parameter	Description
Add Preset	Click to add a preset to the interface. Double click Name option to apply a name to the preset, use the PTZ controls, click Apply to save the preset.
PTZ Controls	Use the directional arrows, zoom, and other PTZ controls to apply to the preset.
Clear	Removes all presets from the interface. Click Refresh to refresh the interface if needed.

Tour Group

This menu allows you to create and manage groups of PTZ presets. This can be useful for streamlining your surveillance operations by allowing the user to move the camera quickly and easily to different points in the scene with a single click.

Parameter	Description
Add Tour Group	Click to add a tour group. Double click the Name option to name the group.
Add Preset	Apply set presets to a particular group.
PTZ Controls	Use the directional arrows, zoom, and other PTZ controls to apply to the preset.
Run	Click Run to enable the tour and click Apply .
Clear	Removes all presets from the interface. Click Refresh to refresh the interface if needed.
Delete	Click Delete to remove a single group.

Scan

This menu allows the user to configure the camera to automatically scan back and forth between two pre-defined points. This can be useful for monitoring a large area, such as a perimeter fence or a parking lot.

Parameter	Description
Add Scan	Click Add Scan to add additional scan presets. Double click the Name option to name the scan preset.
PTZ Controls	Use the directional arrows to set the left and right limits of the scan.

Left Limit	After the directional arrows have been used to apply the scan point, click the save icon.
Right Limit	After the directional arrows have been used to apply the scan point, click the save icon.
Speed	Set the speed of the scan. The default value is 5, however it can range up to 8.
Run	Click Run to enable the scan and click Apply .
Clear	Removes all presets from the interface. Click Refresh to refresh the interface if needed.
Delete	Click Delete to remove a single scan.

Pattern

This menu allows the user to create and execute sequences of PTZ movements. These sequences can be used to automatically move the camera to different points in the scene, zoom in and out, and focus on specific objects or areas.

Parameter	Description
Add Pattern	Click Add Pattern . Double click the Name option to name the pattern preset.
Setting	Click the setting option to begin setting the pattern.
PTZ Controls	Use the PTZ controls when setting is applied to set the pattern.
Stay Time(S)	The amount of time the pattern will stay before it is reactivated.
Run	Click Run to enable the pattern.
Clear	Removes all presets from the interface. Click Refresh to refresh the interface if needed.
Delete	Click Delete to remove a single pattern.

Pan

This menu allows the camera to automatically pan in 360°. Use the **Rotation Speed** slider to set the speed of the pan. Click **Start** to allow the camera to pan. Click **Stop** to stop the pan.

PTZ Speed

This menu allows the user to set the overall pan, tilt, and zoom speed of the device. This will range from low, medium, to high. Click **Apply** to save the setting.

Idle Motion

This menu allows the user to configure the camera to automatically return to a pre-defined preset or pattern after a period of inactivity. This can be useful for ensuring that the camera is always pointed at the most important areas in the scene, even if there is no activity.

Parameter	Description
Enable	Enable the idle motion feature.
Idle Interval	The amount of time the camera can be idle before the option is activated.
Idle Motion	Set whether a preset, tour group, scan, or pattern is applied when idle motion is enabled.
Apply	Click Apply to save the settings.
Refresh	Click Refresh to refresh the interface.

Power Up

This menu allows the user to configure the camera to automatically start a specific function when the camera is powered on. This can be useful for ensuring that the camera is always in the desired state when it is powered on.

Parameter	Description
Enable	Enable the Power Up feature.
Power Up	Set the Auto, preset, tour group, scan, or pattern is applied when the camera turns on.
Apply	Click Apply to save the settings.
Refresh	Click Refresh to refresh the interface.

PTZ Rotation

This menu allows you to manually control the camera's pan, tilt, and zoom movements. This can be useful for positioning the camera to a specific point in the scene, zooming in on an object or area, or tracking a moving object.

Parameter	Description
Max Elevation Angle	Set the maximum angle at which the camera can tilt upwards. This will be set to 0° degrees by default, however, can range to -5°.
Enable	Enable the PTZ rotation option.
Up Limit	Click Setting and Go To to set and apply the upward angle limit.
Down Limit	Click Setting and Got To to set and apply the downward angle limit.

Scheduled Task

This menu allows you to schedule the camera to perform specific actions at specific times or intervals. This can be useful for automating your surveillance operations and ensuring that the camera is always monitoring the most important areas in the scene at the right time.

Parameter	Description
Add Schedule Task	Click to begin adding a scheduled task.
Task Action	Set a preset, tour group, scan, or pattern to the schedule task.
Schedule	Set a Full time or custom schedule. Click Add Schedule to set a custom schedule.
No.	The task action set for the scheduled task.
Auto Home	The amount of time until the task is over and set back to its original state.
Apply	Save and apply the options to the scheduled task.
Clear	Clear all scheduled tasks.
Refresh	Refresh the interface.

PTZ Maintenance

This menu allows you to perform various maintenance tasks on the camera's pan, tilt, and zoom (PTZ) mechanisms. These tasks can help to ensure that the PTZ mechanisms are operating properly, and that the camera is able to move smoothly and accurately.

Parameter	Description
PTZ Restart	Click this option to allow the camera's PTZ ability to restart.
Default	Sets the PTZ parameters applied to the device back to factory default settings. Please note, the camera will restart if this option is applied.

Storage

The storage menu allows the user to view and modify storage options and settings such as local storage, FTP, and NAS settings.

Storage

This menu allows the user to view the status as well as used/total space available on an inserted microSD card. The features in this menu also allow you to format the microSD card, as well as set read/write permissions.

Format	Read Only	Read/Write	Hot Swap	Refresh
☐	Name	Status	Property	Used Space/Total Space
☐	Local Disk1	Normal	Read/Write	3.04GB / 238.44GB

Storage Setting

This menu allows the user to manage and control storage settings as well as change the storage methods of the camera. Below is a description of the features provided in this menu.

Storage

Parameter	Description
Event Type	Choose which record types will be sent to a selected storage method. General: Continuous (24/7) record types Motion: Motion Detection record types Siren: External alarm record types.
Disk Full	When a storage method is full, choose if the old data will be overwritten or if the camera will stop recording when it's full.
Storage Method	Use this dropdown menu to choose a storage method. FTP: Set the camera to store events in an FTP or SFTP server. NAS: Set the camera to store events to a designated NAS server.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Record Control

This menu allows the user to set general record options for the device. Below is a description of the features provided in this menu.

Parameter	Description
Max Duration	The time used for packing video files
Pre-Record	The amount of time that will be displayed before the detected event occurs.
Record Mode	Set the device to record automatically or manually. The record mode can be set to off as well if the recording is not applicable.

Record Stream	Set the device to record the mainstream, or sub-streams by default.
---------------	---

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Schedule

The schedule menu allows the user to set a recording schedule which will provide the camera with a way to only retain recordings during specific days or times. Use the mouse to modify recording schedules if needed for each day and time applicable.

Channel 1 Holiday

Event Type: General Event Siren
Clear Delete

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun																									Copy
Mon																									Copy
Tue																									Copy
Wed																									Copy
Thu																									Copy
Fri																									Copy
Sat																									Copy

Apply Refresh Default

Below is an explanation of the fields on the Schedule settings tab:

Event Type: These checkboxes allow the user to select which record type they want to configure on the schedule. There are 3 types of snapshots:

General: General means that the camera will record during the specified time. A general recording is represented by green.

Motion: Motion Detection means that the camera only records when the motion detection alarm is activated. Motion recording is represented by yellow.

Siren: Alarm means that the camera only records when an alarm is activated. Alarm recording is represented by the color red.

Copy: Clicking this button opens a screen that allows periods to be set for each day and for each record type. There are a total of 6 periods that can be set.

Holiday: Provides a way to specify which days the schedule will not apply. To set a holiday, click the Holiday button and select Enable. On the calendar, select the dates in which the schedule will not apply and click OK. A separate holiday schedule can be applied, if a schedule is needed use your mouse to set the time & specified rule types. Click **Apply**.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Log

The log menu allows users to view and back up local and remote logs. Below is a description of the features provided in this menu.

Parameter	Description
Start time	Click this option and use the provided calendar to enter the start and end date of the log.
Type	Use this option to select a log type. If you would like all types to apply, select All.
Search	Click Search to view admin and system logs.
Backup	Click this option to download a text file of all logs to your computer.
Encrypt Log Backup	Enable this option to set a password to open the back up log file.
Interface	View the time, username, and type of log detected. Click the Details option to view log contents including the address and web type.
Backup	Click this option to download a text file of all logs to your computer.

Remote Log

The remote log menu allows the user to configure a remote log to access related logs by accessing a set IP address. Below is a description of the features provided in this menu.

Parameter	Description
Enable	Enable or disable a remote log.
Server Address	Enter the server IP address for the remote log.
Port	Enter the port number of the server IP.
Device No.	Enter the device number, the default device number is 22.
EnableTLS	Provides a secure connection using TLS for a remote log.

Click **Apply** to save the settings. To refresh the interface, click **Refresh**. If you need to reset the settings back to default, click **Default**.

Logout

To log out of the interface, click on the  icon and select logout. If you would like to restart the camera, select **Restart**.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes, or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.
3. (b) For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual: NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.

4. RF exposure warning This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Appendix A: Toxic or Hazardous Materials or Elements

Component Name	Toxic or Hazardous Materials or Elements					
	Pb	Hg	Cd	Cr VI	PBB	PBDE
Sheet Metal (Case)	o	o	o	o	o	o
Plastic Parts (Panel)	o	o	o	o	o	o
Circuit Board	o	o	o	o	o	o
Fastener	o	o	o	o	o	o
Cable/AC Adapter	o	o	o	o	o	o
Packing Material	o	o	o	o	o	o
Accessories	o	o	o	o	o	o

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily

injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or substances contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kinds of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

Note:

This user manual is for reference only. Slight differences may be found in the user interface.

All the designs and software here are subject to change without prior written notice.

All trademarks and registered trademarks mentioned are the properties of their respective owners.