



PROHEAT[®] PET USER GUIDE

8910 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug.
- » Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Use indoors only.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Always install float before any wet pick-up operation.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging appliance.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Use only BISSELL cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Fluid section of this guide.
- » Unplug before connecting TurboBrush Tool.
- » Do not immerse. Use only on surfaces moistened by the cleaning process.
- » Keep appliance on a level surface.
- » Do not carry the appliance while in use.
- » Do not operate the appliance unless the belt door is securely assembled in the location provided.

SAVE THESE INSTRUCTIONS FOR FUTURE USE


This model is for household use only. Commercial use of this unit voids the manufacturer's warranty.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

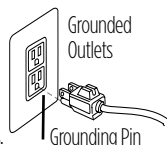


Thanks for buying a BISSELL deep cleaner

We're glad you purchased a BISSELL deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL deep cleaner is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL deep cleaner.

Thanks again, from all of us
at BISSELL.



Mark J. Bissell
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Assembly	6
Operations	7-12
Maintenance & Care	13-14
Troubleshooting	15-16
Replacement Parts	17
Accessories	18
Warranty.....	19
Consumer Care.....	19
Product Registration.....	20

TIPS

- » Deep cleaning stairs and high-traffic areas on a regular basis helps prolong carpet life.
- » Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.
- » Before turning off the machine, suction up clean water to thoroughly rinse out the interior of the flex hose. Then, lift the cleaning tool and point it upwards to drain any remaining water into the dirty water/ collection tank.



Product View



- | | |
|---|---------------------------------|
| 1 Tough Stain Tool | 6 ReadyTools™ Dial |
| 2 DeepReach Pet Tool | 7 Belt Access Door |
| 3 Heat Indicator Light / Built-In Heater | 8 6 Rows DirtLifter® PowerBrush |
| 4 Formula Tank | 9 Floor Nozzle |
| 5 SmartMix® Switch | 10 Spray Trigger |
| Controls the cleaning setting – choose between heavy traffic, normal, and water rinse | 11 Cord Clip |
| | 12 Upper Handle |
| | 13 Quick Release™ Cord Wrap |

- | |
|--------------------------|
| 14 Ready-to-Use Hose |
| 15 Power Switch |
| 16 Heater Switch |
| 17 Extra Long Power Cord |
| 18 Tool Caddy |
| 19 2-in-1 Tank |
| 20 Lower Handle |
| 21 Handle Release |

*Tools included may vary

Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.

**WARNING**

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

						
	Professional Deep Cleaning	Pet Stain & Odor Remover	Deep Clean & Protect	Professional Pet Urine Eliminator	Spring Breeze	Stain Pretreat
Best for	Out Cleans all other formulas	Removes tough pet stains and contains patented odor removal technology	Deep cleans carpets and protects from future stains with Scotchgard™ Protector	Helps remove pet & pollen allergens	Powerful cleaning with a refreshing scent	Pretreat to penetrate and loosen tough stains
2X Concentrated	X	X	X	X	X	
Scotchgard™ Protection†	X	X	X	X		

*ONLY BISSELL Protects from future stains with Scotchgard™ Protector


Assembly

The only thing you will need to assemble your deep cleaner is a Phillips head  screwdriver.

1. Slide upper handle onto lower handle.
2. Feed bundled power cord through tool caddy from caddy's flat side.
3. Align tool caddy holes with upper handle holes.
4. Place hex nut into back of tool caddy and hold in place. Insert bolt from front to back turning into the hex nut until snug. Do not over tighten. Repeat for the second bolt and hex nut.
5. Insert 2 screws into lower 2 holes (located just above the lower hose rack). Turn until tightened.
6. Attach tool(s) to end of hose or front of upper handle.
7. Wrap power cord and flex hose as shown in figure 7.

WARNING

Do not plug in your deep cleaner until you are familiar with all instructions and operating procedures.

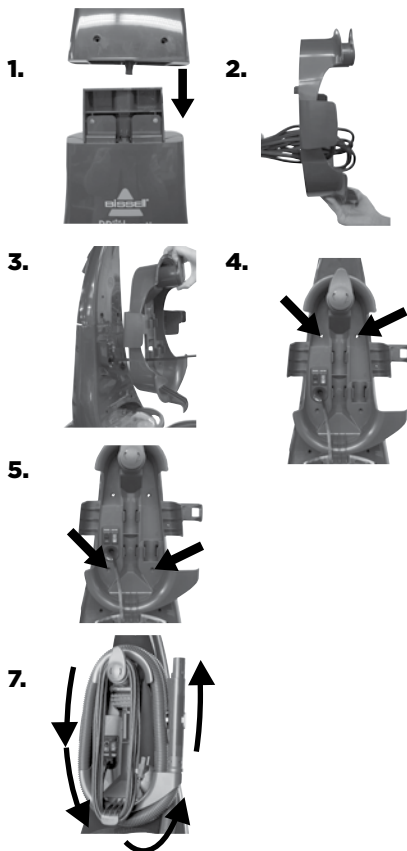

Operations

Special Features

SmartTemp®

The BISSELL ProHeat models all feature a patented built-in heater which will heat hand hot tap water. The heater will never allow the temperature to exceed 180°F. The heater switch which is located on the back of the machine controls the heater so you have the option to turn off the heat if you are cleaning delicate or oriental rugs.



DirtLifter® PowerBrush

The DirtLifter PowerBrush is designed to enhance cleaning performance. The bristle pattern safely lifts out the deep down dirt while gently grooming carpet fibers. The floating suspension self-adjusts to all carpet heights. When the power is ON (I) and the machine is in the upright position, the brush is lifted up off the carpet.

SmartMix®

The SmartMix feature automatically mixes hot tap water with the BISSELL advanced cleaning formula. Simply choose one of the 3 settings (Heavy Traffic, Normal, or Water Rinse) and the ProHeat will adjust the right amount of cleaning solution to mix with the heated water to fit your cleaning need.



Scotchgard™ Protector

Carpet protection applied at the mill typically wears down over time from heavy foot traffic and everyday cleaning, including deep cleaning. To help restore this important protection, only BISSELL offers deep cleaning formulas with Scotchgard protector. This offers extra protection against dirt and tough stains to keep your carpets looking good longer.

To maintain your Scotchgard 5-year limited stain warranty, you no longer are required to hire a professional. By using your BISSELL ProHeat machine with BISSELL formulas containing Scotchgard protector every 12 months, your carpet warranty from 3M remains in effect. No other home deep cleaning system can do this for you.



2-in-1 Tank™

Our 2-in-1 Tank system is designed with a heavy duty bladder inside for clean water. As you clean, the clean water in the bladder will empty and mix with the cleaning formula. Dirty water pulled out of your carpets will collect around the outside of the bladder so that clean and dirty water are always kept separate. This allows you to maximize tank space, yet only carry one tank to and from the sink for emptying and filling.



Operations

ReadyTools Dial


This provides either floor cleaning or above the floor cleaning with the flip of a switch. Attach tool to the hose, and you are ready to go!

Flow Indicator

This is located on the machine base. It spins when the trigger is pressed to indicate that the machine is applying cleaning solution to the carpet and will stop spinning when the formula tank or bladder needs to be refilled, or when the trigger is released.

NOTE: Flow Indicator does not spin when spraying through the attachment hose.

NOTE: Filter is located inside flow indicator

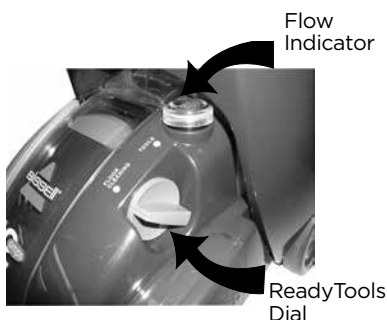

Before you clean

1. Plan activities to give your carpet time to dry.
2. Move furniture to another area if cleaning an entire room (optional).
3. Thoroughly vacuum area with a dry vacuum cleaner before deep cleaning.
4. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.

5. Pretreating (optional)


NOTE: Pretreating is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas such as entryways and hallways.

- a. Spray the BISSELL Stain PreTreat formula onto heavy traffic areas, soiled areas, or stains.
- b. Allow to penetrate for at least 3 minutes.
- c. Following the instructions below, clean as normal, using your BISSELL ProHeat Pet on the high traffic setting.



ATTENTION

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition. Please see Stain Removal instructions on page 14.

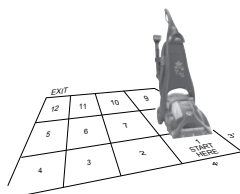

Operations

Fill the water tank

1. Recline the upper handle by pressing on pedal and lay it down to access the tank.

2. Remove the tank from the base of the machine by lifting the tank carry handle.


3. Carry the 2-in-1 tank to the sink. Rotate the handle forward to unlatch the lid. Lift off and set the lid aside.

4. Fill up the bladder with clean hand hot (140°F/60°C MAX) tap water. ***Do not boil or microwave water as it can destroy the bladder.**

5. Replace the top of the tank by matching the lid and tank edges. The tank handle must be in the forward position in order to replace lid. Rotate the handle to latch the lid in place.

NOTE: Remember to secure the lid and test to make sure it is secure before picking up the tank.

6. Place tank into machine base, seating firmly in place. Rotate tank handle back into latched position. Bring machine handle back into upright position.

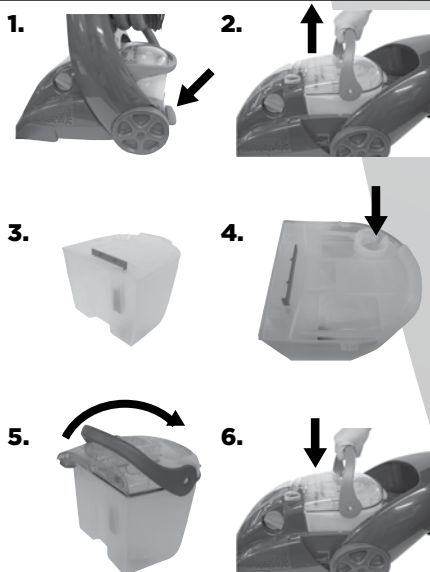

Fill the formula tank

1. Lift the formula tank up and out of the machine base.

2. Fill the formula tank by first unscrewing the cap and insert. Always use genuine BISSELL 2X formulas to maximize cleaning and for the safety of your machine. Fill water to water line and then fill up to formula line with BISSELL formula. Place formula tank into the slot in the side of the machine for a snug fit.

NOTE: Make sure grommet is properly seated to avoid leaking.



Choose the SmartMix setting

Simply choose one of the 3 settings

- Heavy Traffic
- Normal
- Water Rinse

and the ProHeat Pet will adjust the right amount of cleaning solution to mix with the clean water.

WARNING

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

SmartMix
Dial




www.BISSELL.com

Operations

Set ReadyTools dial

Set ready tools dial to floor cleaning.

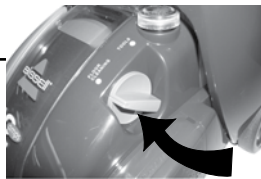

ReadyTools
Dial


Power switch

1. Plug into a proper outlet and turn the power and heater switches to the ON (I) position. The switches are found on the back of the handle. Allow 1 minute for the built-in heater to warm-up before cleaning. The ProHeat will be fully warmed and will provide optimal performance after a minute of continuous heated cleaning.

2. The heater ready light indicates when the heater is ON (I).

NOTE: The built in heater heats the cleaning solution for carpet and hard floor application only. It does not heat solution sprayed through the accessory tools.

1.

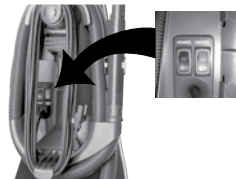

2.



SmartTemp
Light

Cleaning strokes

1. While pressing the trigger, make one slow forward wet pass and another one back. Let the built-in heater, formula, and DirtLifter PowerBrush do the work for you. Caution: Do not overwet. Take care not to run over loose objects, edges of area rugs, or the cord. Stalling the brush may result in premature belt failure.



2. Release the trigger and make one slow forward and backward pass over the same area to remove any residual dirty water, and aid in drying. Repeat cleaning passes until solution being pulled up appears clean. Continue passes without pressing the trigger until you can't see any more water being pulled up.

NOTE: Both the SmartMix tank and the clean water tank must have liquid in them in order for the machine to spray. If one tank is empty the machine will not apply cleaning solution or water.

Operations

Empty the tank

1. Turn the power switch off. Remove the water tank from the base using the tank carry handle. Carry the tank like a bucket to a utility sink or outside where you will dispose of the collection water. Remove the top of the tank by rotating the handle forward to unlatch lid and lifting lid off tank.

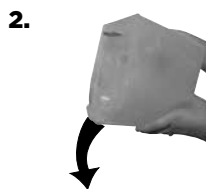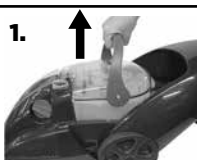


2. Empty collection water from bottom of tank.

NOTE: You may notice hair & debris deposits on the carpet or in the tank that were loosened by the cleaning action (especially with newer carpets that have never been deep cleaned before). This debris should be picked up and thrown away.



3. After each use, remove and rinse the lint screen located on the tank lid.

4. Refill the 2-in-1 tank by referencing "Fill the water tank" on page 9. Remember to secure the top of the tank by rotating the handle and test to make sure it is secure before picking up.

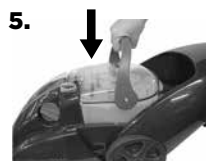

5. Return 2-in-1 tank to the machine.

NOTE: Always check the level of cleaning formula in the formula tank at the same time, and refill as needed

Rinse (optional)

Rinsing is an optional step that can be done during the cleaning process by switching to the water rinse setting, or it can be done after the carpeted area has been cleaned.

1. Simply choose the water rinse setting on the SmartMix dial, and follow the same path as you did for cleaning, taking care to do a forward (wet) stroke by depressing the trigger, a backward (wet) stroke, and a forward and backward (dry) stroke, releasing the trigger. Continue this until the water you see coming up the nozzle is clear.



Operations

Cleaning with attachments

Your deep cleaner comes equipped with a hose and at least one attachment for cleaning stairs, upholstery, and more.

1. Important! If using to clean upholstery, check upholstery tags for instructions.

a. Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your ProHeat. If the tag is coded with an "X" or an "S" (with a diagonal stripe through it), or says "Dry Clean Only", do not proceed with any deep cleaning machine. Do not use on Velvet or Silk. If manufacturer's tag is missing or not coded, check with your furniture dealer or manufacturer.

b. Check for colorfastness in an inconspicuous place.

c. If possible, check upholstery stuffing. Colored stuffing may bleed through fabric when wet.

d. Plan activities to allow upholstery time to dry.

e. Vacuum thoroughly to pick up loose debris and pet hair. Use a vacuum with a brush attachment and a crevice tool to clean in fabric folds.

2. Follow the instructions on page 9 for filling the water tank and the formula tank.

3. Set ready tools dial to the **tools** setting. This will allow spray and divert the suction to the hose.

*Built in heater heats the cleaning solution for carpet application only. It does not heat solution sprayed through the accessory tools.

4. Set SmartMix dial to normal.

5. Attach the cleaning tool to the end of the hose.

6. Plug in and turn on the power switch.

7. Clean by pressing the trigger to spray solution onto the area to be cleaned. Slowly move the tool back and forth over the soiled surface. Release the trigger to suction soiled water. Continue to clean in the area, working in small sections, until no more dirt can be removed. Rinse (optional) and suction as needed. Caution: Do no overwet.

8. When cleaning is complete, remove and rinse tools in clean, running water.

9. Wrap hose around the tool caddy.


10. Empty water tank and rinse out, following the instructions on page 11.

11. Return ready tools dial to floor cleaning.



WARNING

To reduce the risk of injury, be extra careful when cleaning stairs. Make sure machine is secure and level.

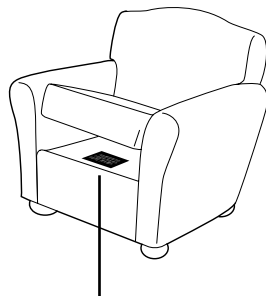

Manufacturer's tag

Maintenance & Care

Machine storage

Once your cleaning is complete, make sure the water tank is emptied and rinsed out. Put the unit away in a closet or basement for the next use.

NOTE: Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is a danger of freezing. Freezing will damage internal components and void the warranty.


Machine care

For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete.

1. Turn power and heater switches OFF (0). Unplug the machine and wrap the power cord.
2. After emptying the water tank, rinse it out at a faucet with running hand hot tap water, taking care to clean underneath the heavy duty bladder, and all around it. Clean out lint trap.
3. Replace the 2-in-1 Tank on the machine.
4. Clean out the flow indicator filter each time it is used to ensure best cleaning performance. Unscrew the flow indicator cap, lift out the red rotor and white filter. Rinse all three parts with water. Replace the filter and rotor. Replace the flow indicator cap. Turn until snug, do not over-tighten.
5. Any loose hair or debris can be pulled from the brush roll if desired and thrown away.
6. Wipe the machine's exterior with a soft cloth.
7. After carpet is dry, vacuum again to remove hair and fuzz.

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

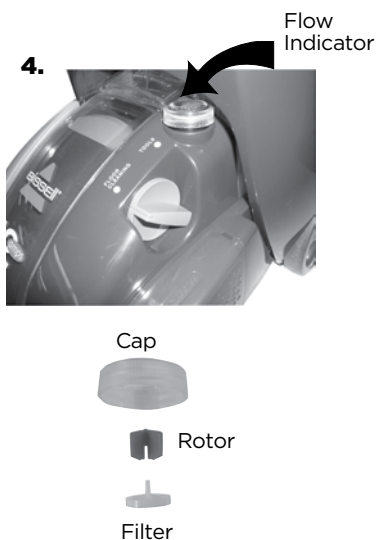

Maintenance & Care

Stain removal

Do Not Delay! Attending to an accident soon after it occurs increases the chances for full removal. Leaving it for an extended period of time may cause it to set and become permanent.



1. Blot up liquids with an absorbent cloth or paper towels. White materials are recommended because certain dyes may bleed and make the stain worse.

2. Gently scrape up any semi-solids with a spoon or spatula. Do not use a knife or other utensil with sharp edges because it could damage the carpet or upholstery.

3. If the area has dried, remove the remaining semi-solids and residue with a sweeper or vacuum.

4. Be sure to test any spot removal formulas in an inconspicuous area first. This is important as some dyes and materials could be damaged or discolored by cleaning solvents. If such a change should occur, try a different solution or call a professional.

5. If cleaning on Berber carpeting, gently run your machine over a hidden area. If no fuzzing occurs, continue cleaning in soiled area.

6. Use the BISSELL Stain PreTreat, spray evenly over soiled area. Do not overwet. Wait 3-5 minutes. Gently work the solution by blotting area with a clean, damp, color safe cloth.

7. Clean using either the floor cleaning or tools setting on the ReadyTools dial.

Troubleshooting

⚠ WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Heater ready light does not illuminate	The heater switch is not turned ON (I).	Turn ON (I) the heater switch.
	The machine power switch is not turned ON (I).	Both switches must be ON (I) to activate the heater ready light.
Reduced spray or no spray	Bladder may be empty.	Refill bladder with hot tap water.
	Heater tank may be empty.	Fill with BISSELL Deep Cleaning formula for cleaning. Fill with water if rinsing.
	The filter may be clogged.	Clean out flow indicator filter, page 13.
	Tanks may not be seated properly.	Turn power OFF (O); remove & reseal tanks.
	Pump may have lost prime.	Turn power OFF (O); after 1 minute turn ON and press trigger.
	The Pump belt may be broken.	Turn on the machine and check to see that the DirtLifter PowerBrush turns. If it does not, refer to #1 below.
DirtLifter® PowerBrush does not turn	The brush belt or pump belt is off or broken. 	Turn the machine OFF (O) and unplug from the outlet. To check if the brush belt or pump belt has broken, you will need a flat head screwdriver. Insert the blade end into the lower slot of the belt access door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. If broken, please refer to Replacement Parts on page 17 before calling Consumer Care. Complete installation instructions will accompany the replacement belt.

Troubleshooting

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Cleaner not picking up solution	ReadyTools dial may be on the wrong setting for the cleaning job.	Set ReadyTools dial to either floor cleaning or tools.
	Nozzle window may not be properly attached.	Press down firmly on the black oval gasket at the top window to make sure the two tabs on the back of the nozzle window are snapped into the mating slots in the main housing.
	2-in-1 tank lid is not properly installed.	Re-install lid; refer to page 9.
	2-in-1 tank is not properly seated.	2-in-1 tank must be firmly seated to function; remove and reseal 2-in-1 tank.
	Poor tool position. (Hand held attachments only).	Adjust angle; apply more downward pressure.
	2-in-1 Tank has picked up maximum dirty water.	Empty 2-in-1 tank, refer to page 11.

Please do not return this product to the store.


Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement Parts

These items are available for your BISSELL deep cleaner.
Call 1-800-237-7691 or visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
015-9043	Tank Assembly Complete (includes lid assembly)		015-4439	Tank Lid Assembly	
015-9041	Tank Bottom		210-1785	SmartMix® Tank (includes cap)	
210-1795	SmartMix® Cap Assembly		555-6503	Flow Indicator Cap Assembly	
214-9871	Floor Nozzle Window and Gasket		215-0628	Replacement Pump Belt (with instructions)	
015-0621	Replacement Belt Brush (with instructions)		213-3501	Lint Screen	

*Not all parts are included with every model.



www.BISSELL.com

Accessories

These items are available for your BISSELL deep cleaner.
Call 1-800-237-7691 or visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
203-9201	4" Upholstery Tool		203-6655	Spraying Crevice Tool	
203-6652	TurboBrush®		203-7154	Pet Stain Eraser® Tool	
215-9155	3" Tough Stain Brush		2037412	Deep Reach Pet Tool	

*Not all parts are included with every model.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or E-mail:

www.BISSELL.com

Or Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET



Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.
You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday	8 am - 10 pm ET
Saturday	9 am - 8 pm ET
Sunday	10am - 7pm ET

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 19 for details.

We can't wait to hear from you!

Rate this product and let us (and millions of your closest friends) know what you think!

www.BISSELL.com



©2014 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-4985 Rev 07/14
Visit our website at: www.BISSELL.com
Scotchgard is a trademark of 3M