


Roomba® 110-119 & 1110 Combo Robot

Owners Guide

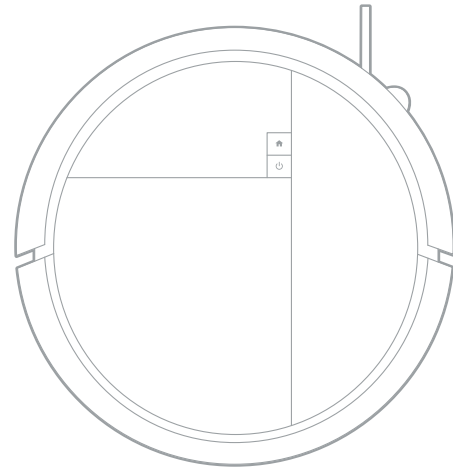

Getting Started

1

Download the Roomba® Home App



Scan the QR code with the camera on your mobile device or find the Roomba® Home App in your App store.

The Roomba® Home App and a Wi-Fi® connection are **required to complete set up**. The Roomba® Home App will guide you through steps to set up your robot. Once your robot is set up, you can use the App to:

- Control when, where, and how you clean
- Create automatic cleaning schedules
- Set custom cleaning preferences
- Unlock digital features
- Access to tips, tricks, and answers to commonly asked questions

NOTE:


2.4 GHz Wi-Fi must be used.

IMPORTANT:


Read safety information guide first before using your robot.

2

Remove Protective Packaging

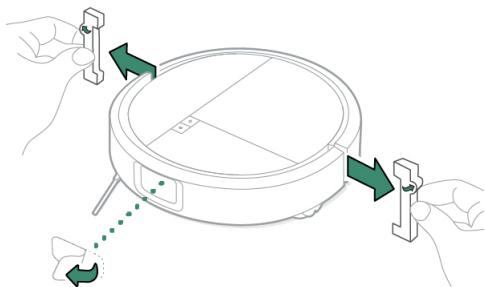


Remove protective film from camera and foam inserts from behind the bumper.

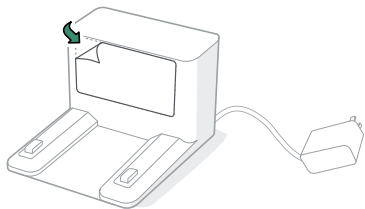

Remove protective film from IR window.

3


Install the Edge-Sweeping Brush

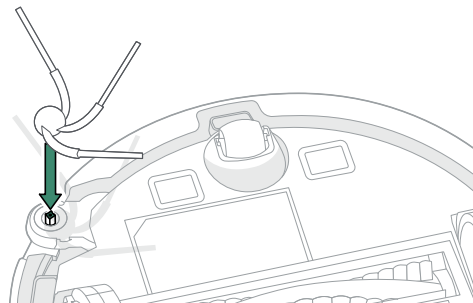

Align the Edge-Sweeping Brush and press down until you hear a click.

4

Place Your Dock

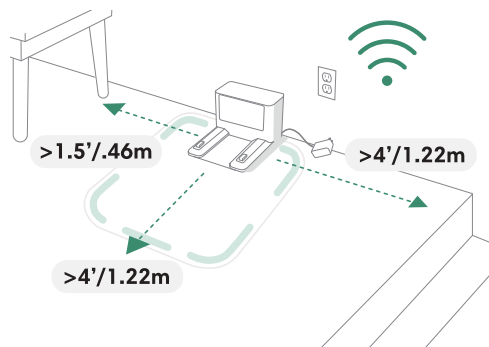

Place your dock on hard, level surfaced flooring.

NOTE:


Do not place it in direct sunlight. Ensure the area around the dock is free of clutter to improve docking performance.

WARNING:

To prevent the risk of your robot falling down stairs, ensure that your dock is placed at least 4 feet (1.22 meters) away from stairs.

5

Secure Drip Tray

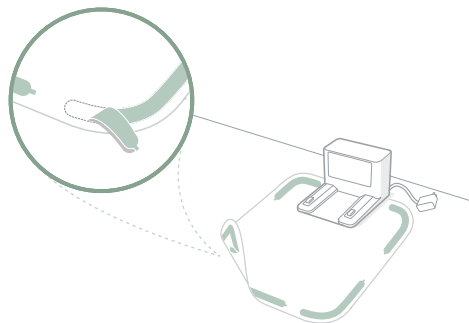


Remove backing from adhesive on the bottom of your drip tray. Place on floor and gently press to secure adhesive strips.

NOTE

Drip tray shown is an optional accessory and is not included with this product. Sold separately at global.irobot.com.

6


Plug in Your Dock

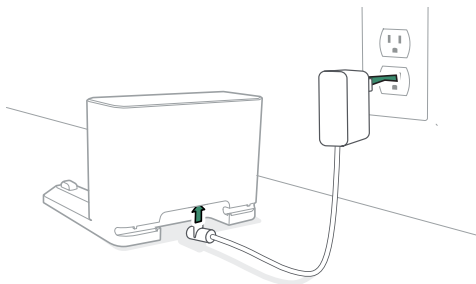

Plug the power cord into the back of the dock, then into a wall outlet. Wrap the cord on the back so it won't get in the way of the robot as it comes and goes.

7

Wake Up Your Robot

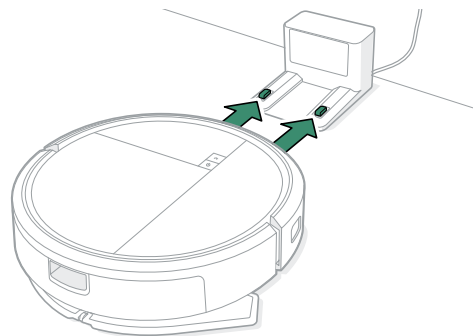


Place your robot in front of the dock, then slide it forward until the metal charging contacts are lined up. Its lights will indicate that it's waking up. A sound will let you know it's fully awake.

NOTE:

Your robot comes with a partial charge, but we recommend letting it charge for 6 hours prior to creating a map of your home as battery readings may be inaccurate for the first few days.


About your Roomba® Plus 110-119 & 1110 Combo

Top View

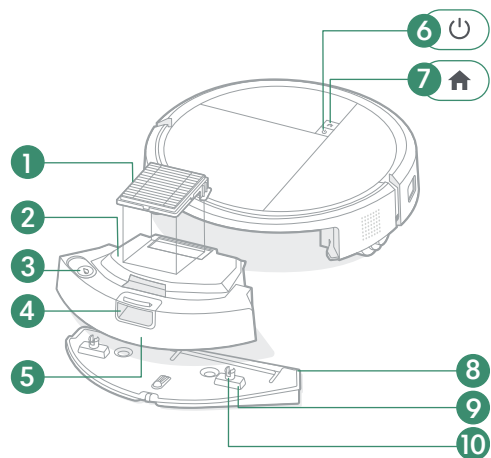


1. Filter
2. Bin Cover
3. Water Tank Cover
4. Bin Release Button
5. Bin
6. Power Button
7. Home Button
8. Mop Pad Plate Attachment Prongs
9. Mop Pad Plate Gliding Mechanism
10. Mop Pad Plate

Bottom View

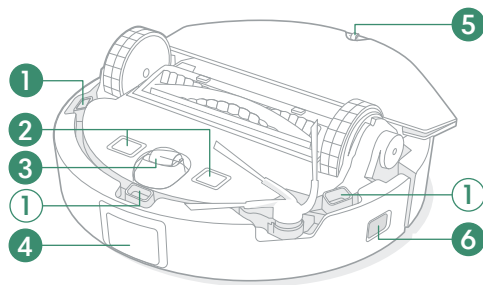


- 1. Cliff Sensor
- 2. Charging Contacts
- 3. Caster Wheel
- 4. IR Window
- 5. Rear Caster Wheel
- 6. Wall Sensor

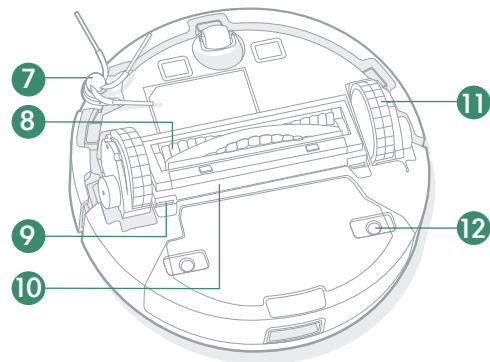

- 7. Edge-Sweeping Brush
- 8. Multi-Surface Brush
- 9. Multi-Surface Brush Cover Release Tabs
- 10. Multi-Surface Brush Cover
- 11. Wheels
- 12. Mop Pad Plate Attachment Port


About Your Charging Dock

Front View

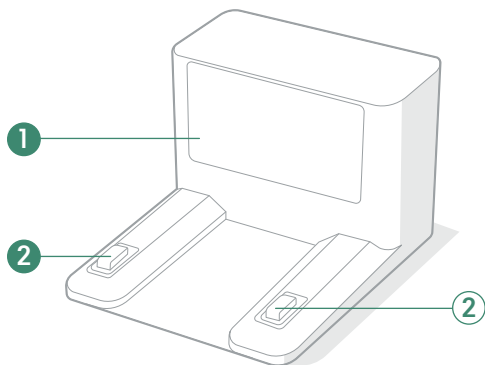


- 1. IR Window
- 2. Charging Contacts

Rear View

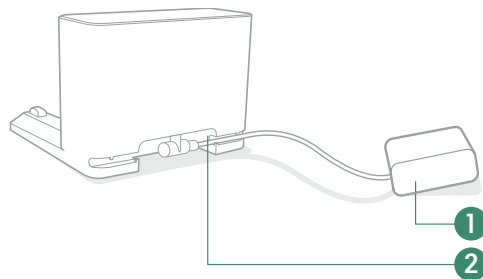

- 1. Power Cord
- 2. Cord Attachment Port

Drip Tray

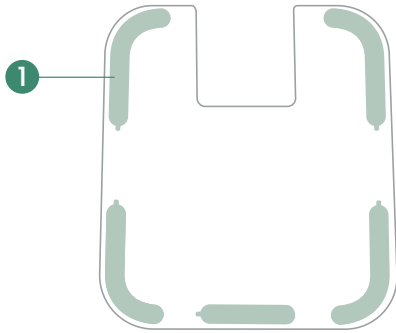


1. Non-Slide Adhesive Strips

NOTE

Drip tray shown is an optional accessory and is not included with this product. Sold separately at global.irobot.com.

Charging

Icon Indicators

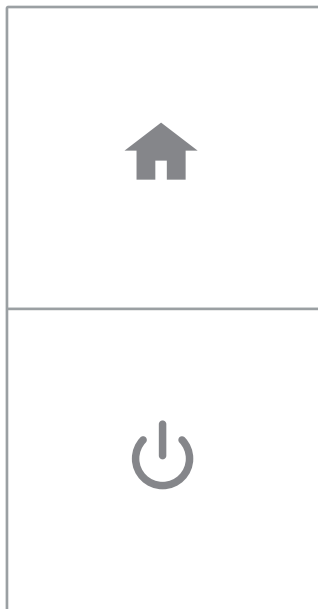

POWER and HOME Buttons

White: Fully charged and connected.

Flashing White: Returning to dock to charge.

Pulsing White: Charging / Low Battery. When robot battery falls below 20% and is charging or on its way to charge.

Flashing Red: Error / Low Battery. When robot has an error or when it's off the dock and its battery falls below 20%.

Charging your Robot

Your robot will return to the dock whenever it needs to recharge during a cleaning routine. Once it is sufficiently charged, it will then resume cleaning where it left off.

Standby Mode

Your robot uses a small amount of power whenever it is on the dock. You can put it in a further-reduced power state when not in use by pressing  for 10 seconds. To exit low power mode short press .

NOTE:


Cleaning cannot be started from the mobile App while in low-power mode.

Storing your Robot

For long-term storage, turn off your robot by removing it from the dock, then press and hold the  button and bumper together for 10 seconds. Store in a cool, dry place.

Cleaning

Button Controls

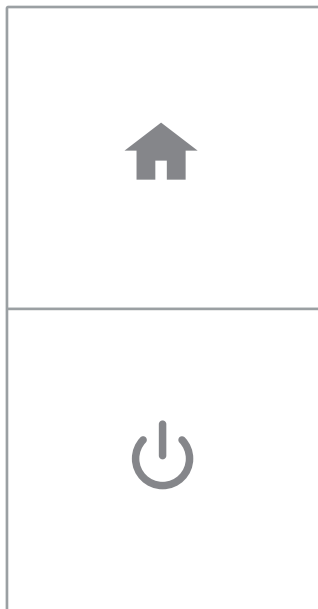

HOME

- Tap to send the robot home
- Press to pause cleaning
- Press when paused to dock
- Press to stop docking

POWER

- Tap to Start/Pause/ Resume Cleaning
- Hold for 3 seconds to turn on
- Hold for 10 seconds to turn off

NOTE:

Roomba® robots are generally designed to be used on most floor types for vacuuming. We do not recommend using mopping functions on unsealed hardwood floors and certain laminate/vinyl planks due to potential water damage to the flooring and/or subfloor. For more info, please visit global.irobot.com.

Cleaning Pattern

Your robot will automatically explore and clean your home. It will start by cleaning the perimeter of the room and then clean the remaining floor space in neat rows. It will return to the dock at the end of a cleaning routine and whenever it needs to re-charge.



Tips:

- Remove excess clutter from floors before cleaning.
- Use your robot frequently to maintain well-conditioned floors.

After 90 minutes of inactivity off the dock, your robot will automatically end its cleaning. If you are unsure if it is finished or paused, visit the Roomba® Home App to check on its status.

Spot Clean


Place your robot near the designated area you need spot cleaned. Tap  two times. Spot clean will clean 1 m x 1 m square around the robot two times in perpendicular directions. After spot clean is complete, your robot will end its cleaning routine. Press  to send it back to its dock.

NOTE:

It is highly recommended to use the Roomba® Home App for cleaning control. The mobile App can be used to clean specific rooms, set up cleaning routines, and create automation's and schedules.

Vacuuming

Initiate Vacuum Mode

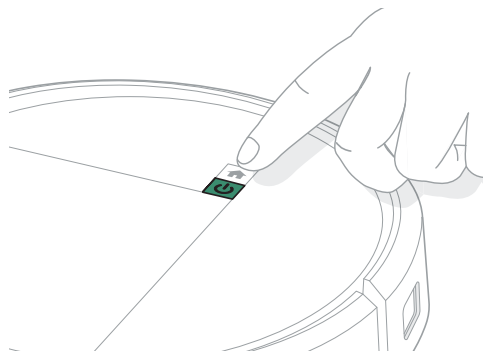


To vacuum, place the robot on dock. Press  or use the Roomba® Home App to start your vacuum routine.

IMPORTANT:

It is recommended to clean the dust bin at least once a week. Otherwise, the performance of the vacuum may be reduced.


Mopping

1

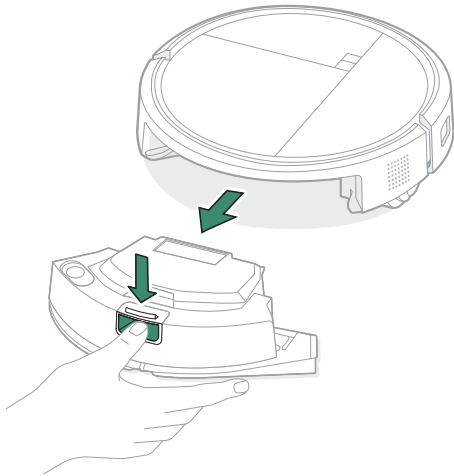


Press bin release button to remove bin.

2

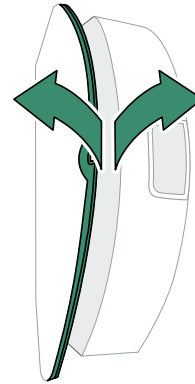


Remove Pad Plate.

3

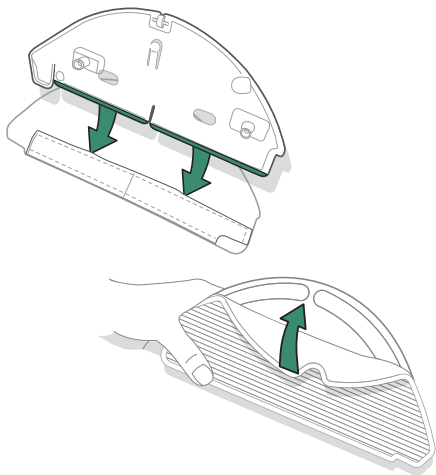


Lightly dampen mop pad and attach to Pad Plate.

4

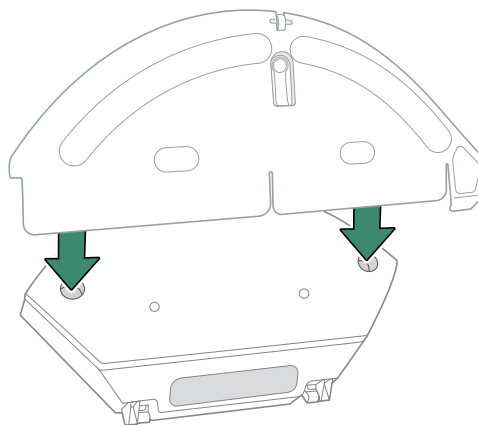


Reinstall Mop Pad Plate on bin.

5

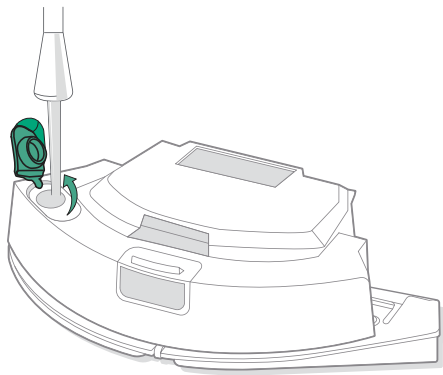


Fill bin with water.

6

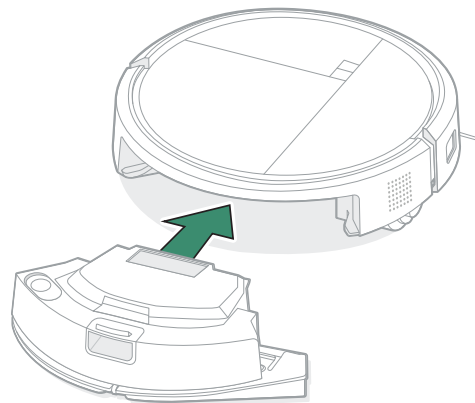

Place bin into robot.

Installing Mop Pad and Mop Pad Plate

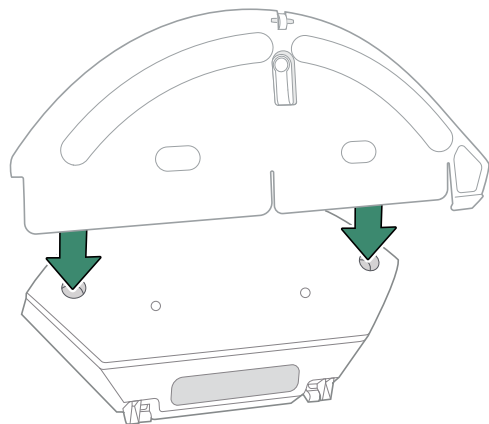

Align the Mop Pad Plate attachment prongs with the Mop Pad Plate attachment ports, lower and insert the Mop Pad Plate until you hear a click.

Care and Maintenance for your Robot


Keep your robot at optimal performance by periodically performing the following basic care and maintenance. Cleaning performance and debris pick-up will be impacted without proper care and maintenance. If you notice the robot picking up less debris, empty the bin, clean the filter and clean the brushes.

View additional instructional videos in the Roomba® Home App.

Part	Care Frequency	Replacement ^a :
Mop Pad Plate(s)	Automatically cleans after each use	Every 2-3 months or as needed
Mop Pad(s)	Clean after mopping	Every 3-6 months
Water Tank	Empty after each use	
Dust Bin	Empty and wash as needed	
Multi-Surface Brush	Clean 1/week	Every 6-12 months
Charging Contacts	Clean every 2 weeks or as needed	
Edge-Sweeping Brush	Clean every 2 weeks or as needed	Every 3-6 months
Filter	Clean 1/week (2/week with pet)	Every 3-6 months
Caster Wheel	Clean every 2 weeks or as needed	
Sensors	Clean 1/month or as needed	
Brush Cover	Inspect every 6 months	Replace if worn or damaged

^aReplacement frequency may vary. Parts should be replaced if visible wear appears. If you think you need a replacement part, please contact iRobot® Customer Care for more information.

Cleaning the Edge-Sweeping Brush

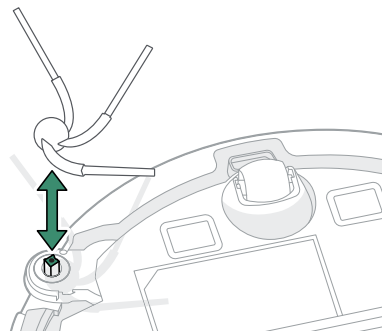


Pull Edge-Sweeping Brush to remove. Remove any hair or debris. Reinstall Edge-Sweeping Brush.

IMPORTANT:

It is recommended to replace the Edge-Sweeping Brush every 3-6 months for optimal cleaning.


Cleaning the Multi-Surface Brush

1

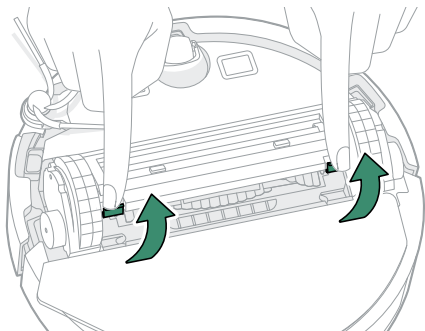


Press the brush frame release tabs and lift to remove brush frame.

2

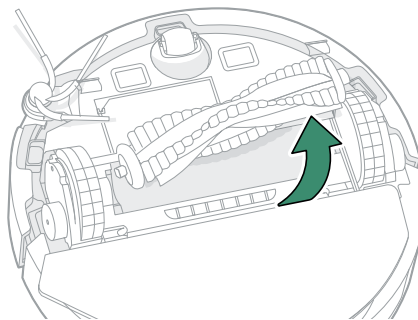


Remove the Multi-Surface Brush.

3

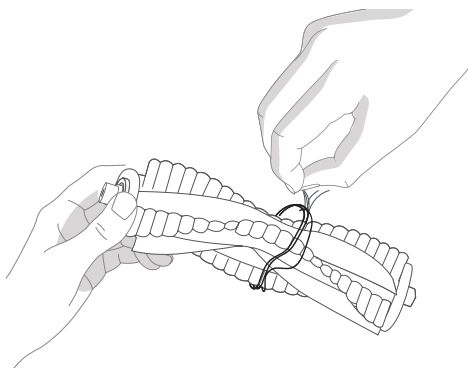


Remove any hair or debris.

4

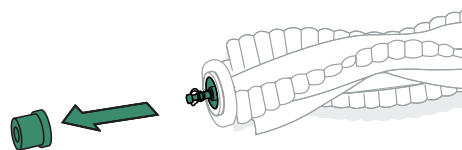


Remove end cap from the end of the brush.

5

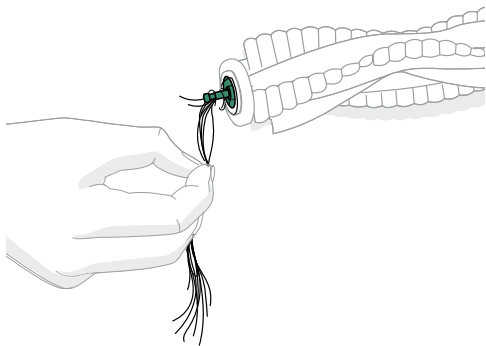

Remove any hair or debris that has collected beneath the cap.
Replace end cap.

6

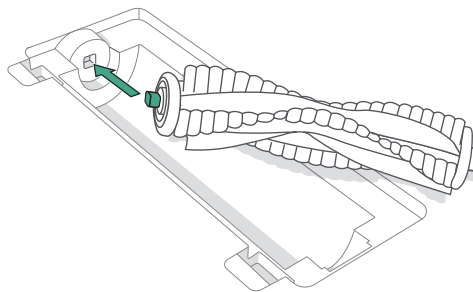

Reinstall the Multi-Surface Brush and brush cover in the robot.

 IMPORTANT:


It is recommended to replace the multi-surface brush every 6-12 months for optimal cleaning performance.

 NOTE:

For instructions to perform a deeper cleaning of the Multi-Surface Brush, see [global.irobot.com](https://www.global.irobot.com).


Cleaning the Front Caster Wheel

1

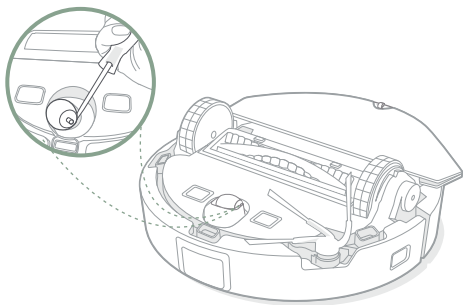

Remove hair and debris from the Front Caster Wheel.

2

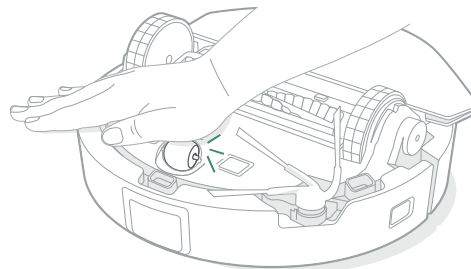


To reinsert the Caster Wheel, firmly press down with your palm until you hear a click.

IMPORTANT:

A front wheel clogged with hair and debris could result in damage to your floor. If the wheel is not spinning freely after you have cleaned it, please contact Customer Care.

Cleaning the Charging Contacts and Sensors

CHARGING CONTACTS

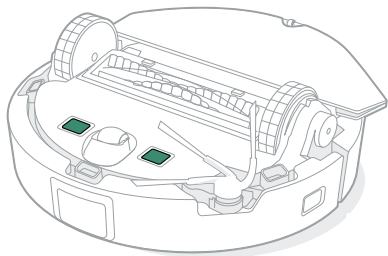


Remove the robot from the dock and wipe the charging contacts and sensors with a clean, dry cloth or lightly dampened melamine foam.



IMPORTANT:


Do not spray cleaning solution or water on the sensors or sensor openings.

SENSORS

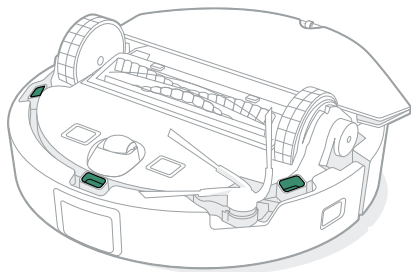


Cleaning the Bin

1

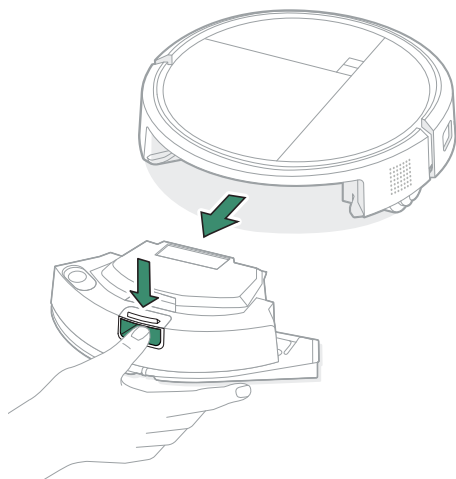


Press the bin release button and pull up to remove bin.

2

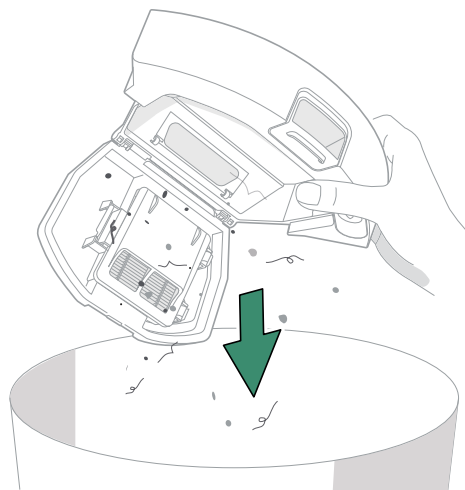


Open dust bin over a trash bin. Empty and clean with cloth.

3

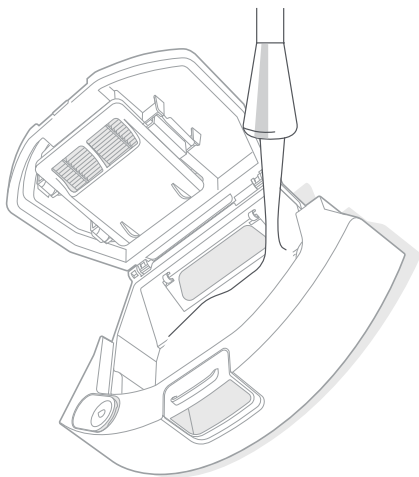

Rinse the bin using warm water.

4

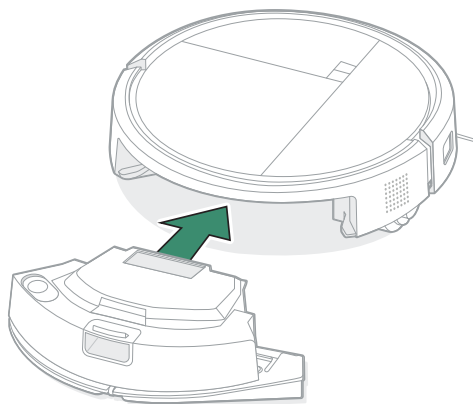

Place bin back in robot.

*** IMPORTANT:**


The bin is not dishwasher safe. Both filter and bin need to be completely dry before reinstalling into the robot.

*** IMPORTANT:**

The bin is not dishwasher safe.


Cleaning the Filter

1

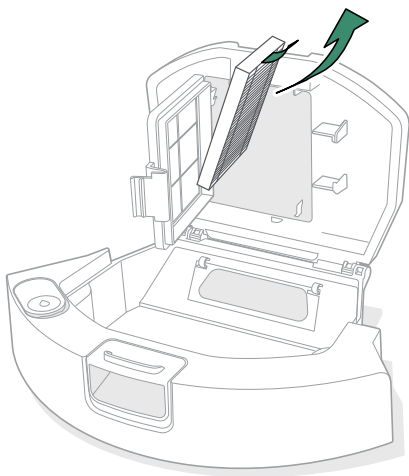


With bin removed, open bin door and remove filter.

2

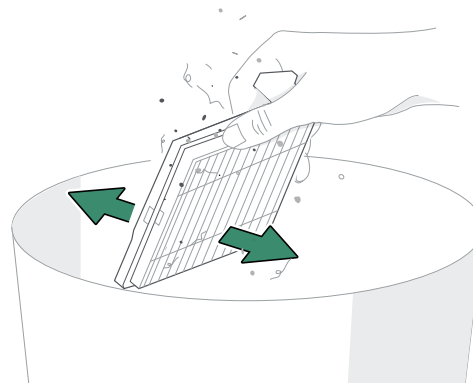

Remove debris by tapping filter against trash bin and/or clean with cleaning brush or clean cloth.

3

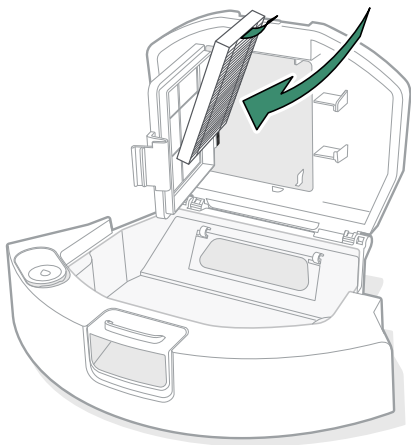


Reinsert Filter.

Cleaning the Mop Pad

Thoroughly hand wash the mop pad with cold water and let it air dry.

Cleaning the Mop Pad Plate

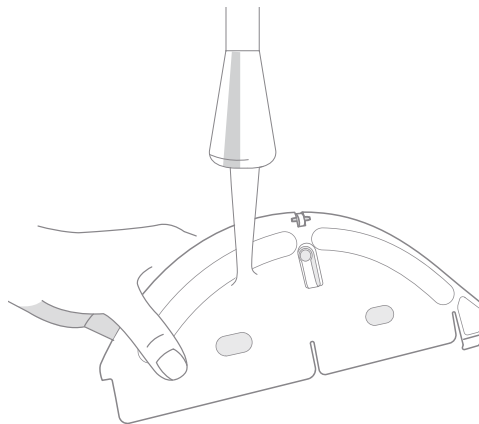

Thoroughly hand wash the Mop Pad Plate with cold water and let it air dry.

Care and Maintenance for your Dock

To keep your dock operating at optimal performance, perform the following care and maintenance tasks.

Part	Care Frequency	Replacement Frequency ^a
Charging Contacts	Clean once a month	
Sensors	Clean once a month	
IR Window	Clean once a month	

^aReplacement frequency may vary. Parts should be replaced if visible wear appears. If you think you need a replacement part, please contact iRobot® Customer Care for more information.


Unplug the dock. Inspect the components to make sure that they are clear of debris. Wipe with a clean dry cloth.



IMPORTANT:

Do not spray cleaning solution or water on the sensors or charging contacts.

Cleaning the Charging Contacts and IR Window

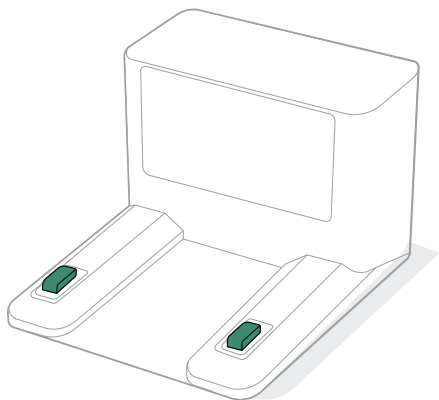

Troubleshooting

Troubleshooting your Robot

Your robot will alert you if something is wrong with a voice announcement or audio alert. The Roomba® Home App will also provide notifications with steps to troubleshoot any issues.

If you are unsure if the robot is finished or paused, consult the Roomba® Home App to check on its status.

Factory Reset

To factory reset press  for 5 seconds, don't release, and then (within 5 seconds) press  +  for 5 seconds.

Battery Safety and Shipping

WARNING:

Lithium ion batteries and products that contain lithium ion batteries are subject to stringent transportation regulations. If you need to ship this product for service, travel or any other reason, you **MUST** follow the below shipping instructions.

- Battery **MUST** be turned off before shipping.
- To turn off battery, remove robot from the dock. Push in its bumper and hold it in that position while you press and hold the  button for 10 seconds, or until the lights turn off.
- Package the robot securely for shipping.

If you need further assistance, please visit your Roomba® Home App, contact iRobot® Customer Care or visit global.irobot.com

Need further assistance? We're here to help.

Download the Roomba® Home App or visit global.irobot.com for product support or to contact your local support center. If you need further assistance in the US & Canada, call the US Customer Care team at (877) 855-8593

iRobot® USA Customer Care Hours

Monday to Friday, 9AM — 9PM Eastern Time

Saturday and Sunday, 9AM — 6PM Eastern Time

Safety Information

Please see the safety guide that came with your robot, or visit global.irobot.com



©2026 iRobot Corporation. 8 Crosby Drive, Bedford, MA 01730 USA. All rights reserved. iRobot, Roomba, and PerfectEdge are registered trademarks of iRobot Corporation. AutoEmpty, AutoWash, StayClean, and PrecisionVision are trademarks of iRobot Corporation. Wi-Fi and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance. Apple and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.



WC# 4866667 vA