


Roomba® Mini/Mini Slim Vac|Mop Robot

Owners Guide

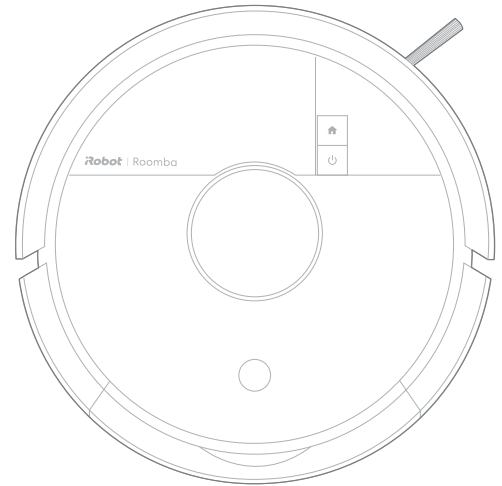

Getting Started

1

Download the Roomba® Home App



Scan the QR code with the camera on your mobile device or find the Roomba® Home App in your App store.

The Roomba® Home App and a Wi-Fi® connection are **required to complete set up**. The Roomba® Home App will guide you

through steps to set up your robot. Once your robot is set up, you can use the app to:

- Control when, where, and how you clean
- Create automatic cleaning schedules
- Set custom cleaning preferences
- Unlock digital features
- Access to tips, tricks, and answers to commonly asked questions

NOTE:


2.4 or 5 GHz Wi-Fi® must be used.

IMPORTANT:

Read safety information guide first before using your robot.

2


Remove Protective Packaging

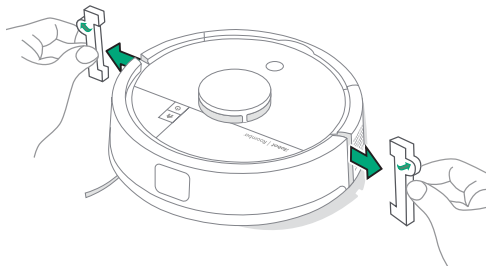

Remove foam inserts from behind bumper.

3


Install the Edge-Sweeping Brush

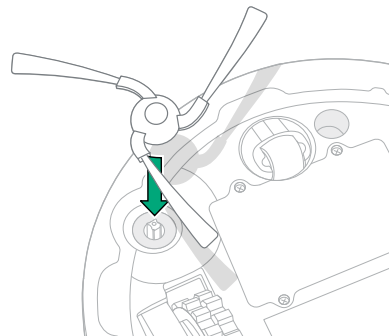

Align the Edge-Sweeping Brush and press down until you hear a click.


4

Place Your Dock

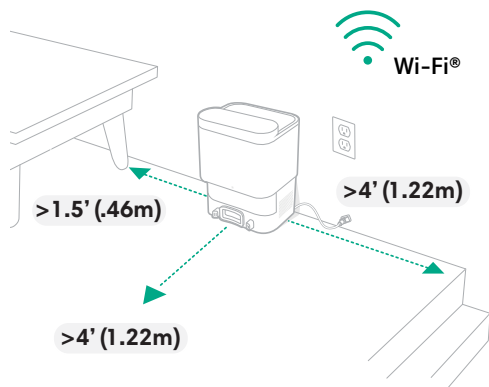

NOTE:

If using AutoEmpty™ dock or placing SlimCharge™ stand horizontally, ensure the area around the dock is free of clutter to allow successful docking. The SlimCharge™ stand can be stored vertically to save space. You will need to remember to physically place your robot on the floor whenever you want to use it, and then place it back in its dock when complete.

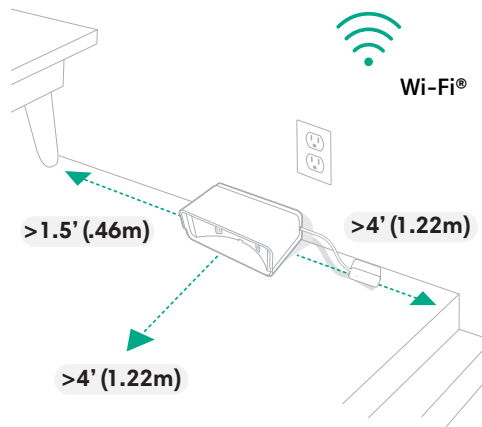

Place your dock on hard, level-surfaced flooring.

⚠ IMPORTANT:


Do not place in direct sunlight.

⚠ WARNING:

For AutoEmpty™ or a horizontally placed SlimCharge™ stand, ensure that the dock is placed at least 4 feet (1.22 meters) away from stairs to prevent the risk of the robot falling down the stairs.

5

Plug in Your Dock

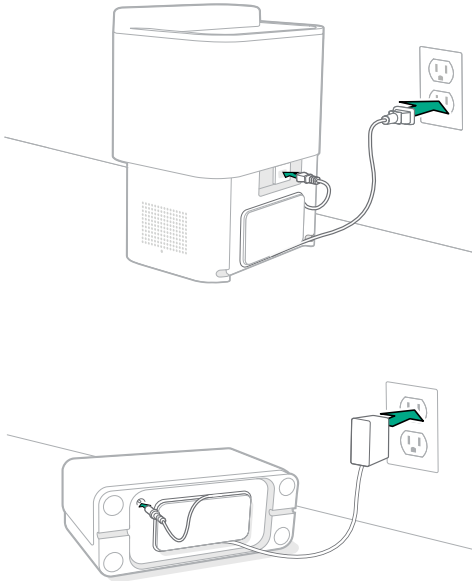



Plug the power cord into the back of the dock, then into a wall outlet. Wrap the cord on the back so it won't get in the way of the robot as it comes and goes.

For more information, visit global.irobot.com

6

Wake Up Your Robot

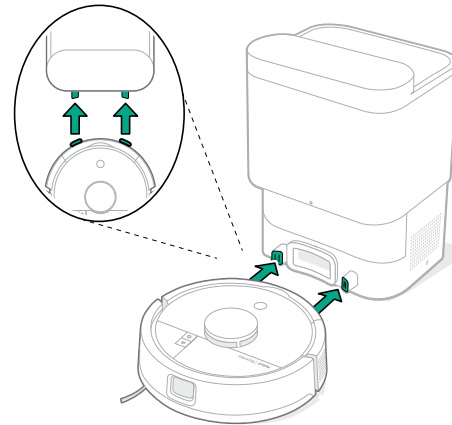

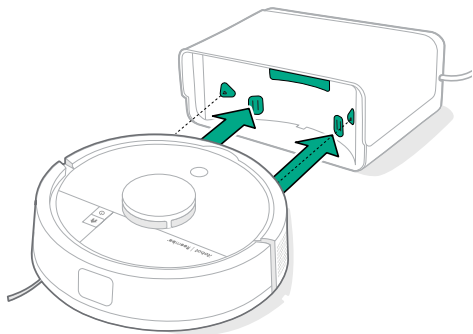


Place your robot in front of the dock, then slide it forward until the metal charging contacts are lined up. Its lights will indicate that it's waking up. A sound will let you know it's fully awake. If using SlimCharge™ stand in the vertical orientation, place it in with top of robot facing away from wall.

 NOTE:

Your robot comes with a partial charge, but we recommend letting it charge for 4.5 hours prior to creating a map of your home.


 IMPORTANT:

Read safety information guide first before using your robot.

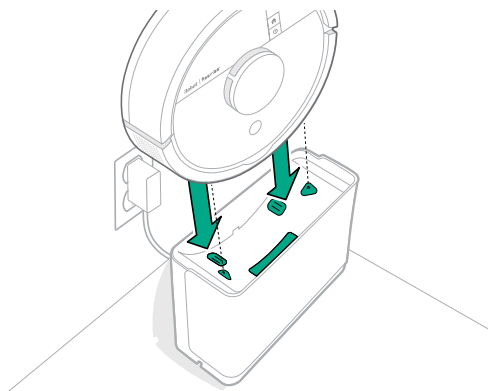


About your Roomba® Mini / Roomba® Mini Slim Robot

Top View

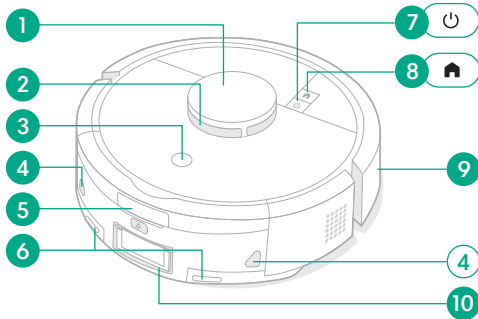


- 1. LiDAR Detector Bumper
- 2. ClearView™ LiDAR
- 3. Accessory Port
- 4. Alignment Mechanisms
- 5. Rear IR Sensor Window
- 6. Charging Contacts
- 7. Power Button
- 8. Home Button
- 9. Bumper
- 10. Debris Evacuation Port

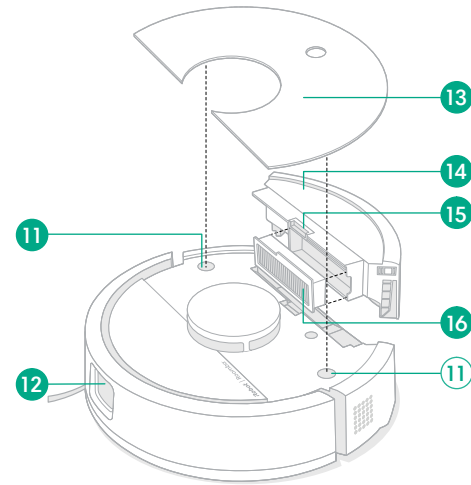

- 11. Top Cover Attachment Points
- 12. IR Window
- 13. Top Cover
- 14. Bin
- 15. Bin Release Button
- 16. Filter


Bottom View

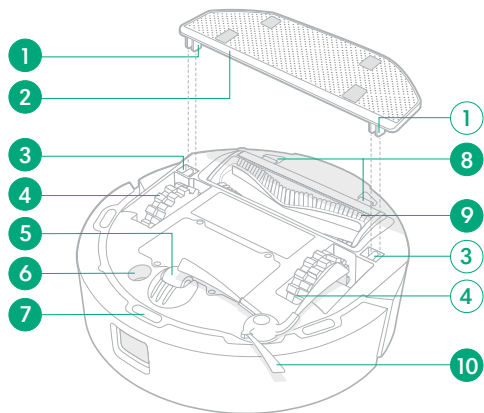

1. Pad Plate Attachment Prongs
2. Mop Pad Plate
3. Mop Pad Plate Attachment Port
4. Wheels
5. Caster Wheel
6. Carpet Sensor
7. Cliff Sensor
8. Multi-Surface Brush Cover Release Tabs
9. Multi-Surface Brush
10. Edge-Sweeping Brush


About your AutoEmpty™ Dock

Front View

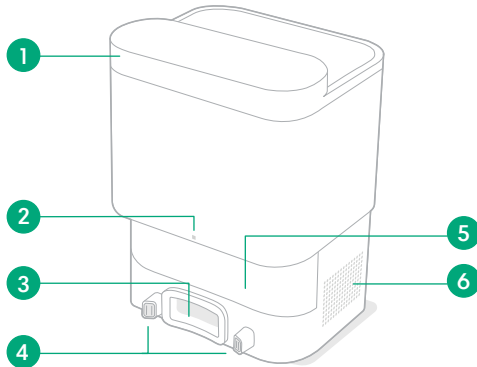


- 1. Dock Lid
- 2. LED Indicator
- 3. Charging Contacts
- 4. Debris Evacuation Port
- 5. IR Window

Top View

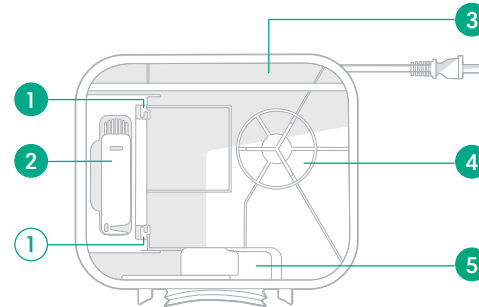

- 1. Bag Alignment Mechanisms
- 2. Cleaning Brush Accessory
- 3. Mop Pad Plate Storage
- 4. Dock Filter
- 5. Dirt Disposal Bag Storage


Rear View

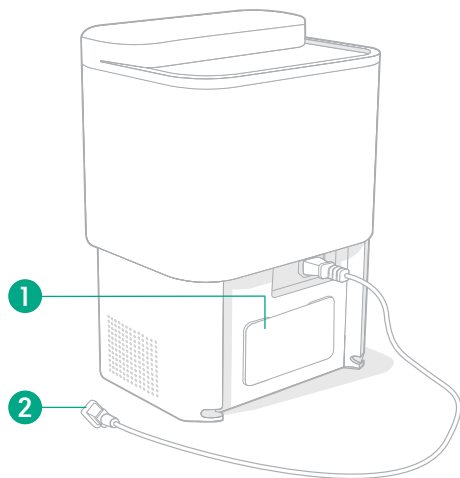

1. Cord Wrap
2. Power Cord


About Your SlimCharge™ Stand

Horizontally Scheduled Routine Position (Front view)

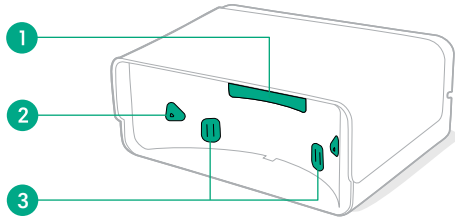


1. IR Window
2. Alignment Mechanisms
3. Charging Contacts

Horizontally Scheduled Routine Position (Rear view)

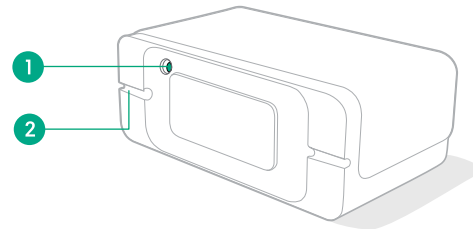

1. Cord Attachment
2. Power Cord

Upright Storage Position

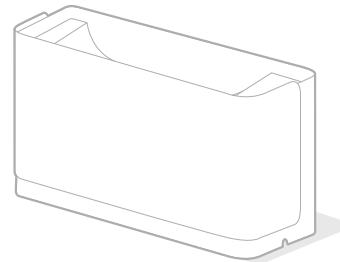

Charging

Icon Indicators



POWER and HOME Buttons

White: Fully charged and connected

Flashing White: Returning to dock to charge

Pulsing White: Charging / Low Battery. When robot battery falls below 20% and is charging or on its way to charge.

Flashing Red: Error / Low battery. When robot has an error or when it's off the dock and its battery falls below 20%.

Charging your Robot

Your robot will return to the dock whenever it needs to recharge during a cleaning routine. Once it is sufficiently charged, it will then resume cleaning where it left off.

Standby Mode

Your robot uses a small amount of power whenever it is on the dock. You can put it in a further-reduced power state when not in use by pressing  for 10 seconds. To exit low power mode short press .



NOTE:

Cleaning cannot be started from the mobile app while in low-power mode.

Storing your Robot

For long-term storage, turn off your robot by removing it from the dock, then press and hold the  button and bumper together for 10 seconds. Store in a cool, dry place.


The SlimCharge™ Stand makes storing your Roomba® easy and spatially efficient.

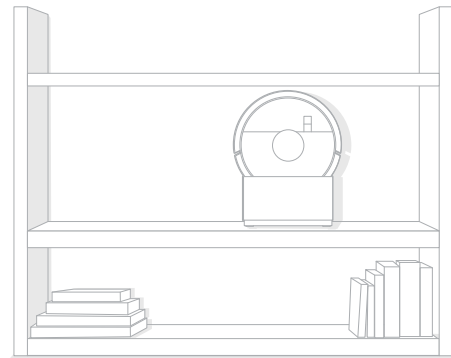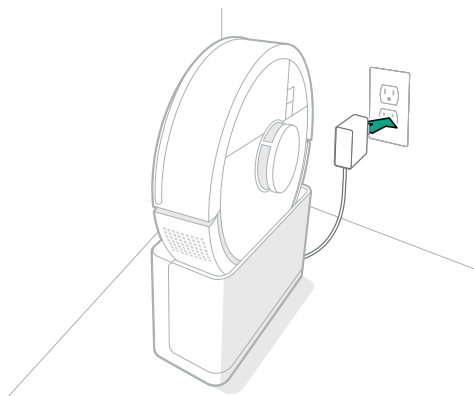

NOTE:

If your Roomba® Mini Slim is being stored in the upright position scheduling cleanings will not work.

Dock LED Indicator

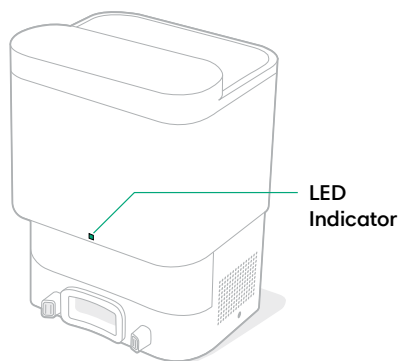

Solid White: Charging

Solid Red: Bag full or not installed

NOTE:

Software updates may adjust the actual LED behavior on the robot and/or dock. Please visit global.irobot.com for the most up-to-date information.

Cleaning

Button Controls



HOME

- Tap to send the robot home
- Press to pause cleaning
- Press when paused to dock
- Press to stop docking

POWER

- Tap to Start/Pause/ Resume Cleaning
- Hold for 3 seconds to turn on
- Hold for 10 seconds to turn off

Cleaning Pattern

Your robot will automatically explore and clean your home. It will start by cleaning the perimeter of the room and then clean the remaining floor space in neat rows. It will return the dock at the end of a cleaning routine and whenever it needs to recharge.



Tips:

- Remove excess clutter from floors before cleaning.
- Use your robot frequently to maintain well-conditioned floors.

After 90 minutes of inactivity off the dock, your robot will automatically end its cleaning. If you are unsure if it is finished or paused, visit the Roomba® Home App to check on its status.


Spot Clean

Place your robot near the designated area you need spot cleaned. Tap  two times. Spot clean will clean 1 m x 1 m square around the robot two times in perpendicular directions. After spot clean is complete, your robot will end its cleaning routine. Press  to send it back to its dock.

NOTE:

It is highly recommended to use the Roomba® Home App for cleaning control. The mobile app can be used to clean specific rooms, set up cleaning routines, and create automation's and schedules.


Scheduled Cleaning - About Routine Cleaning

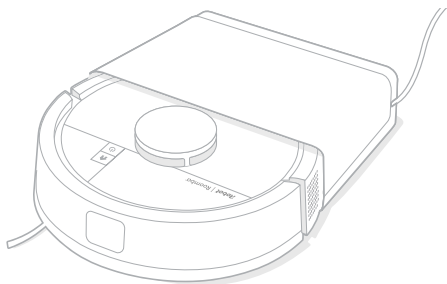

Your Mini Slim can be scheduled to automatically vacuum throughout the week. If you have the SlimCharge™ stand, it must be in its horizontal Scheduled Routine Position so your robot can undock when a schedule begins. To create new scheduled routines, open the Roomba™ Home App.

Vacuuming

Initiate Vacuum Mode

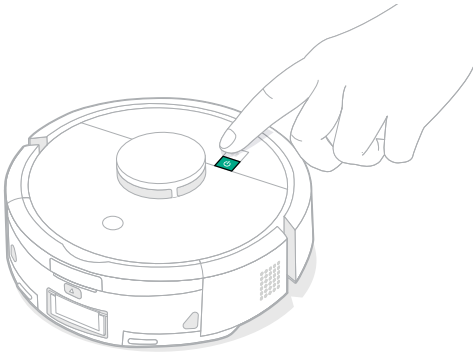

To vacuum, place the robot on AutoEmpty™ dock, on horizontally oriented SlimCharge™ stand, or on the ground **WITHOUT** the mop pad plate installed. Press  or use the Roomba® Home app to start your vacuum job.


NOTE:

If using the SlimCharge™ stand, it is recommended to clean the dust bin at least once a week. Otherwise, the performance of the vacuum may be reduced

Mopping


Attaching Roomba® Mop Pad

1

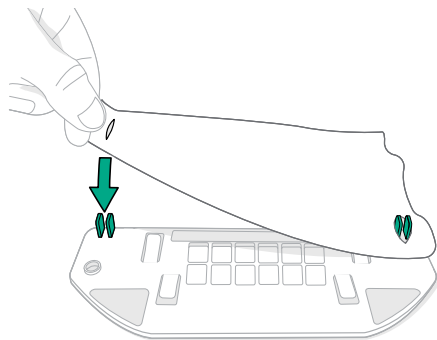



Slide the mop pads slot holes over the pad plate attachment prongs.

2

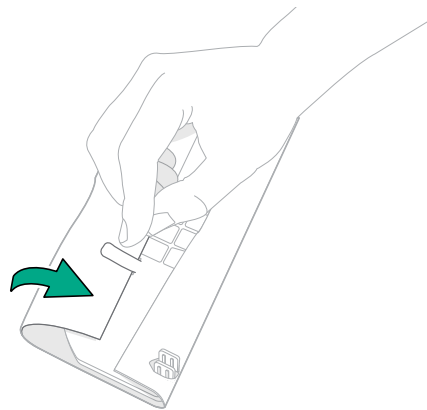


Wrap the mop pad around the pad plate and secure under the pad plate clips.

Attaching Generic Mop Pad

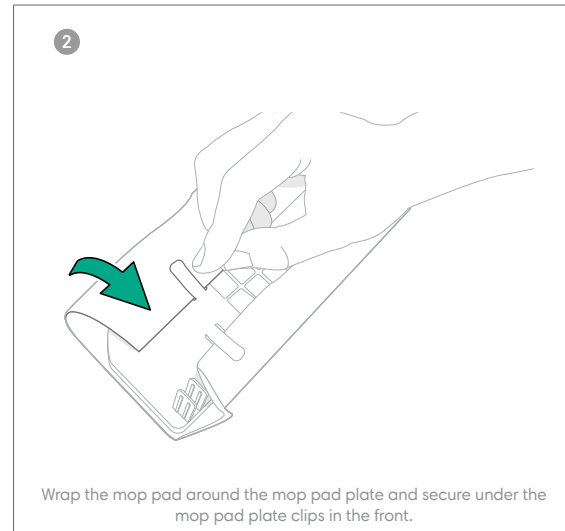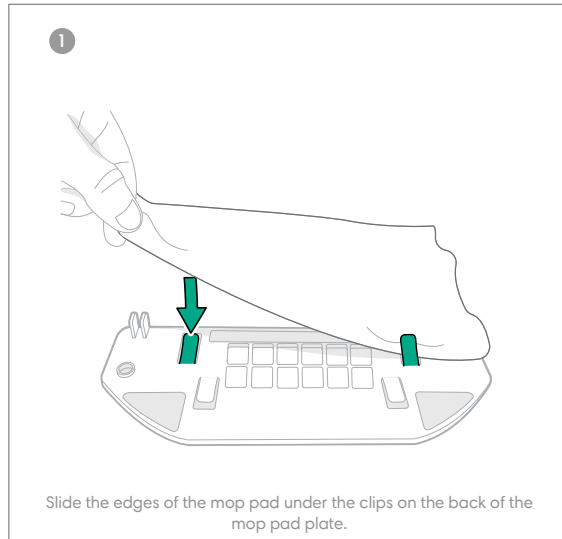


Installing Mop Pad and Mop Pad Plate

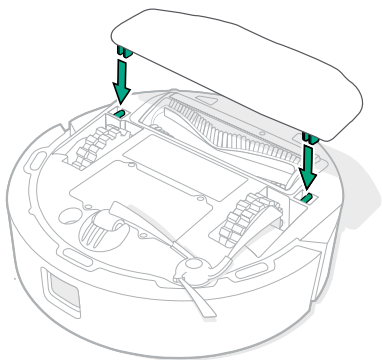

Align the mop pad plate attachment prongs with the mop pad plate attachment ports, lower and insert the mop pad plate until you hear a click.

Initiate Mop Mode

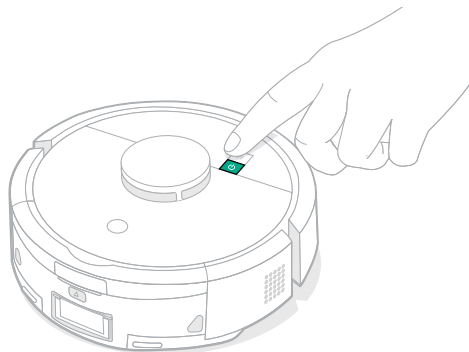

To mop, place the robot on dock with the mop pad plate and mop pad installed and use the Roomba® Home app or press  to start your mop job.

Care and Maintenance for your Robot


Keep your robot at optimal performance by periodically performing the following basic care and maintenance. Cleaning performance and debris pick-up will be impacted without proper care and maintenance. If you notice the robot picking up less debris, empty the bin, clean the filter and clean the brushes.

View additional instructional videos in the Roomba® Home App.

Part	Care Frequency	Replacement ^a
Dust Bin	Empty and wash as needed	
Filter	Clean 1/week (2/week with pet)	Every 3-6 months
Edge-Sweeping Brush	Clean every 2 weeks or as needed	Every 3-6 months
Multi-Surface Brush	Clean 1/week	Every 6-12 months
Caster Wheel	Clean every 2 weeks or as needed	
Charging Con- tacts	Clean every 2 weeks or as needed	
Sensors	Clean 1/month or as needed	
Mop Pad	Mop Pads are single-use	Dispose after each cleaning routine
Mop Pad Plate	Clean after every use	
Brush Cover	Inspect every 6 months	Replace if worn or damaged

^aReplacement frequency may vary. Parts should be replaced if visible wear appears. If you think you need a replacement part, please contact iRobot® Customer Care for more information.

Cleaning the Edge-Sweeping Brush

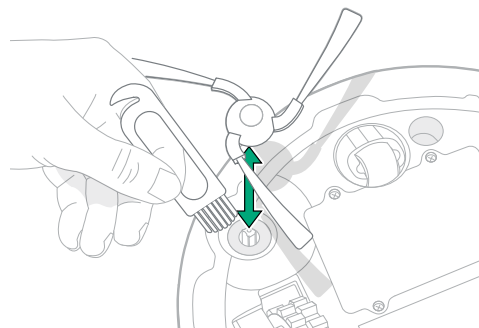


Pull to remove the Edge-Sweeping Brush. Remove any hair or debris, reinstall the Edge-Sweeping Brush.

*** IMPORTANT:**

It is recommended to replace the Edge-Sweeping Brush every 3-6 months for optimal cleaning.


Cleaning the Multi-Surface Brush

1

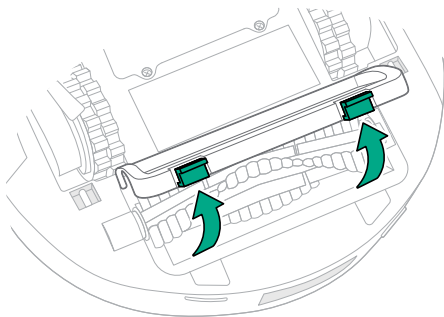


Pinch the brush cover release tabs, lift the tabs, and remove any obstructions.

2

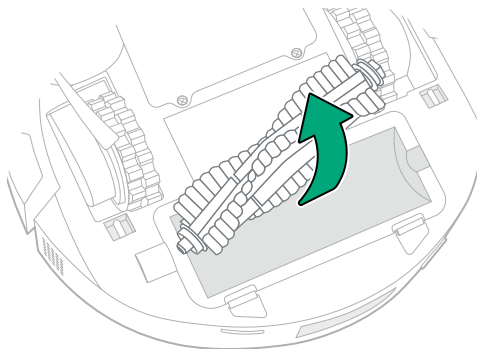


Remove the Multi-Surface Brush.

3

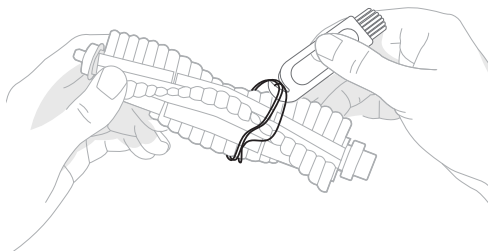


Remove any hair or debris

4

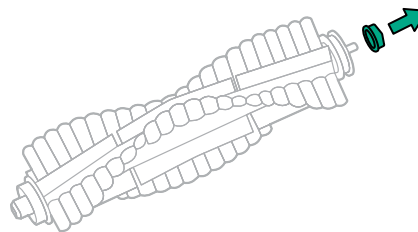


Remove end cap from the end of the brush.

5

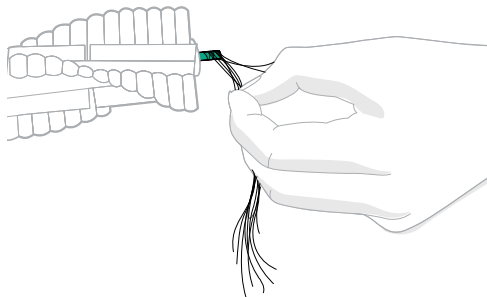

Remove any hair or debris that has collected beneath the cap.
Replace end cap.

6

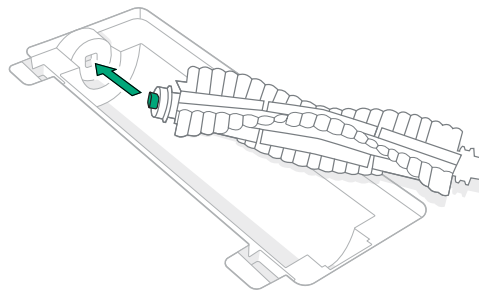

Reinstall the Multi-Surface Brush and brush cover in the robot.


*** IMPORTANT:**

It is recommended to replace the multi-surface brush every 6-12 months for optimal cleaning performance.

NOTE:

For instructions to perform a deeper cleaning of the Multi-Surface Brush, see global.irobot.com.

Cleaning the Front Caster Wheel

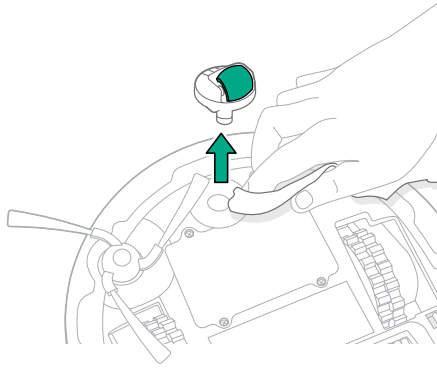


Use the cleaning brush to remove hair and debris from the front caster wheel.

IMPORTANT:

A front wheel clogged with hair and debris could result in damage to your floor. If the wheel is not spinning freely after you have cleaned it, please contact Customer Care.

Cleaning the Charging Contacts and Sensors

CHARGING CONTACTS

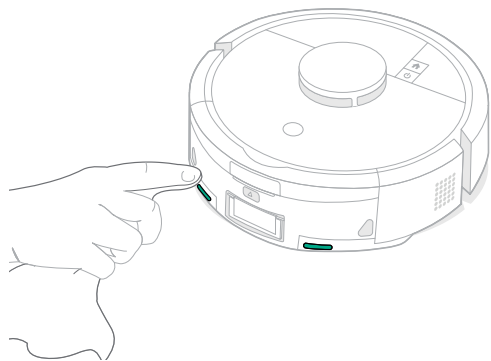


Remove the robot from the dock and wipe the charging contacts and sensors with a clean, dry cloth or lightly dampened melamine foam.

IMPORTANT:


Do not spray cleaning solution or water on the sensors or sensor openings.

SENSORS

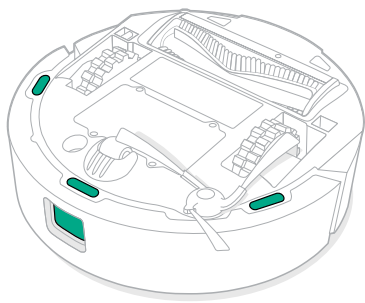


Emptying the Bin

1

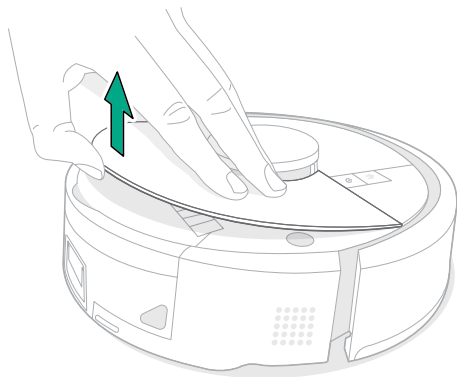


Lift the top cover

2

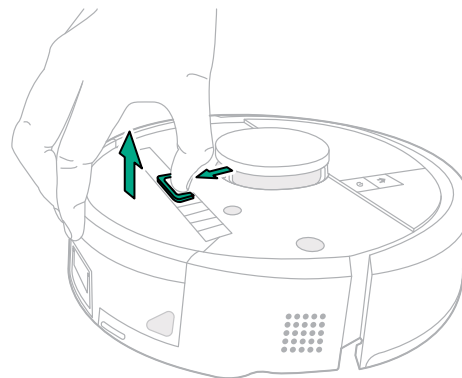


Press the bin release button and pull up to remove bin.

3

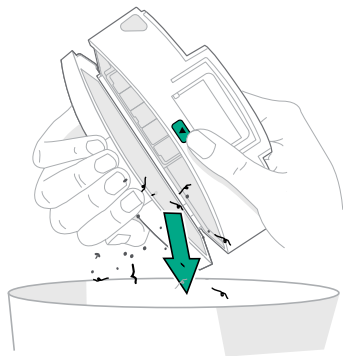

Open dust bin over a trash bin. Empty and clean with cloth.

4

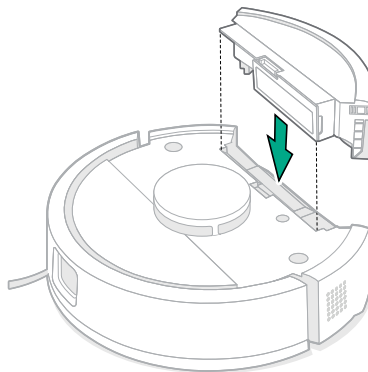


Place bin back in robot.

*** IMPORTANT:**

It is recommended to clean the dust bin at least once a week. Otherwise, the performance of the vacuum-mop may be reduced.


Cleaning the Filter

1

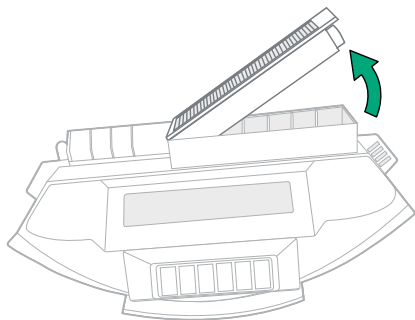


With bin removed, open bin door and remove filter.

2

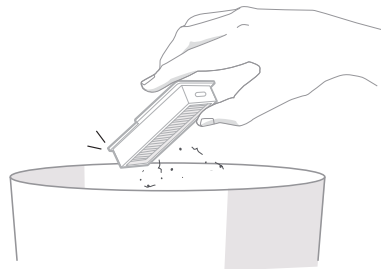

Remove debris by tapping filter against trash bin and/or clean with cleaning brush or clean cloth.


3

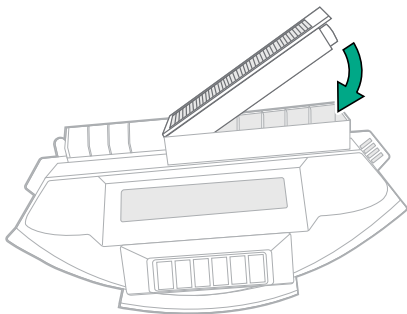

Reinsert Filter


Washing the Bin

1

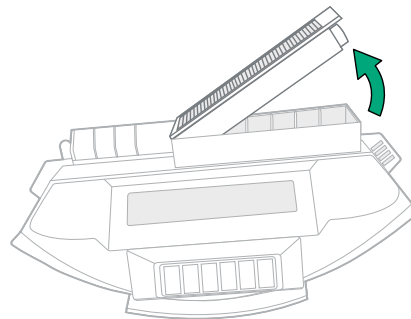

Release the bin, remove the filter, and open the bin door.

2

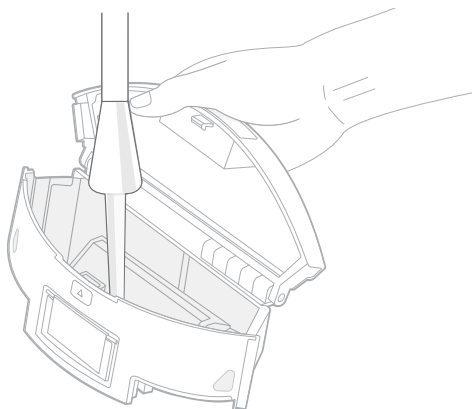

Rinse the dust bin using warm water.


*** IMPORTANT:**

It is recommended to empty the dust bin at least once a week. Otherwise, the performance of the vacuum-mop may be reduced.

*** IMPORTANT:**


Do not wash the filter. Remove the filter before washing the bin. The bin is not dishwasher safe.

3

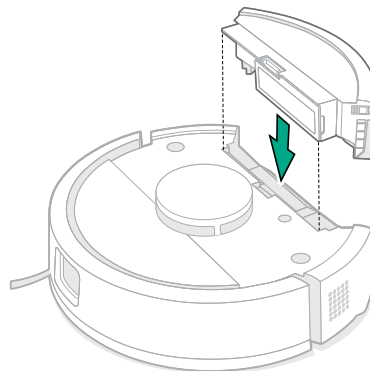

Ensure the bin is completely dry. Reinsert filter and place bin back into the robot.

Cleaning the Mop Pad Plate

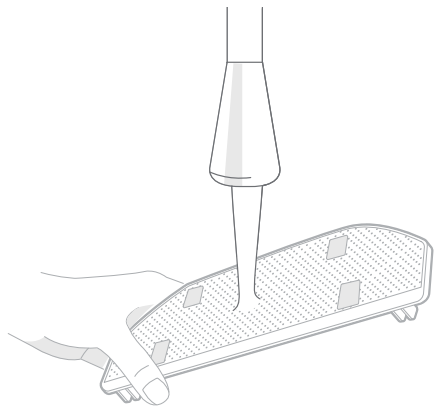

Thoroughly hand wash the mop pad plate with cold water and let it air dry.

Care and Maintenance for your AutoEmpty™ Dock and SlimCharge™ Stand

To keep your AutoEmpty™ dock and/or SlimCharge™ stand operating at optimal performance, perform the following care and maintenance tasks.

Part	Care Frequency	Replacement Frequency [Ⓐ]
Charging Contacts	Clean once a month	
Sensors	Clean once a month	
IR Window	Clean once a month	
Dirt Disposal Bag		Bags should be replaced when full - prompted by the LED indicator on dock and/or in the Roomba® Home app


[Ⓐ]Replacement frequency may vary. Parts should be replaced if visible wear appears. If you think you need a replacement part, please contact iRobot® Customer Care for more information.

Unplug the dock. Inspect the components to make sure that they are clear of debris. Wipe with a clean dry cloth.

IMPORTANT:


Do not spray cleaning solution or water on the sensors or charging contacts.

Cleaning the Charging Contacts and IR Window

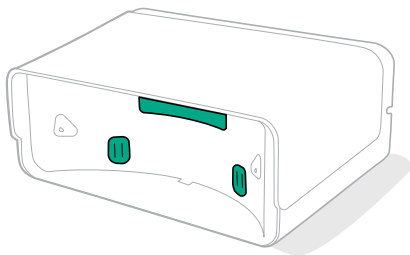


Replacing the Dirt Disposal Bag (AutoEmpty™ only)

1

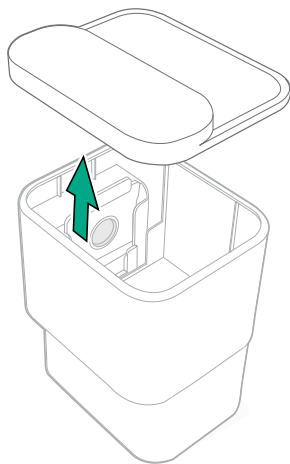


Lift up on the canister lid to open.

2

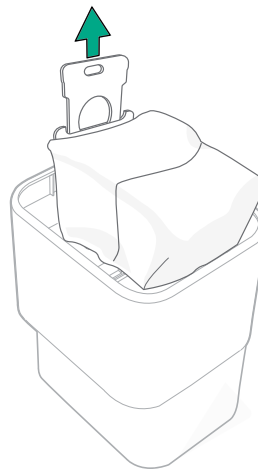


Pull up on the card to remove the bag from the canister. This will seal the bag so dust and debris cannot escape.

3

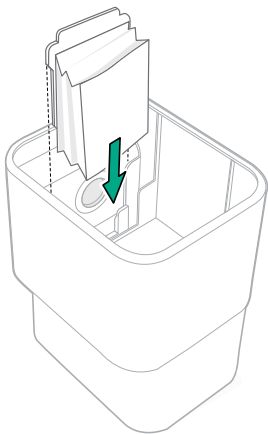


Install a new bag by sliding the card into the guide rails.

4

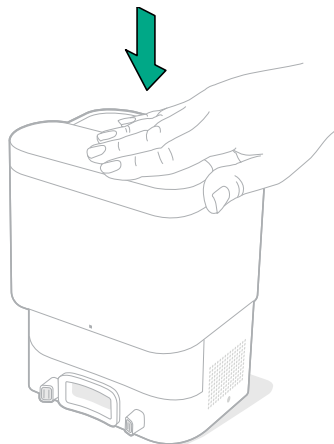

Press down on the lid making sure that it is completely closed.

Removing debris from dock filter (AutoEmpty™ only)

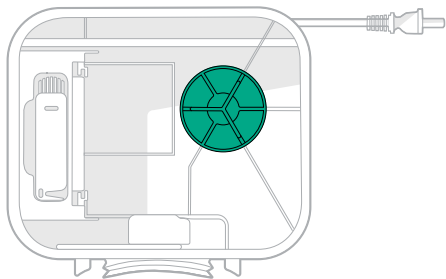

Inspect blower cover for any lint or debris build-up, and wipe with a clean dry cloth to remove debris.

Troubleshooting

Troubleshooting your Robot

Your robot will alert you if something is wrong with a voice announcement or audio alert. The Roomba® Home App will also provide notifications with steps to troubleshoot any issues.

If you are unsure if the robot is finished or paused, consult the Roomba® Home App to check on its status.

Factory Reset

To factory reset press  for 5 seconds, don't release, and then (within 5 seconds) press  +  for 5 seconds.

Battery Safety and Shipping

WARNING:

Lithium ion batteries and products that contain lithium ion batteries are subject to stringent transportation regulations. If you need to ship this product for service, travel or any other reason, you **MUST** follow the below shipping instructions.

- Battery **MUST** be turned off before shipping.
- Turn off the battery by removing the robot from the dock and holding down the  button for 10 seconds. Press the bumper in for 10 seconds while holding the  button. All indicators will then turn off.

- Package the robot securely for shipping.

If you need further assistance, please visit your Roomba® Home App, contact iRobot® Customer Care or visit global.irobot.com

Troubleshooting your AutoEmpty™ Dock

Your AutoEmpty™ Dock will tell you if something is wrong via an LED indicator on the front of the canister and through the Roomba® Home App. If the dock is not performing as expected, check the Roomba® Home App for troubleshooting steps.

LED Indicator	Common Error	How to Fix
Solid Red	Bag full or missing	Replace bag if it is full or missing. Make sure that the bag is securely inserted. If problem persists, remove any debris from the port on the back of your robot and front of the AutoEmpty™ dock.

NOTE:

This product has been equipped with a thermal protector designed to protect against damage due to overheating. If the protector operates, the motor will stop running. If this happens, unplug the unit, allow it to cool for 30 minutes, clear any obstructions from the evacuation port and evacuation tube, then plug the unit back in.

Need further assistance? We're here to help.

Download the Roomba® Home App or visit global.irobot.com for product support or to contact your local support center. If you need further assistance in the US & Canada, call the US Customer Care team at [\(877\) 855-8593](tel:8778558593)

iRobot® USA Customer Care Hours

Monday to Friday, 9AM — 9PM Eastern Time

Saturday and Sunday, 9AM — 6PM Eastern Time

Safety Information

Please see the safety guide that came with your robot, or visit global.irobot.com



©2026 iRobot Corporation. 8 Crosby Drive, Bedford, MA 01730 USA. All rights reserved. iRobot, Roomba, and PerfectEdge are registered trademarks of iRobot Corporation. AutoEmpty, AutoWash, StayClean, and PrecisionVision are trademarks of iRobot Corporation. Wi-Fi and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance. Apple and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.