

THANK YOU for purchasing the Ninja Thirsti® Ultimate Drink System



REGISTER YOUR PURCHASE

- registeryourninja.com
- Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 120V-, 60Hz
Power: 55 Watts

SharkNinja Operating LLC
US: Needham, MA 02494
1-855-427-5130
ninjakitchen.com

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

NINJA THIRSTI is a trademark of SharkNinja Operating LLC.

© 2025 SharkNinja Operating LLC.

WC3000Series_IB_REV_Mv3



WC3000 Series | Owner's Guide



IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

WARNING

To reduce the risk of injury, fire, explosion, electric shock or property damage, follow the warnings and instructions in this document.

Close supervision is needed when used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not allow children to play with the appliance.

If the product is not operating properly, visit ninjakitchen.com/support or contact SharkNinja Operating LLC for examination, repair, or adjustment.

Electrical and Fire Safety

- 1 This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not force into outlet or try to modify to fit.
- 2 Do not carry the appliance by the power cord or pull it to disconnect from electrical socket; grasp the plug and pull to disconnect. Do not operate with a damaged cord or plug, or after the appliance malfunctions.
- 3 Do not immerse cord, plugs, or body of machine in water or other liquid.
- 4 Keep the appliance and its cord out of reach of children. Do not let the power cord hang over the edge of counter. Do not use an extension cord. A short power supply cord is used to reduce the risk of children grabbing the cord or becoming entangled in it, and to reduce the risk of people tripping over a longer cord.
- 5 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Product Set-Up for Use

- 1 Do not place on or near a hot gas or electric burner, in a heated oven, on a stovetop, or close to flame. Do not leave in direct sunlight.
- 2 Use only in an upright position, on a dry, clean, flat, level, stable surface.
- 3 Do not fill water reservoir with anything other than clean non-carbonated water. Other liquid types could damage components that ensure safe operation.
- 4 Indoor use only; do not use outdoors.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

Flavor Drops

- 1 Only use Flavored Water Drops intended for this appliance.
- 2 Always dilute Flavored Water Drops through machine. Flavored Water Drops are concentrated flavor, do not consume as drops. Do not consume direct from bottle.
- 3 Do not put Flavored Water Drops in the refrigerator.

High Pressure Carbon Dioxide (CO₂) – Explosion Hazard If Heated or Damaged


- 1 Do not expose the CO₂ canister to temperatures above 105°F/40°C and keep out of direct sunlight.
- 2 Inspect the CO₂ canister and valve prior to installation for dents, punctures, or other damage. Do not use if wrap, seal, or valve appears to be damaged or tampered with. If damaged, contact ninjakitchen.com/support.
- 3 Do not use if canister or hydration system is dropped. Pressurized parts internal to the product present a risk of injury if damaged.
- 4 CO₂ canister contents under pressure: May explode if heated. Keep out of direct sunlight and do not expose the CO₂ canister to heat above 105°F/40°C.
- 5 To reduce the risk of a CO₂ leak, ONLY hand-tighten the CO₂ canister. Do not use tools. This can damage the product and the O-ring or CO₂ canister. This may result in an uncontrolled flow of CO₂ gas, causing the product to over pressurize and result in personal injury or property damage.
- 6 Do not tamper with the CO₂ canister in any way, including puncturing, incinerating, or removing the valve.

Care and Maintenance

- 1 Unplug before removing any parts to avoid accidental operation.
- 2 To prevent illness from bacterial growth in the appliance, follow all cleaning instructions in the Cleaning & Maintenance section of this Owner's Guide.
- 3 Flavored Water Drops should be disposed of 30 days after being opened. Harmful bacteria may grow in pods that have been open for a long time.
- 4 Cleaning and user maintenance shall not be made by children without supervision.

PARTS

- A Drink System
- B Control Panel
- C Flavor Carriage
- D CO₂ Door
- E CO₂ Canister
- F CO₂ Collar
- G Water Reservoir Dock
- H Water Reservoir
- I Cold Water Indicator
- J Adjustable Drip Tray Cover
- K Drip Tray

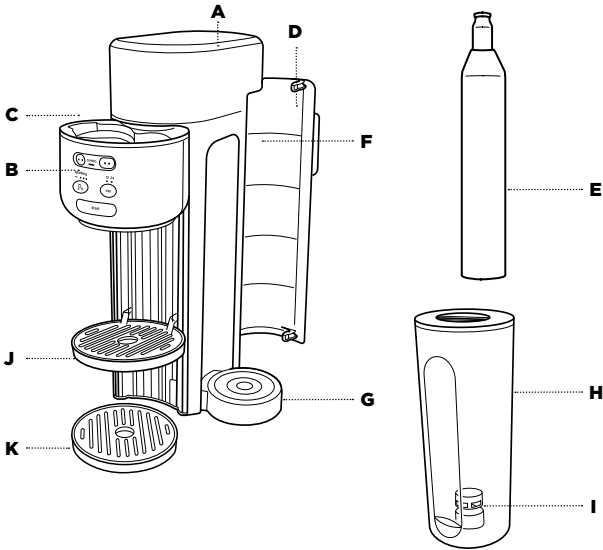

NOTE: Functions and components will vary per model.

PREPARING FOR FIRST USE

BEFORE FIRST USE

- 1 Remove and discard any packaging material, stickers, and tape from the unit.
- 2 Pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3 **NEVER** put the Ninja Thirsti® base unit in the dishwasher.
- 4 Place the Ninja Thirsti® base on a stable, flat surface and plug in.



Do not overfill the water reservoir. Fill water only to the Fill Lines.


SETTING UP YOUR NINJA THIRSTI®

SETTING UP NINJA THIRSTI® ULTIMATE DRINK SYSTEM Scan here to watch a video on setting up your Ninja Thirsti®.




INSTALLING CO₂ CANISTER

- 1 Open the CO₂ door at the back of the unit.
- 2 Pull the CO₂ collar out of the unit.

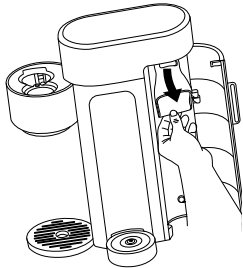

- 3 Remove tamper seal and black cap from CO₂ canister before installing.
- 4 Install canister into collar by twisting up and to the right.

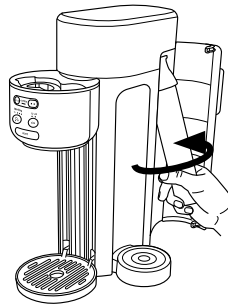

- 5 Press CO₂ canister into unit. Close the door.



Hand-tighten only. Do not use tools.


SETTING UP YOUR THIRSTI CONT.

HOW DO I KNOW CO₂ IS PROPERLY INSTALLED?


- 1 Canister cannot be turned anymore.
- 2 Carbonation is present in Sparkling drinks.
- 3 There is no hissing sound from the back of the unit when making a sparkling drink.
- 4 LEDs above sparkling level button are no longer blinking orange.

WATER RESERVOIR


- 1 Add ice to 12 oz line.



TIP: Filtered water guarantees a clean, clear taste.



- 2 Add cold, filtered water to the 48 oz line.

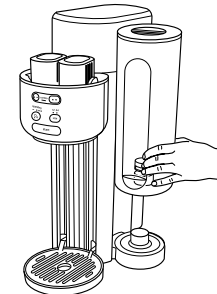


- 3 Place the Water Reservoir onto the Reservoir Dock.


TIP: Store Water Reservoir in fridge when not in use.

INSTALLING THIRSTI FLAVORED WATER DROPS


- 1 Remove safety seal.

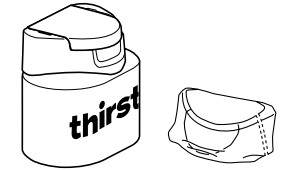

- 2 Flip the cap into the open position. The cap will click into place on the back side of the Flavored Water Drops bottle.

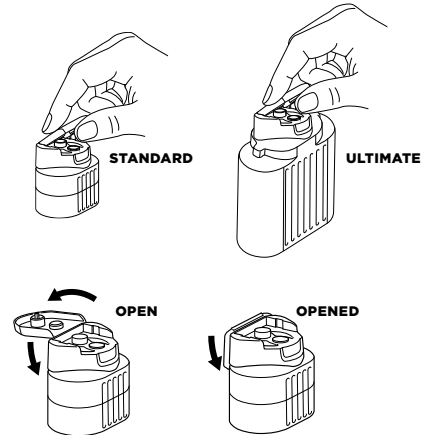

- 3 Turn the Flavored Water Drops bottle upside down and insert it into the Flavor Carriage, nozzle down. Gently push down on the bottom of the Flavored Water Drops bottle until you hear a click.

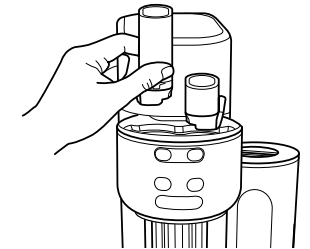

- 4 Repeat with a second Flavored Water Drops bottle if a combo beverage is desired.

USING THE CONTROL PANEL

CO₂ LOW WARNING

When the lights above the sparkling strength button (🍻) turn solid orange, there is approximately 25% CO₂ remaining, or enough for approximately 25 12 oz drinks. The lights above the sparkling strength button (🍻) will remain orange until a new CO₂ canister is installed and the indicator is reset. Once a new CO₂ canister has been installed, reset the indicator by pressing and holding the sparkling strength button (🍻) for 3 seconds or until the lights above the button turn from orange to white.


NOTE: Only reset the indicator when a new canister has been installed.

NOTE: Only use Ninja Thirsti® CO₂ Canisters for best carbonation results.

NO CO₂ ERROR

When the lights above the sparkling button blink orange, the unit is not detecting any CO₂ canister installed. Follow "Installing CO₂ Canister" instructions to resolve the error.


USING THE CONTROL PANEL

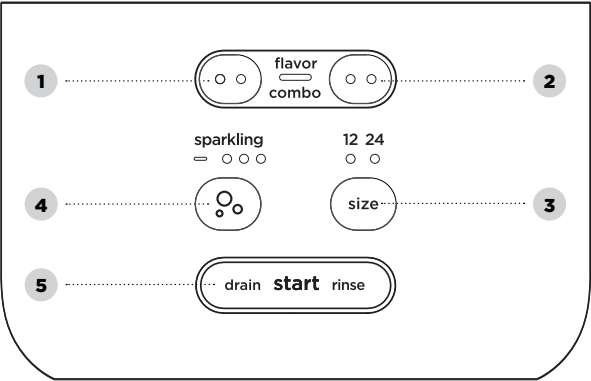

- 1 Flavor 1 Strength Button
- 2 Flavor 2 Strength Button
- 3 Size Button
- 4 Sparkling Strength Button
- 5 Start Button

REPLACING CO₂ CANISTER

- 1 Open the CO₂ door at the back of the unit and swing out the CO₂ canister.
- 2 Slowly twist the CO₂ canister to the left until it releases from the unit.
- 3 Follow the installation directions to install a new CO₂ canister.
- 4 Press and hold the sparkling strength button (🍻) for 3 seconds. When the lights above the button illuminate white or a beep is heard, the CO₂ indicator has been properly reset.

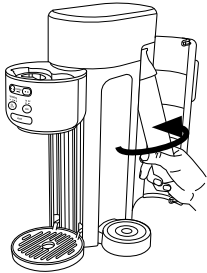

NOTE: Only use Ninja Thirsti® CO₂ Canisters.

GET STARTED DRINK MAKING

- 1 Press (🍻) button to toggle between Still, Low, Medium or High sparkling levels.
- 2 Press (size) button to toggle between 12 oz or 24 oz for individual dispense volumes.
- 3 Press either Flavor Combo button (🍷 🍹) to toggle through No Flavor (0 LEDs Illuminated), Classic Flavor (1 LED Illuminated), or Bold Flavor (2 LEDs Illuminated) strengths. Select both for Combo to illuminate.
- 4 Press (start) button to start drink making.
- 5 Once the beverage has completely dispensed, the start button LEDs will turn off and an audible end tone will be heard.

NOTE: Run a Chill Cycle for an increased carbonation experience. A Chill Cycle can be completed by making a 12 oz still drink with ice cold water. This cools down the machine to produce a colder, bubblier beverage.

THIRSTI FLAVOR POD NUTRITION AND DOSING

THIRSTI FLAVOR POD DOSING CHARTS

SELTZER FLAVOR DOSING (mL)*			
Sizes (oz)		12	24
Single (Classic Strength)		3	6
Single (Bold Strength)		4.2	8.4
Combos (Classic Strength)		1.65	3.0
Combos (Bold Strength)		2.1	4.2

FRUITI CHILL & ZERO SODA FLAVOR DOSING (mL)*			
Sizes (oz)		12	24
Single (Classic Strength)		3.6	7.2
Single (Bold Strength)		5.0	10
Combos (Classic Strength)		1.8	3.6
Combos (Bold Strength)		2.5	5

FRUITI CHILL (VITAMINS B3, B6, B12) DOSING (% DV)*			
Sizes (oz)		12	24
Single (Classic Strength)		10%	20%
Single (Bold Strength)		14%	28%
Combos (Classic Strength)		5%	10%
Combos (Bold Strength)		7%	14%

FRUITI CHILL+CAFFEINE & ZERO SODA DOSING (mg CAFFEINE)*			
Sizes (oz)		12	24
Single (Classic Strength)		50	100
Single (Bold Strength)		70	140
Combos (Classic Strength)		25	50
Combos (Bold Strength)		33.3	66.6

SODA FLAVOR DOSING (mL)*			
Sizes (oz)		12	24
Single (Classic Strength)		14.00	28.00
Single (Bold Strength)		16.8	33.6
Combos (Classic Strength)		7.00	14.00
Combos (Bold Strength)		8.4	19.60

NOTE: When making a combo drink with two different Flavored Water Drops, each flavor will dose at 50% ensuring the perfect combo drink every time. When boosting flavor from Classic strength (single LED) to Bold strength (two LEDs), flavor dispense increases by 20% for Ultimate Flavored Water Drops and 40% for standard Flavored Water Drops.

***DISCLAIMER:** The above tables are target dosing and may change depending on unit variation. Number of flavor levels per model may vary. Soda flavors vary in caffeine content, and not all Fruiti Chill flavors contain B Vitamins. Review Flavored Water Drops labels for nutrition information.

HELPFUL TIPS

SYSTEM TIPS

- **NEVER** put the water reservoir or Flavored Water Drops in the freezer.
- **ALWAYS** store water reservoir in the refrigerator for cold, ready-to-carbonate water.
- Set your refrigerator to 37°F to ensure water will reach an optimally cold temperature.
- Run a Chill Cycle for best carbonation experience. A Chill Cycle can be completed by making a 12 oz still drink with ice cold water. Before dispensing ensure Cold Water Indicator is bright blue.


BEVERAGE MAKING TIPS

- The colder the water, the stronger the carbonation.
- Higher carbonation enhances the sweetness and aroma of the Flavored Water Drops.
- Each 60 L CO₂ canister will make 50–100 12 oz drinks depending on level of carbonation.

MONTHLY CLEANING AND MAINTENANCE

FLAVOR CARRIAGE CLEANING

- 1 Create a cleaning solution by filling your water reservoir up to the 12 oz line with vinegar and water up to the 24 oz line.
- 2 Place the water reservoir on the docking station.
- 3 Place a 24 oz container on the cup tray.
- 4 Start the Clean Cycle by holding the  button for 5 seconds.
- 5 Once the Clean Cycle is complete, empty any leftover cleaning solution and rinse the water reservoir.
- 6 Run another Clean Cycle with fresh water to rinse the system before use.

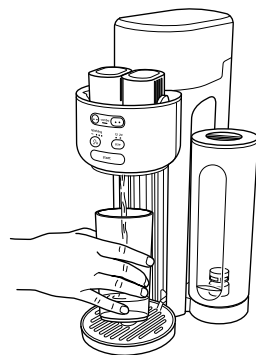


NOTE: A Clean Cycle takes approximately 15 minutes.

IMPORTANT: DO NOT remove the vessel at any time during the Clean Cycle.

THIRSTI SYSTEM DEVICE:

To maintain optimal hygiene and minimize the risk of contamination, it is recommended to clean the product every 4–5 days. More frequent cleaning may be necessary during periods of heavy use or when environmental conditions—such as elevated temperature and humidity—favor microbial growth. Use only warm, soapy water, a damp towel, soft foam brush, or diluted white vinegar for cleaning according to the instructions.

We recommend cleaning inside the reservoir with a cotton-type swab or similar item. Use of other materials or tools may damage the product and void warranty.

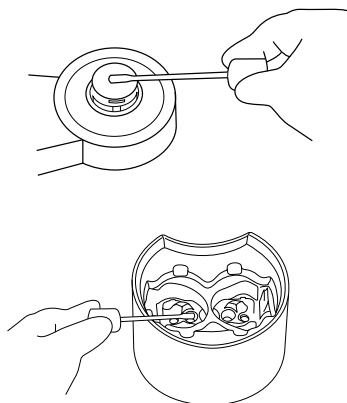

TROUBLESHOOTING GUIDE

HOW DO I TURN MY NINJA THIRSTI® SYSTEM OFF?

- The Thirsti System will enter a sleep mode after 10 minutes of no use. To wake the system, press any button.
- To completely shut down the Thirsti System, unplug the unit.

WHY IS MY UNIT NOT CARBONATING?

- Ensure CO₂ canister is fully installed inside the CO₂ door. If canister can still turn to the right, continue to twist until it can no longer turn.
- Only use Ninja Thirsti® CO₂ Canisters as other screw in-style canisters might not be compatible.

HOW DO I ENTER ULTRA LOW SPARKLING MODE?

- Use Ultra Low Carbonation to make a very lightly carbonated drink. To initiate Ultra Low sparkling, simultaneously hold down the  button +  button. A single Sparkling LED will blink to confirm Ultra Low Sparkling state has been entered. Ultra Low Sparkling will turn off when another Sparkling level is chosen or the unit is unplugged and plugged back in.

WHY ARE THE LIGHTS ABOVE THE BUTTON ORANGE?

- The lights above the  button turn orange to indicate low CO₂. When the lights above the button turn orange, there is enough for approximately 25 12 oz drinks.
- After installing a new canister, reference "Replacing CO₂ Canister" for instructions on resetting the CO₂ Low indicator.

DID YOU END YOUR CYCLE BY PRESSING START?

- If you pressed the start button during a cycle, the product will prompt you to drain. See below for instruction on completing a Drain Dispense.

WHY IS "DRAIN" SHOWING ON MY UNIT?

- If the last dispense cycle was interrupted, then water must be drained from the unit. Place a cup under the nozzle and press the start button to allow a Drain Dispense to complete. The unit must run a Drain Dispense before another drink can be made. It will take approximately 30 seconds to complete the Drain Dispense.

WHY WON'T MY UNIT RUN?

- Ensure the unit is plugged into a working outlet. The display panel will illuminate when power is detected.
- Ensure water has been added to the water reservoir and there is no blockage on the docking station.

BEVERAGE DISPLAY LIGHT IS BLINKING.

- An error has occurred. Unplug the unit and reseal the water reservoir, ensuring it is filled. Wait 30 seconds before plugging back in. If the issue persists, contact Ninja Customer Support at 1-855-427-5130.

NO OR LOW FLAVOR IN DRINK.

- If you are experiencing no or low flavor in your drinks, please first remove your Flavored Water Drop(s) and confirm if they have flavor left in them. If your Flavored Water Drop(s) do still have flavor left but your finished drinks have no or low flavor, please contact customer service.

WHY IS WATER SPLATTERING?

- Some splatter is normal. Elevate the cup tray, when possible, to reduce the distance between the cup and dispense outlet.

WHY ARE MY SIZE LEDS BLINKING ORANGE?

- This is the No Water Error. The unit has detected that your Water Reservoir is either not installed or does not have enough water to complete the dispense. Refill and dock your Water Reservoir and press Start once to clear the error. You will see the Drain LED on the Start button illuminate; once Drain is complete, the End Chime will sound and you can begin the drink making process again!

QUESTIONS?

- 1-855-427-5130

ACCESSORIES

PRODUCT REPLENISHMENT



CO₂ REPLENISHMENT

Scan the QR code and sign up for the Thirsti CO₂ Refill Club. Ship back 2 empty canisters and receive 2 new, discounted canisters within 3-5 days.

EXPLORE NEW FLAVOR PODS



Scan the QR code or visit ninjakitchen.com to explore a variety of flavors! Sign up to get notified of new flavor releases or subscribe to receive your favorite flavors.

Shark NINJA

ONE (1) YEAR LIMITED WARRANTY

NJA_1_YR_IB_LMTD_WRNTY_US_ENG_BEVERAGE

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.
California Residents Only: The One (1) Year Limited Warranty period begins on the original date of delivery or pickup.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at ninjaaccessories.com.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit ninjakitchen.com/support for product care and maintenance self-help. Our Customer Service Specialists are also available at **1-855-427-5130** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at registeryourninja.com and have the product on hand when you call.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$20.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call **1-855-427-5130** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at registeryourninja.com and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.